

## OPERATION, PREVENTIVE MAINTENANCE AND PARTS SUPPORT MANUAL

### **FOR**

# MAXIFORCE® G2 AIR LIFTING BAG SYSTEM

**09 NOVEMBER 2020** 

PN 22-890800G2

Phone: 815.469.3911 Fax: 815.469.7748 www.paratech.com E-mail: paratech@paratech.us







### LIST OF EFFECTIVE PAGES

Original031 March 2014  Total number of pages in this publication is 54 consisting of the following:  Page *Change Page *C		
s publication is 54 co	nsisting of the following:	
Change	Page	*Change
No.	No.	No.
0	1-1 through 1-9	2
0	1-10 blank	0
0	2-1 through 2-15	1
0	2-16 blank	0
0	3-1 through 3-3	1
0	3-4 blank	0
1	4-1 through 4-13	1
	s publication is 54 co  Change No. 000000	s publication is 54 consisting of the following:  Change Page No. No. 0 1-1 through 1-9 0 1-10 blank 2-1 through 2-15 0 2-16 blank0 3-1 through 3-3 3-4 blank

Date of original pages is:

<sup>\*</sup> Zero in this column indicates an original page.

### **VALIDATION CERTIFICATE**

### TECHNICAL MANUAL TITLE

OPERATION, PREVENTIVE MAINTENANCE AND PARTS SUPPORT MANUAL FOR MAXIFORCE® G2 AIR LIFTING BAG SYSTEMS.

TECHNICAL MANUAL NUMBER	DATE
P/N 22-890800G2	09 NOVEMBER 2020
CONTRACT/NO.	•

### I – VALIDATION

Except as stated in II, the technical manual identified above has been satisfactorily validated in accordance with all requirements of the applicable contract. The technical manual is hereby certified to be accurate and complete, and the information, instruction, text, and illustration conform in all respects to the applicable general and detailed specifications.

### II - EXCEPTIONS

**EXCEPTIONS** 

**NONE** 

**AUTHORIZED BY** 

Kenneth Nielsen, Chief Operating Officer

Paratech Incorporated 1025 Lambrecht Drive Frankfort, IL 60423

SIGNATURE OF PUBLICATIONS QUALITY ASSURANCE OFFICER	DATE
SIGNATURE ON FILE	

### **Change Record**

Change No.	Date	Title or Brief Description	Signature of Validating Officer
1	14 JAN 2016	PAGE 1-9; UPDATED TABLE 1-1 MAX AIR CAPACITY DATA	SIGNATURE ON FILE
2	09 NOV 2020	PAGE i; UPDATED CONTROL EQUIPMENT P/N's PAGES 1-1 $\rightarrow$ 1-9; UPDATED CONTROL EQUIPMENT DESCRIPTION IN CHAPTER 1 PAGES 2-1 $\rightarrow$ 2-4; UPDATED OPERATIONAL PROCEDURES IN CHAPTER 2 PAGES 3-1 $\rightarrow$ 3-3; ADDED SAFETY COUPLING INSPECTION PROCEDURE IN CHAPTER 3 PAGES 4-1 $\rightarrow$ 4-11; UPDATED PARTS LISTS	SIGNATURE ON FILE

QAP20/003/B

### **FOREWORD**

This technical manual conforms to Military Specifications MIL-M-38784 General Style and Format Requirements, MIL-M-7298 Commercial Equipment Technical Manual and MIL-M-15071 Equipment and Systems Content Requirements for Technical Manuals. The manual contains description, operating instructions, theory of operation, scheduled maintenance recommendations and parts lists for MAXIFORCE® G2 Air Lifting Bag Systems manufactured by Paratech Incorporated, 1025 Lambrecht Road, Frankfort, Illinois 60423-7000.

All pertinent data relative to the MAXIFORCE® G2 Air Lifting Bag Systems is contained herein without specific reference to other publications. Refer to the table of contents for the arrangement of the contents within this publication.

This manual consists of one volume arranged in four chapters as follows:

Chapter 1 - General Information and Safety Precautions

Chapter 2 - Operation

Chapter 3 - Scheduled Maintenance

Chapter 4 - Parts List



### TABLE OF CONTENTS

### LIST OF FIGURES

Chapter/Para	Title	Page	Figu	re	Title	Page
1 GENERAL I FIRST PRO 1-1 Safety 1-2 Scope O 1-3 Arrang 1-4 Equipm 1-5 Interrel 1-6 Equipm 1-7 Referer 1-8 Equipm Docume	NFORMATION AND SAF OCEDURES Precautions. Of Manual. ement. nent Function. ationship of Components. nent Description. nee Data. nent, Accessories and	FETY 1-11-11-11-11-11-31-7	1-1 1-2 1-3 1-4 1-5 1-6 1-7 1-8 1-9	MAX MAX G2 Pr G3 Pr Dual ' Manu Air Cy Hoses G2 In	IFORCE® G2 Air Lifting Bag System IFORCE® G2 Lift Bag	1-2 1-3 1-4 1-5 1-6 1-6 1-6
2-1 Introdu 2-2 System 2-3 Compo to Infla 2-4 Normal Inflatio 2-5 Changi 2-6 Normal Deflati 2-7 Compo Deflatic 2-8 Applica	Operating Procedure During In Ing Air Cylinders I Operating Procedure During Ition In Disconnection After	2-12-12-1 ng2-32-4 ng2-42-4	4-2	Lift B Correct Using Object Air He Air He Rep Dual 'CGA	et Method of Safety Cribbing/Bracing ag Stacking and Tandem Combinations. et Method for Inflating Stacked Lift Bag Two Lift Bags to Lift Cylindrical eets ose Nipple Replacement ose Quick Connect Coupling lacement  'Deadman' 150 psi ALB Controller G3 G3 Pressure Regulator G3 Pressure Regulator	. 2-7 (s2-8 2-8 3-2 3-2
3-1 Genera 3-2 Prevent 3-3 Post Op Mainte 3-4 Storage  4. PARTS LIST 4-1 Introdu 4-2 List of 4-3 Parts L	ANCE AND STORAGE  I	3-1 3-1 3-1 3-3 3-3 4-1 4-1 4-1				
4-5 Explod	ed Assemblieslers and Regulators  LIST OF TABLES					
Data 4-1 List of Major 4-2 MAXIFORC	Title  E® G2 Air Lifting Bag Reconstruction  r Components  E® G2 Air Lifting Bag Systems List	1-7 4-1 stem				

### SAFETY FIRST

Personnel safety and the prevention of equipment damage were primary considerations during the design and expected utilization of MAXIFORCE® G2 Air Lifting Bag Systems. When MAXIFORCE® G2 Air Lifting Bag Systems are properly used in combination with good common sense, an extremely safe method of applying force is realized.

Although the following safety first list is quite extensive, the majority of the precautions are just good common sense for any personnel qualified in the use of lift bags. However, some of the precautions are not obvious and Paratech strongly recommends that all operating/assisting/maintenance personnel read and understand the complete safety first procedures in order to ensure personnel and equipment safety.

Since there are four distinct operational phases of lift bag use: Prior to Inflation, During Inflation and While Inflated, During Deflation, and After Removal, the safety first list is charted to reflect these applications. As shown in the following table, during each operational phase, each safety procedure may be required Always (A), If Time Permits (ITP), or Depending Upon Application (DUA).

SAFETY FIRST PROCEDURE	PRIOR TO INFLATION	DURING INFLATION AND WHILE INFLATED	DURING DEFLATION	AFTER REMOVAL
Regardless of the condition of lift bag use, SAFETY FIRST is primary to prevent injury or death and/or equipment damage.	A	A	A	A
All personnel at the immediate lift bag site must be trained and qualified.		A	A	
All personnel at the immediate lift bag site must be properly suited up (protective clothing, helmet, eye protection, gloves, footwear, etc.) at all times	ITP	A	A	
Never exceed the maximum inflation pressure marked on the lift bag. (150 psi/10.3 bar)		A		
Do not handle hoses or lift bags while the system is pressurized.		A	A	
Do not connect or disconnect system components when the system is pressurized. The only exception is disconnection of a safety in-line relief valve from a controller. Refer to the technical manual for multiple lift bag use.		A	A	

Observance of the following safety first procedures will assure the safe and efficient utilization of the MAXIFORCE & G2 Air Lifting Bag System

SAFETY FIRST PROCEDURE	PRIOR TO INFLATION	DURING INFLATION AND WHILE INFLATED	DURING DEFLATION	AFTER REMOVAL
Always be on the opposite side of any expected movement.	A	DUA	A	
Always stand clear of a load that is only supported by lift bag(s). Never be below a lift bag supported load that has no blocking or cribbing for positive support. Always "Lift an inch, crib an inch"	A	A	A	
Use blocking, shoring and cribbing where ever possible to support and sustain loads.	A	A	A	
Use locking rings on couplings to prevent release of air pressure due to accidental disengagement of system components.	A	A	A	
Always center load on lift bag or it may be violently ejected from under load during pressurization.	DUA	A	A	
Be extremely careful to stabilize, as much as possible, unstable (off-center) loads.	A	A	A	
Be careful that hoses are not kinked.	A	A	A	A
Check visually that equipment is not damaged (scuffs, kinks, tears, ply separation, etc.) and audibly for the leakage of air.	ITP			A
Never stack more than two lift bags on each other during operation.	A			
If required to stack two lift bags for increased height, always place smaller bag centered on the top.	A			
Use proper sized lift bag(s) for the load conditions encountered.	A			
During transport of lift bags, carry in such a way so as to protect the inflation nipple even though the nipple is recessed. Use two men on large lift bags over 30 pounds (14kg).	A			A
Protect bag with thermal blanket, plywood, etc. whenever a lift bag will contact a surface in excess of 150°F (65°C).	ITP			A (storage)
Never use a lift bag where contact temperatures are in excess of 220°F (105°C).	A			A (storage)

SAFETY FIRST PROCEDURE	PRIOR TO INFLATION	DURING INFLATION AND WHILE INFLATED	DURING DEFLATION	AFTER REMOVAL
Never work in the dark. Use flash lights or flood lights to provide shadow-free illumination of work area.	ITP	ITP	ITP	
Inflate only enough to achieve desired lift.		A		
If force must be applied to a small diameter or small area object, always use plywood, rubber mud flaps, etc. between the lift bag and the object to distribute the load more evenly over the lift bag surface. Otherwise safe maximum lifting force cannot be applied.		A		
Always evaluate the condition prior to execution in order to determine which size lift bag to use and where to apply it to achieve the desired result.	ITP			
Always inflate a lift bag slowly to prevent possible shifting of load. Stop if load begins to shift, stabilize and block load before continuing.		A		
Be sure all valves between air source and lift bag(s) are in a closed position before turning on air source to system. This will prevent an uncontrolled lift. Also open air supply source slowly to prevent damage to regulator.	A			
Never lift with a lift bag directly in contact with sharp or pointed objects that may puncture, abrade or otherwise damage the lift bag.	DUA			
Always have 3 points of contact to ensure a stable foundation when lifting unsecured loads.	DUA			
Undue haste could result in injury to personnel and damage/render the lift bag system useless.	A	A	A	A
Keep as far away as possible from lift bag(s). Hose length governs this safety first procedure.		A	A	
Never inflate a lift bag over 30 psi (2 bar) when not under load.				A (maintenance)

### CHAPTER 1 GENERAL INFORMATION

### 1-1 **SAFETY PRECAUTIONS**

Refer to the Safety First procedures Chapter 1, General Information and Safety Precautions for the procedures to be observed to assure safe and efficient utilization of MAXIFORCE® G2 Air Lifting Bag Systems.

### 1-2 **SCOPE OF MANUAL**

This technical manual provides instructions for the operation, preventive maintenance and parts support for MAXIFORCE® G2 Air Lifting Bag Systems manufactured by Paratech Incorporated, 1025 Lambrecht Rd, Frankfort, Illinois 60423-7000.

### 1-3 **ARRANGEMENT**

Refer to the Table of Contents for arrangement of the subject matter in this manual.

### 1-4 **EQUIPMENT FUNCTION**

- 1-4.1 MAXIFORCE® G2 Air Lifting Bag Systems are multi-application, portable inflation systems used for lift and displacement of heavy objects, up to 178,400 lbs (80,920 kilograms), while requiring less than 1 inch (25 centimeters) of bag insertion clearance. Total capable lift (utilizing two stacked bags) is 40 inches (100 centimeters). Inflation may be obtained from any air source (self-contained compressed air cylinder, air compressor, truck air brake system, building compressed air system, foot pump, etc.) capable of supplying 150 psi (10.3 bar) pressure.
- 1-4.2 MAXIFORCE® G2 Air Lifting Bag Systems are designed for use in emergency situations such as building collapse, structural containment, vehicular extrications, industrial entrapment, and excavation collapse and containment.

- 1-4.3 In addition to use during emergency situations, MAXIFORCE® G2 Air Lifting Bag Systems are also used effectively used for:
- a. Preventive and/or corrective maintenance procedures where positioning and aligning heavy equipment and machinery in mills, manufacturing facilities and maintenance shops is required such as removing wheels, pulleys and gears from large machinery.
- b. Lifting or shifting pipelines requiring welding and maintenance.
- c. Breaking out granite and marble blocks and slabs in quarrying operations.
- d. Re-railing railroad and mining cars, pre-stressing support columns, general maintenance requiring lifting in rail, mining, underground and subway work.
- e. Lifting operations underwater or on unstable, soft ground (mud, sand, snow, strewn debris, etc.) where conventional jacking equipment tends to sink.
- f. Since the lift bags contain no spark producing parts, they may also be used safely in explosive environments.

#### 1-5 INTERRELATIONSHIP OF COMPONENTS.

Refer to figure 1-1 for the interrelationship of the six basic components (air source, G3 pressure regulator, G3 controller, safety inline relief valve, interconnecting hose, and G2 lift bag) comprising MAXIFORCE® G2 Air Lifting Bag Systems and their relative sizes.

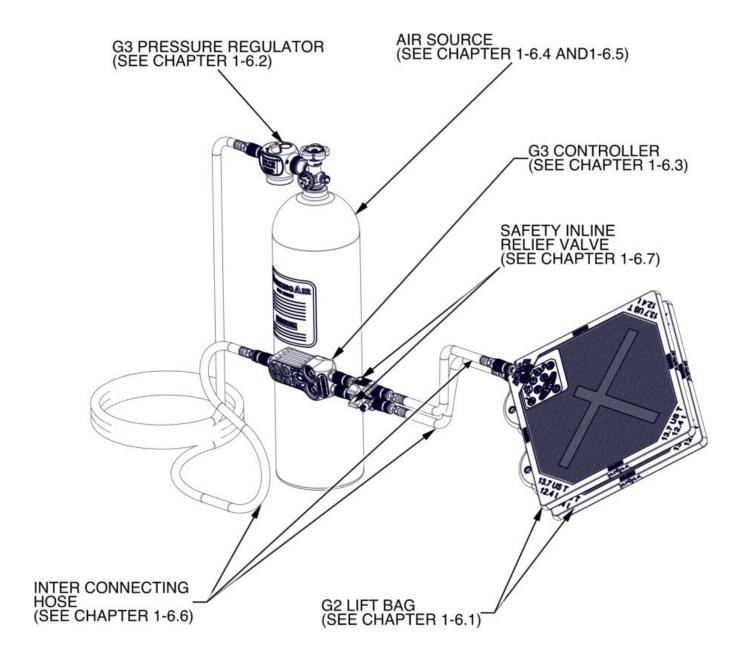


Figure 1-1. MAXIFORCE® G2 Air Lifting Bag System

For further component explanation, see the chapter shown under the component within figure 1-1. See

Chapter 2 "OPERATION" for component connection and system operation.

### 1-6 **EQUIPMENT DESCRIPTION**

#### 1-6.1 **G2 LIFT BAG**

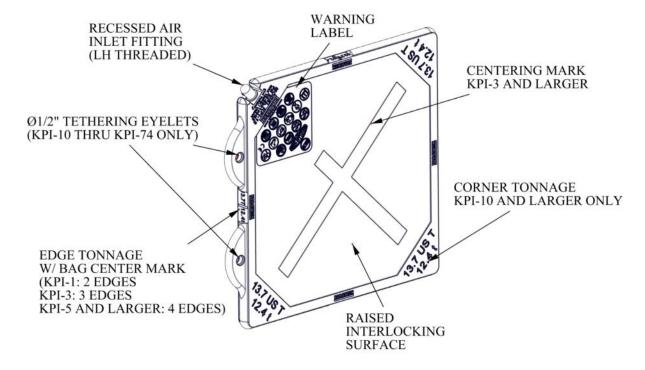


Figure 1-2. MAXIFORCE® G2 Lift Bag

MAXIFORCE® G2 Lift Bags (figure 1-2) are composite items fabricated from neoprene, reinforced with six layers (three per side) of Kevlar reinforced fabric for strength and rigidity even at full inflation pressure of 150 psi (10.3 bar).

All Lift Bags incorporate molded raised interlocking surfaces designed for maximum friction and holding capability.

All air bags, except the KPI-1, have a bright yellow "X" molded into each side to provide high visibility during pre-inflation centering.

The left hand threaded air inlet fitting is recessed to help protect the fitting from damage. A tethered nipple cap is provided to protect from contamination and also to help protect the outside surface of the fitting. The tether is to prevent accidental loss of the cap.

Tethering eyelets are molded into larger air bags to be


used to assist in transport and insertion positioning prior to inflation.

Corners and edges has the maximum tonnage molded into the bag and filled with bright yellow silicone adhesive to help identify and quickly select an air bag in low light situations. The edge tonnage has a center mark to identify the center of the bag in low insertion applications where the center of the bag cannot be seen.

A yellow, symbol driven, warning label is permanently molded into the bag surface for quick reference and reminders of safety related warnings and information.

Each Lift Bag is proof tested at twice the operating (full inflation) pressure and has a minimum burst pressure of four times the operating 150 psi (10.3 Bar) pressure. Refer to Table 1-1 for a summary of the technical data for each MAXIFORCE® G2 Lift Bag.

### 1-6. 2 **G3 PRESSURE REGULATORS.**

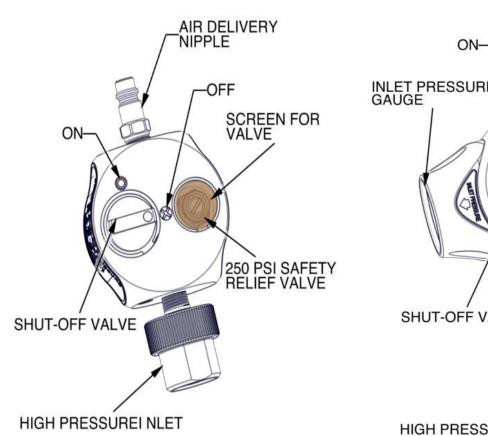

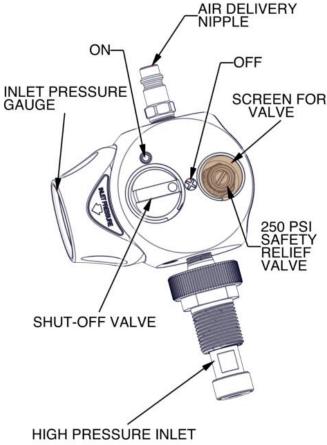


Figure 1-3 CGA G3 Pressure Regulator

The G3 pressure regulators (figures 1-3 & 1-4) reduces inlet pressure of up to 5,500 psi (379 bar) to 215 psi (14.8 bar). The pressure regulator is designed to mate with a CGA-346/347 adapter fitting (figure 1-3). Other fittings are available such as CGA-580 (nitrogen cylinder adapter), DIN nipple (figure 1-4) and nut assembly and British nipple and knob assemblies are also available. The DIN regulator includes an input pressure gauge.

The G3 pressure regulators incorporates a piston sensor and soft seated main valve to provide bubble tight service. G3 pressure regulators are pre-set from the factory to an optimal outlet pressure of 215 psi (14.8 bar) for simplified set-up and operation.

Figure 1-4 DIN G3 Pressure Regulator

The G3 pressure regulator will operate with any breathing air. When using any gaseous media, it is necessary to remove moisture to prevent "icing"; a condition that occurs at high expansion ratios during regulator operation. A 10 micron internal filter is incorporated in the pressure regulator. Coarser filters are available if excessive contamination is a problem.

The shut-off valve is either opened to permit regulated delivery air to pressurize the lift bag system or closed to prevent (seal off) regulated delivery air.

A 250 psi (17.2 bar) safety relief valve is installed to prevent delivery pressures exceeding 250 psi (17.2 bar).

### 1-6.3 **G3 CONTROLLER**

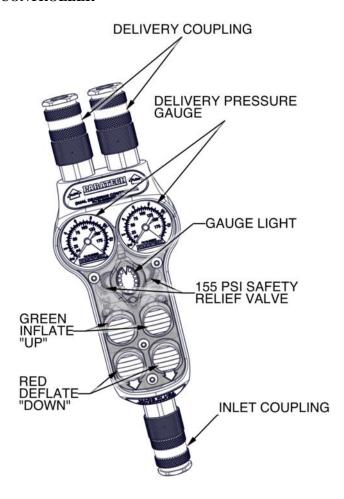


Figure 1-5. Dual "Deadman" 150 psi ALB Controller G3

The dual "deadman" 150 psi ALB controller G3 (figure 1-5) is single input/dual output that incorporates locking, quick connect safety couplings to prevent accidental disconnection during use.

Control buttons permit regulated air pressure to inflate the lift bag or deflate to relieve system air pressure to collapse the lift bag. Green button(s) inflates "UP" and the red button(s) deflates "DOWN" by activating control valve assemblies beneath their respective side of the button.

Delivery gauges are provided to monitor the air pressure applied to the lift bag(s). Gauges are surrounded by an aluminum housing to help protect them from damage.

155 psi (10.7 bar) non-adjustable safety relief valves are installed into the controller to limit the applied air pressure and prevent over pressurizing. Due to the tolerance associated with the mechanical vent relief valves; controllers are set 5 psi (0.4 bar) higher to 155 psi (10.7 bar) to insure the system always gets to 150 psi (10.3 bar) operation.

The dual "deadman" controller has a second set of controls that are identical yet independent from the first set so two air bags can be controlled at the same time yet independently. If using the dual "deadman" controller in a single lift bag operation, either set can be used.

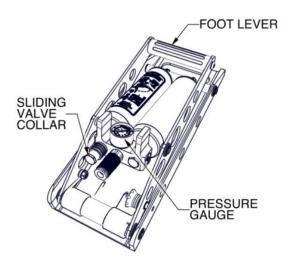


Figure 1-6. Manual Compressor

1-6.4 MANUAL COMPRESSOR. The manual compressor (figure 1-6) is a foot/hand lever operated compressor used to deliver pressurized air to the air bag. A sliding valve collar permits isolating one of the two cylinders thereby increasing the delivered pressure and decreasing the delivered volume by a factor of 2.

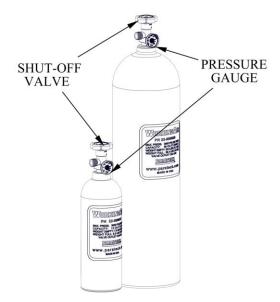


Figure 1-7. Air Cylinder

1-6.5 **AIR CYLINDER.** The air cylinder (figure 1-7) is used to store compressed air for use on the air bag. The shut off valve that permits or prevents the flow of compressed air to the G2 regulator

The pressure gauge measures the amount of pressure within the tank.

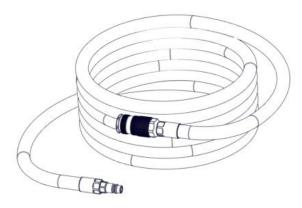


Figure 1-8. Hoses

1-6.6 <u>HOSES</u>. Hoses (figure 1-8) are used to convey air from the air supply source to the lift bag(s). All hoses are equipped with locking, quick connect, safety fittings to prevent their accidental disconnection or improper connection. The locking ring must be turned up against the release ring during operation to prevent system leaks.

All hoses are general purpose Ø3/8" inside diameter PVC (vinyl) core, single spiral poly yarn braid reinforced and a PVC abrasion resistant cover.

The service temperature range is  $-15^{\circ}$ F to  $+150^{\circ}$ F ( $-25^{\circ}$ C to  $+65^{\circ}$ C). All hoses have a working pressure of 300 psi (20.7 Bar) with a 4:1 safety factor.

Available hose lengths are 16 foot (5meter), 32 foot (10 meter) and 50 foot (15 meter). Available color in all lengths are red, yellow, blue, green, grey, and black.

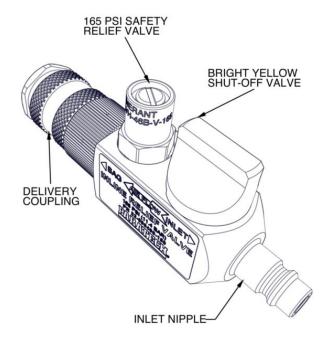


Figure 1-9. G2 Inline Relief Valve

1-6.7 **G2 INLINE RELIEF VALVE.** The G2 safety inline relief valve (figure 1-9) is designed to keep MAXIFORCE® G2 lift bags fully and properly inflated when the lift bag(s) are; 1. Disconnected from the controller and 2. When excess pressure must be automatically relieved due to shifting loads and/or temperature changes.

The safety inline relief valve consists of an air inlet and outlet with locking ring quick connect safety fitting. The locking ring must be turned up against the release ring during operation to prevent system leaks. A shut-off valve is used to isolate the lift bag and a non-adjustable safety relief valve designed to relieve lift bag pressures in access of 165psi. Inline relief valves for 150 psi are easily identified by a bright yellow shut off knob.

1-6.8 **FITTINGS.** A variety of adapters, couplings and air fittings are available to permit alternate air sources to inflate the MAXIFORCE® G2 lift bag(s) or enable various air powered tools and accessories to be equipped with the same fittings permitting convenience of operation and/or combining equipment resources such as hoses, regulators, self-contained compressed air cylinders, etc.

All fittings include a quick connect safety couplings. The locking ring must be turned up against the release ring during operation to prevent system leaks.

1-7 **REFERENCE DATA.** Reference data pertaining to MAXIFORCE® G2 lift bags system components are summarized for quick reference in Tables 1-1 and 1-2.

### 1-8 **EQUIPMENT, ACCESSORIES, DOCUMENTS.**

- 1-8.1 **EQUIPMENT SUPPLIED.** Data pertaining to the dimensions and weight of MAXIFORCE® G2 lift bags are presented in Table 1-2.
- 1-8.2 **ACCESSORIES.** Accessories used in conjunction with MAXIFORCE® G2 lift bag systems are listed with sufficient descriptive information regarding their use and application in Chapter 4, Parts List.
- 1-8.3 **<u>DOCUMENTS.</u>** No documents other than this publication are required as supporting literature for MAXIFORCE® G2 lift bag system.

### Table 1-1. MAXIFORCE G2 Lift Bag Reference Data LIFT BAG CONSTANTS:

Base Material.	Neoprene
Reinforcing Material	
Number of Reinforcing Layers (Each Side)	3
Surface Type	Molded Non-Slip
Short Term Temperature Range °F (°C)	
Continuous Duty Temperature Range °F (°C)	40 (-40) to +150 (+65)
Maximum Working Pressure PSI (Bar)	150 (10.3)
Test Pressure PSI (Bar)	

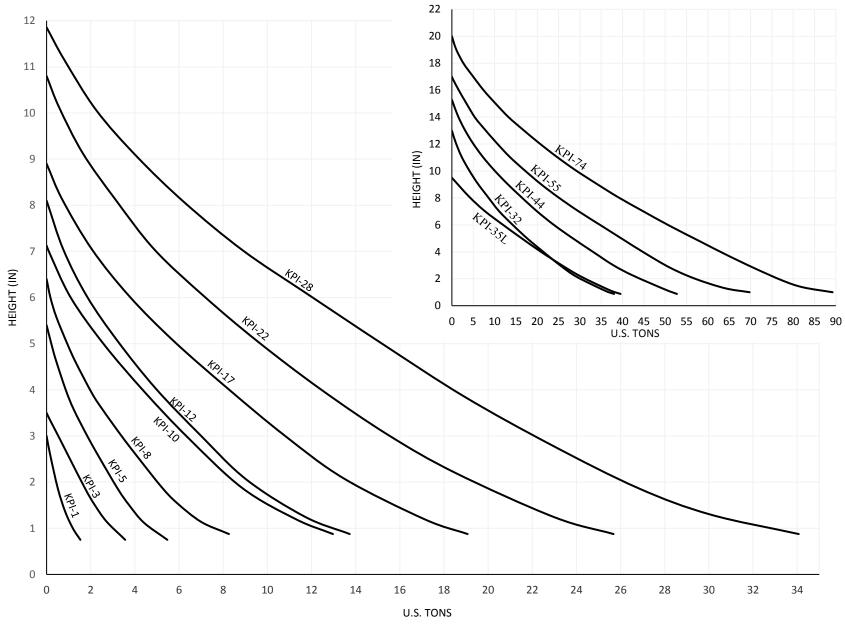


Table 1-1. MAXIFORCE® G2 Lift Bag Reference Data (Continued)

### MAXIFORCE AIR BAGS TECHNICAL DATA

PN	MODEL	DIMENSIONS W NIPI			DIMENSIONS YELETS)	WEI	GHT		LIFT	WO	AX ORK SURE		K LIFT IGHT	MAX CAPA	
		mm	INCH	mm	INCH	KG	LBS	METRIC TON	US TONS	BAR	PSI	mm	INCH	LITERS	CU. FT
22-888110G2	KPI-1	152 X 152 X 19	6 X 6 X 0.75	178 X 178 X 19	7.0 X 7.0 X 0.75	0.6	1.2	1.3	1.5	10.3	150	76	3.0	3.74	0.13
22-888120G2	KPI-3	152 X 305 X 19	6 X 12 X 0.75	178 X 331 X 19	7.0 X 13.0 X 0.75	1.0	2.3	3.2	3.5	10.3	150	89	3.5	10.30	0.36
22-888130G2	KPI-5	254 X 254 X 19	10 X 10 X 0.75	280 X 280 X 19	11.0 X 11.0 X 0.75	1.4	3.1	4.9	5.4	10.3	150	137	5.4	23.34	0.82
22-888135G2	KPI-8	305 X 305 X 22	12 X 12 X 0.88	331 X 331 X 19	13.0 X 13.0 X 0.75	2.5	5.5	7.5	8.2	10.3	150	163	6.4	47.47	1.68
22-888138G2	KPI-10	305 X 457 X 22	12 X 18 X 0.88	338 X 338 X 22	13.1 X 19.0 X 0.88	3.7	8.3	11.7	12.9	10.3	150	180	7.1	84.23	2.97
22-888140G2	KPI-12	381 X 381 X 22	15 X 15 X 0.88	381 X 564 X 22	16.3 X 16.3 X .88	4.0	8.8	12.4	13.7	10.3	150	206	8.1	95.05	3.36
22-888150G2	KPI-17	381 X 533 X 22	15 X 21 X 0.88	381 X 564 X 22	15.0 X 22.2 X 0.88	5.4	12.0	17.3	19.0	10.3	150	226	8.9	159.67	5.64
22-888160G2	KPI-22	508 X 508 X 22	20 X 20 X 0.88	508 X 539 X 22	20.0 X 21.2 X 0.88	7.2	15.9	23.2	25.6	10.3	150	274	10.8	239.48	8.46
22-888165G2	KPI-28	508 X 660 X 22	20 X 26 X 0.88	508 X 691 X 22	20.0 X 27.2 X 0.88	9.1	20.1	30.9	34.0	10.3	150	299	11.8	354.48	12.52
22-888170G2	KPI-32	610 X 610 X 22	24 X 24 X 0.88	610 X 640 X 22	24.0 X 25.2 X 0.88	10.0	22.0	34.4	38.0	10.3	150	330	13.0	404.24	14.28
22-888180G2	KPI-35L	381 X 1066 X 22	15 X 42 X 0.88	412 X 1096 X 22	16.2 X 43.2 X 0.88	11.1	24.5	35.8	39.5	10.3	150	241	9.5	323.03	11.41
22-888190G2	KPI-44	711 X 711 X 22	28 X 28 X 0.88	712 X 745 X 22	28.0 X 29.3 X 0.88	13.6	30.0	47.8	52.7	10.3	150	388	15.3	712.50	25.16
22-888195G2	KPI-55	812 X 812 X 25	32 X 32 X 1	813 X 872 X 25	32.0 X 34.3 X 1	20.5	45.2	63.3	69.7	10.3	150	432	17.0	1098.94	38.81
22-888200G2	KPI-74	939 X 939 X 25	37 X 37 X 1	940 X 999 X 25	37.0 X 39.3 X 1	26.3	58.0	80.9	89.2	10.3	150	508	20.0	1623.31	57.33

Table 1-1. MAXIFORCE® G2 Lift Bag Reference Data (Continued)

### CHAPTER 2 OPERATION

### 2-1 INTRODUCTION

- 2-1.1 MAXIFORCE® G2 Lifting Bag Systems are multi-application, portable inflation systems used for lift and displacement of heavy rigid objects, up to 178,400 pounds (80,920 kilograms), while requiring less than 1 inch (2.5 centimeters) of bag insertion clearance. Total capable lift (utilizing two stacked lift bags) is 40 inches (100 centimeters). Inflation may be obtained from any air source (self-contained compressed air cylinder, air compressor, truck air brake system, building compressed air system, foot pump, etc.) capable of supplying 150 psi (10.3 Bar) pressure.
- 2-1.2 MAXIFORCE® G2 Lifting Bag Systems are designed for use in emergency situations such as building collapse, structural containment, vehicular extrication, industrial entrapment, and excavation collapse and containment. The specific situation requiring the use of a MAXIFORCE® G2 Lifting Bag System will generally determine the size and quantity of lift bag(s) to be utilized in combination with each other.

See Chapter 2-8 (page 2-5) for application examples.

### 2-2 SYSTEM FUNCTIONAL OPERATION.

Functionally, an interconnected MAXIFORCE® G2 Life Bag System operates as follows:

- a. A self-contained air cylinder, air compressor, foot pump or alternate air supply provides the necessary volume and pressure to pressurize the system and ultimately inflate the lift bag.
- b. After a lift bag(s) is properly positioned for a lift/displacement, the air supply is "turned on". High pressure air is reduced by the pressure regulator to a usable 215 psi (14.8 Bar)
- c. The reduced air pressure is supplied via an air hose to a 150 psi ALB controller G3. The controller permits air to flow via air hose(s) to either one or two lift bags permitting a controlled lift/displacement. In the line between the controller and the lift bag(s) are inline relief valve(s) to maintain proper pressure in the lift bags while disconnected from the controller.

- d. As air flows into the lift bag, it increases in height resulting in a corresponding lift/displacement. Maximum lift/displacement force occurs at insertion height (maximum lift bag surface area). As additional air flows into the lift bag, the cross section reduces as the height increases resulting in a corresponding reduction in lift/displacement capacity.
- e. When the lift bag(s) are to be partially or fully deflated, control(s) on the controller are operated to perform this function as well as prevent any further inlet pressure from flowing beyond the controller.
- f. At the conclusion of operation, the air supply is "turned-off", any residual system air pressure is relieved ("bled off") through the controller, the system components are disconnected, inspected and stored for later use.

### 2-3 <u>COMPONENT INTERCONNECT PRIOR</u> <u>TO INFLATION.</u>

WARNING

Refer to the SAFETY FIRST instructions preceding chapter 1 for those safety first procedures to be followed for each specific operational phase of the application at hand. Regardless of the lift bag applications or environmental conditions, strict adherence to SAFETY FIRST is essential to prevent personnel injury/death and/or equipment damage. It may make a difference between saving a life or endangering/sacrificing another life.

2-3.1 The following procedures describe in detail a typical interconnection of the previously described components comprising a MAXIFORCE® G2 Air Lifting Bag System. This procedure can be accomplished by trained personnel in less than one minute. If the specific application does not require the use of all of the referenced components or some of the components are not available, elimination of the non-applicable steps and proceed with the interconnection. Any adapters, couplings and/or fittings required in conjunction with the

components are addressed generally but not specific during the interconnection. It is assumed these parts are available and will be installed where required in the system.

2-3.2 Refer to Table 1-1 to determine the required lift bag(s) for the load/displacement and full inflation height demands for the application at hand. Once proper lift/displacement and height configuration is determined and the individual components selector, it is only necessary to clean, where required, the individual components sufficiently to clear them of any contaminates that would prevent their full engagement and proper locking to each other and to interconnect the components.

WARNING

Refer to the SAFETY FIRST instructions preceding chapter 1 and adhere to applicable "prior to inflation" procedures.

WARNING

Most steps within this chapter discuss component connection. Check that the quick connect coupling is fully engaged and locked into position to assure a leak free connection. Be certain to turn the safety locking ring on any quick connect safety coupling to the locked position as shown in figure 2-1.

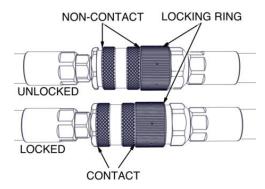


Figure 2-1 Quick Connect Coupling Safety Locking Ring

- a. Remove all dust, dirt, oil or grease from the MAXIFORCE® G2 Air Lifting Bag System components. Do not use any system components without first cleaning off any contaminants.
- b. Inspect all inlet and delivery fittings for any damage that will permit air leakage. Do not use any component if an air leakage condition is suspected or exists.
- c. Attach the high pressure inlet of the G3 pressure regulator to the air supply. Tighten connection to prevent air leakage. Do not over tighten.
- d. Check that the G3 pressure regulator shut-off valve is closed (full clockwise).
- e. Attach an air hose quick connect safety coupling to the G3 pressure regulator air delivery nipple using the appropriate interconnecting fittings as required.
- f. Attach the inlet quick connect safety coupling on a 150 psi ALB controller G2 to the air hose quick connect nipple.
- g. Attach the inlet quick connect nipple on a G2 safety inline relief valve to the delivery quick connect safety coupling on a 150 psi ALB controller G3. Check that the G2 safety inline relief valve shut-off valve is closed (full clockwise).
- h. If using a dual "deadman" 150 psi ALB controller G3, attach the inlet quick connect nipple on a second G2 safety inline relief valve to the second delivery quick connect safety coupling on the dual "deadman" 150 psi ALB controller G3. Check that the G2 safety inline relief valve shut-off valve is closed (full clockwise).
- i. Attach an air hose quick connect nipple to the G2 safety inline relief valve delivery quick connect coupling using the appropriate interconnecting fittings as required. Connect additional lengths of air hose of the same color as required.

- j. If a second G2 safety inline relief valve is used, attach air hose quick connect nipple to the second G2 safety inline relief valve delivery safety coupling using the appropriate interconnecting fittings as required. A different colored air hose should be used to permit the rapid and positive identification of the lift bag connected to each side of the controller. Connect additional lengths of air hose of the same color as required.
- k. Attach a lift bag nipple to the air hose quick connect safety coupling.
- 1. If a second lift bag is being used, attach the second lift bag nipple to the other air hose quick connect safety coupling.
- m. The MAXIFORCE® G2 Air Lifting Bag System is now fully interconnected and can be positioned with any required shoring and/or cribbing, and inflated for a lift/displacement.

### 2-4 NORMAL OPERATING PROCEDURE DURING INFLATION.

Proceed as follows to inflate the lift bag(s) after the individual components are interconnected, (per chapter 2-3) the lift bag(s) are positioned and the necessary shoring and/or cribbing is in position.

WARNING

Refer to the SAFETY FIRST instructions preceding chapter 1 and adhere to the applicable "during and while inflated" procedures.

WARNING

Be sure **all** shut-off valves are in a closed position prior to opening the air supply to the system; this will prevent an uncontrolled lift/displacement.

a. <u>Slowly</u> open (turn counter-clockwise) the air supply to the G3 pressure regulator. The supply pressure will be indicated on the air supply pressure gauge. The G3 pressure regulator is pre-set from the factory to an optimal pressure outlet setting of 215 psi (14.8 bar) for simplified set-up and operation.

- b. <u>Slowly</u> open (turn counter-clockwise) the G3 pressure regulator shut-off valve.
- d. Open the shut-off valve on the G2 safety inline relief valve(s).

#### NOTE:

### When operating the lift bag, always inflate slowly and only lift or move the amount necessary.

- e. Press the inflate (green) button of the dual "deadman" 150 psi ALB controller G3 repeatedly to slowly inflate the lift bag to the required height or 150 psi (10.3 bar). Inflating the lift bag(s) slowly will minimize the possibility of shifting. If a second lift bag is interconnected to the controller, operate the second rocker lever to slowly inflate the second lift bag. The lift bags may be inflated simultaneously or alternately as desired by the operator.
- f. With the lift bag inflated to the desired height/pressure close (turn clockwise) the shut-off valve on the G2 safety inline relief valve(s).
- g. If additional lift bags are required for the application, proceed as follows:
- 1. Determine the lift bag to remain inflated and in position. Be sure the shut-off valve on the associated G2 safety inline relief valve.
- 2. Before disconnecting the G2 safety inline relief valve from the G3 controller, be sure to release the pressure between the components by pressing the "deflate" (red) button. Be sure the gauge on the controller reads 0 psi before disconnection. Release the safety locking ring on the quick connect safety coupling between the G3 controller and the G2 safety inline relief valve. Disengage the coupling lock ring to release the G2 safety inline relief valve from the G3 controller.
- 3. Attach the inlet port quick connect nipple on a G2 safety inline relief valve to the outlet port quick connect safety coupling on the G3 controller. Check that the G2 safety inline relief valve shut-off valve is closed (full clockwise).
- 4. Attach an air hose quick connect nipple to the G2 safety inline relief valve delivery safety coupling using the appropriate interconnecting fittings as required. Connect additional lengths of air hose as required.
- 5. Attach a G2 lift bag nipple to the air hose quick connect safety coupling.

- 6. Press the inflate (green) button of the dual "deadman" 150 psi ALB controller G3 repeatedly to **slowly** inflate the lift bag to the required height or 150 psi (10.3 bar). Inflating the lift bag(s) slowly will minimize the possibility of shifting.
- 7. Adhere to procedural steps 1 through 6 to add any additional quantity of lift bags required for the application.

### 2-5 CHANGING AIR CYLINDERS.

### **NOTE**

If the air source for a given application requires the use of air cylinder, it should be changed during inflation whenever the air cylinder pressure falls below 250 psi (17.2 Bar).

- a. Close (turn clockwise) the air cylinder and the G3 pressure regulator shut-off valves. Any residual system air pressure will be relieved through the controller or by turning the quick connect safety coupling locking ring ccw.
- b. As required, turn the nut on the G3 pressure regulator high pressure inlet or interconnecting air cylinder to pressure regulator fitting to the unlocked position. Disengage the inlet nipple to release the air cylinder from the G3 pressure regulator.
- c. Attach the high pressure inlet on the G3 pressure regulator to a full air cylinder. Tighten all connections just enough to prevent air leakage. Do not over tighten.
- d. e. Slowly open (turn counter clockwise) the air supply to the G3 pressure regulator. The supply pressure will be indicated on the air supply pressure gauge. The G3 pressure regulator is pre-set from the factory to an optimal pressure outlet setting of 215 psi (14.8 bar) for simplified set-up and operation.
- f. <u>Slowly</u> open (turn counter clockwise) the G3 pressure regulator shut-off valve.

### 2-6 NORMAL OPERATING PROCEDURE DURING DEFLATION.

#### NOTE

If a lift bag(s) is to be removed after it is deflated, shoring or cribbing must be in position, as required, to restrain the load permitting the removal of the lift bag(s).

- a. To either partially or fully deflate an inflated lift bag(s) disconnected from a controller, open and close as required the shut-off valve on the G2 safety inline relief valve to slowly achieve the desired deflation. The lift bag design prevents it from deflating rapidly. Alternately opening and closing the shut-off valve will permit a more slowly controlled deflation. This prevents any quick load movements that may cause damage or personnel injury. Repeat for any additional lift bag(s) disconnected from the controller that can be partially or fully deflated.
- b. To either partially or fully deflate an inflated lift bag (s) **connected** to a controller, press and release the deflate side (red) button repeatedly to **slowly** deflate the lift bag. Repeat for an additional lift bag connected to the controller if it can be partially or fully deflated.
- c. Gather the system components together in preparation for movement to another work area or for disconnection, post inspection and storage.

### 2-7 <u>COMPONENT DISCONNECTION AFTER</u> DEFLATION.

The following procedures describe in detail a typical disconnection of the previously described components comprising a MAXIFORCE® G2 Air Lifting Bag System. This procedure can be accomplished by trained personnel in less than one minute. If the specific application did not require the use of all of the referenced components or some of the components are not available, eliminate the non-applicable steps and proceed with the disconnection. Any adapters, couplings and/or air fittings used in conjunction with the components are not addressed during the disconnection.


- a. Remove the lift bag(s) from its lift/ displacement position and gather the interconnected system components together.
- 1. Turn off the air supply. Any residual system air pressure can be relieved through the controller or the safety couplings by turning the locking ring ccw. If a significant continuous pressure is observed, the air supply shut-off valve is probably defective and air leakage should be anticipated when the air supply is disconnected from the G3 pressure regulator.

- 2. Once the air supply is turned off and press the deflate (red) button on the dual "deadman" 150 psi ALB controller G3 to exhaust air from the system.
- b. Turn the safety locking ring on the air hose quick connect safety coupling, interconnecting the lift bag, to the unlocked position. This will also relief any residual air from the system. Disengage the coupling release ring to disengage the lift bag from the air hose.
- c. Turn the safety locking ring on the G2 safety inline relief valve quick connect safety coupling, interconnecting the air hose, to the unlocked position. Disengage the coupling release ring to disengage the air hose from the G2 safety inline relief valve.
- d. Turn the safety locking ring on the 150 psi ALB controller G3 quick connect safety coupling, interconnecting the G2 safety inline relief valve, to the unlocked position. Disengage the coupling release ring to disengage the G2 safety inline relief valve from the 150 psi ALB controller G3.
- e. If a dual "deadman" 150 psi ALB controller G3 is used with two G2 safety inline relief valves and associated lift bags, repeat preceding steps b through d.
- f. Turn the safety locking ring on the air hose quick connect safety coupling, interconnecting the G3 pressure regulator to the unlocked position. Disengage the coupling release ring to dieengage the air hose from the G3 pressure regulator.
- g. As required, turn the safety locking ring on the air source fitting quick connect safety coupling, interconnecting the G3 pressure regulator to the unlocked position. Disengage the coupling lock release or other fitting to disengage the pressure regulator from the air source.

h. If the components are not to be immediately reused, perform the post operation inspection and storage in accordance with Chapter 3.

### 2-8 APPLICATIONS.

- 2-8.1 MAXIFORCE® G2 Air Lifting Bag Systems are multi-application, portable inflation systems used for lift and displacement of heavy rigid objects, up to 178,400 pounds (80,920 kilograms), while requiring less than 1 inch (2.5 centimeters) of bag insertion clearance. Total capable lift (utilizing two stacked lift bags) is 40 inches (100 centimeters).
- 2-8.2 As shown in figure 2-2, MAXIFORCE® G2 Air Lifting Bag Systems are designed for use in emergency situations such as building collapse, structural containment, vehicular extrications, industrial entrapment, and excavation collapse and containment.
- 2-8.3 In addition to use during emergency situations, MAXIFORCE® G2 Air Lifting Bag Systems are also effectively used for:
- a. Preventive and/or corrective maintenance procedures where positioning and aligning heavy equipment and machinery in mills, manufacturing facilities and maintenance shops is required such as removing wheels, pulleys and gears from large machinery.
- b. Lifting or shifting pipelines requiring welding and maintenance.
- c. Breaking out granite and marble blocks and slabs in quarrying operation

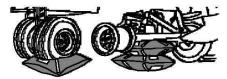

AIRCRAFT FLAT TIRE SUPPORT & REPAIR




HALF-TRAK TIRE REPAIR




**VEHICLE JACKING OPERATION** 




RAISING EARTH MOVER
MIRED IN MUD

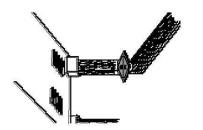


POSITIONING OF HEAVY MACHINERY

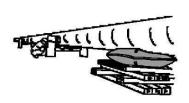


RAISING PIPELINE FOR INSPECTION

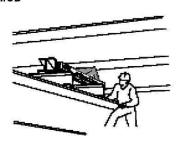


LIFTING SECTION OF COLLAPSED HIGHWAY OVERPASS

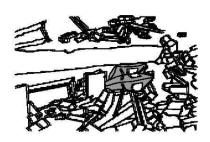


RAISING SECTION OF COLLAPSED BUILDING TO ALLOW RESCUE ACCESS

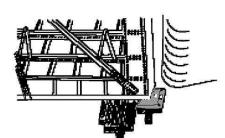


JACKING UP CANAL LOCK GATE DURING MAINTENANCE

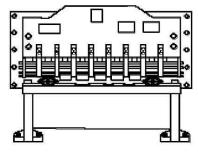

LIFTING AND STABILIZING CUTTER

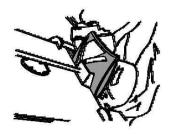

OPENING DOOR OF GRINDING MACHINE TO FREE VICTIM'S ARM

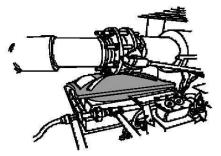

ALIGNING AND STABILIZING PIELINE SECTIONS



PRYING OPEN FENCE TO RESCUE TRAPPED ANIMAL

Figure 2-2

- d. Re-railing railroad and mining cars, pre-stressing support columns, general maintenance requiring lifting in rail, mining, underground and subway work.
- e. Lifting operations underwater or on unstable, soft ground (mud, sand, snow, strewn debris, etc.) where conventional jacking equipment tends to sink.
- f. Since the lift bags contain no spark producing parts, they may also be used safely in explosive environments.
- 2-8.4 In addition to the SAFETY FIRST Procedures in the front of this publication, the following general application notes and procedures should be followed whenever a MAXIFORCE G2 Air Lifting Bag System is to be employed.
- a. All procedures should be used as guidelines, not absolute dictates. Any previous application may, as a result of a seemingly inconsequential change, require modification or possibly completely new procedures to achieve the same result.
- b. Lift bags are relatively lightweight. The maximum weight is 60 pounds (27.2 kg). All lift bags over 8 pounds incorporate at least two lifting eyelets.
- c. If a lift bag is being used to lift or displace a thin surface or material, use plywood between the lift bag and the surface to more evenly distribute the applied force.
- d. If a lift bag will be used on an icy, greasy or otherwise slick surface, use a granular material such as sand between the lift bag and the surface to increase the coefficient of friction, thereby preventing the lift bag from slipping.
- e. Build support cribbing/bracing height to a point that just allows the lift bag(s) to be inserted. Safety cribbing/bracing must be installed as the load is being lifted, remembering the generally applied rule to "lift an inch, crib an inch". Care must be exercised to avoid injury and damage in the event of a drop and/or load shift (figure 2-3). The top support cribbing/bracing layer must be sufficiently solid to prevent a cribbing/bracing shift and collapse during inflation when the lift bag(s) take on the characteristic double dome shape. Build safety

cribbing/bracing after the desired lift to minimize the drop distance in the event of air loss after inflation. After full safety cribbing/bracing is in place, the lift bag may be slowly deflated and removed, and the support cribbing/bracing removed, allowing the load to rest fully on the safety cribbing/bracing.

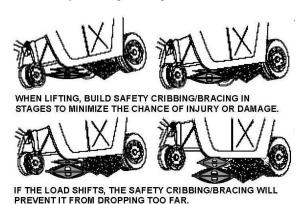


Figure 2-3. Correct Method of Safety Cribbing/Bracing

f. Lifting capacity does not increase by stacking 2 lift bags one on top of the other; only the lifting height increases. Lifting capacity is controlled by the smaller bag capacity. Use lift bags, side-by-side, to additively increase capacity by inflating the lift bags simultaneously. (Figure 2-4)

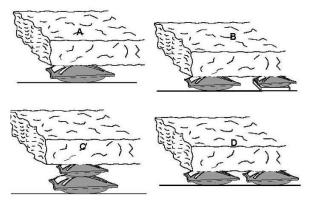


Figure 2-4. Lift bag Stacking and Tandem Combinations

g. If the lift requirement demands the use of two stacked lift bags, (figure 2-5) the smaller lift bag be on top (A) and the bottom lift bag inflated first until top lift bag contacts with the load (B). The top lift bag is then inflated to achieve the desired lift(C). If additional lift is required at full inflation of the top lift bag is further inflated (D).

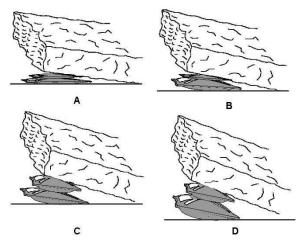


Figure 2-5. Correct Method for Inflating Stacked Lift Bags

h. When lifting large cylindrical objects (Figure 2-6), use a lift bag on both sides of cylinder and wedges to provide an even lift.

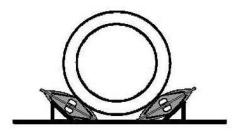


Figure 2-6. Correct Method of Inflating Stacked Lift Bags

### 2-9 <u>LIFT BAG CHEMICAL COMPATIBILITY</u>

Use the following chemical compatibility table only as a guide in determining the MAXIFORCE® G2 Lift Bag resistance to solvents, acids, salts and other chemical solutions. Each commodity is assigned an alpha character to denote its expected effect upon the lift bag. The specific ratings in this table are based upon published literature from various polymer suppliers and manufacturers and "Chemical Resistance Guide for Elastomers II" published by Compass Publications, copyright 1994. Paratech is unable to guarantee their accuracy and therefore assumes no liability for the use thereof.

### A. - EXCELLENT SERVICE

Long service may be expected with little reduction in properties due to the exposure. Suitable for continuous service.

### B. - GOOD SERVICE

Good service may be expected, but properties will be affected by the exposure. Usually suitable for continuous and intermittent service.

#### C. - FAIR SERVICE

Fair service may be expected if exposure is limited or infrequent. Not recommended for continuous use but may give some service if it is the only option available.

### U. - NOT RECOMMENDED FOR CONTINUOUS USE

### **BLANK - INSUFFICIENT INFORMATION**

The table positions which are not rated indicate insufficient information at the time of publication to determine an accurate rating.

$\mathbf{A}$	Amyl Borate	A	Benzene	U
AcetamideB	Amyl Chloride	U	Benzenesulfonic Acid	A
Acetic Acid 5%A	Amyl Chloranaphthalene	U	Benzine	B
Acetic Acid 30%	Amyl Naphthalene		Benzochloride	U
Acetic Acid, Hot High Press	Anderol L-774 (diester)		Benzoic Acid	A
Acetic Acid, GlacialU	Anderol L-826 (diester)		Benzophenol	
Acetic AnhydrideA	Anderol L-829 (diester)		Benzyl Alcohol	
Acetone	Ang-25 (Glyceral Ester)		Benzyl Benzoate	
	Ang-25 (di-ester Base) (TG749)		Benzyl Chloride	
Acetal Acetana U	Anhydrous Ammonia		Black Point 77	
Acetyl Acetone	Anhydrous Hydrazine		Black Suphate Liquors	
Acetyl ChlorideU	Anhydrous Hydrogen Fluoride		Blast Furnace Gas	
Acetylene B	Anline		Bleach Solutions	
Acetylene Tetrabomide	Anline Dyes		Borax	
Acrylonitrile	Anline Hydrchloride		Bordeaux Mixture	
Adipic AcidA	Anline Oils		Boric Acid	
Aero Lubriplate	Animal Fats		Boron Fluids (HEF)	
Aero Safe 2300U	Animal Fats (Lard Oil)		Brake Fluid (Non-Petroleum)	
Aero 2300W U	AN-O-3 Grade M			
Aero Shell IAC B			Bray GG-130	
Acero Shell 7A Grease B	An-O-6		Brayco 719-R (WH-910)	
Aero Shell 17 Grease B	AN-O-366		Brayco 885 (MIL-L-6085A)	
Aero Shell 750U	AN-VV-O-366b Hydr Fluid		Brayco 910	
Aerozene 50 (50% Hydrazine	Ansul Ether		Bret 710	
50% UDMH) U	Aqua Regia		Brine	
Air- Below 300°F (148.9°C) A	Argon		Brom-113	
Air Above 300°F (148.9°C)U	Aroclor 1248		Brom-114	
AlkazeneU	Aroclur 1254		Bromine	
Alum-N3Cr-KA	Aroclur 1260		Bromine Anhydrous	
Aluminum AcetateB	Aromatic Fuel 50%		Bromine Pentafluoride	
Aluminum Bromide A	Arsenic Acid		Bromine Trifluoride	
Aluminum Chloride A	Arsenic Trichloride		Bromine Water	
Aluminum Fluoride A	Askarel		Bromobenzene	
Aluminum Nitrate A	Asphalt Emulsion		Bromochloro Trifluoroethane	
Aluminum Phosphate A	Asphalt Topping	B	Bunker Oil	В
Aluminum Salts A	ASTM Oil #1	A	Butadiene	В
Aluminum SulfateA	ASTM Oil #2	B	Butane	A
Ambrex 33 Mobil B	ASTM Oil #3	B	Butane 2, 2-Dimethyl	B
Amines, Mixed B	ASTM Oil #4	U	Butane 2, 3-Dimethyl	В
Ammonia Anhydrous (Liquid) A	ASTM Reference Fuel A	B	Butanol (Butyl Alcohol)	A
Ammonia Gas, Cold A	ASTM Reference Fuel B	U	1-Butene, 2-Ethyl	U
Ammonia Gas, Hot B	ASTM Reference Fuel C	U	Butter	В
Ammonia & Lithium Metal Solution. U	ATL-857	U	Butyl Acetate	U
Ammonium Carbonate A	Atlantic Dominion F	B	Butyl Acetate Ricinoleate	U
Ammonium Chloride A	Aurex 903R Mobil	B	Butyl Acrylate	
Ammonium Hydroxide (Concentrate) A	Automatic Transmission Fluid	B	Butyl Alcohol	
Ammonium Nitrate A	Automotive Brake Fluid	B	Butyl Amine	
Ammonium Nitrite A	В		Butyl Benzoate	
Ammonium Persulfate Solution A	~		Butyl Butyrate	
Ammonium Persulfate 10% A	Bardol B		Butyl Carbitol	
Ammonium Phosphate A	Barium Chloride		Butyl Cellosolve	
Ammonium Phosphate, Mono-Basic . A	Barium Hydroxide		Butyl Cellosolve Adipate	
Ammonium Phosphate, Dibasic A	Barium Salts		Buty Ether	
Ammonium Phosphate, Tribasic A	Barium Sulfate		Butyl Oleate	
Ammonium Salts A	Barium Sulfide		Butyl Stearate	
Ammonium Salts	Bayol D		Butylene	
	Beer		Butyraldehyde	
Ammonium Sulfide	Beet Sugar Liquors		Butyric Acid	
Amyl Alcohol	Benzaldehyde	U	Dutylic Held	0
Amyl Alcohol A				

С	Copper Chloride	A	Dioctyl Phthalate	U
_	Copper Cyanide		Dioctyl Sebacate	
Carbon Tetrachloride U	Copper Salts		Dioxane	
Carbonic AcidA	Copper Sulfate		Diozolane	
Castor OilA	Copper Sulfate 10%		Dipentene	
CellosolveU	Copper Sulfate 50%		Diphenyl	
Cellosolve AcetateU	Corn Oil		Diphenyl Oxides	
Cellosolve ButylU	Cottonseed Oil		Dow Chemical 50-4	
Celloguard A	Creosols		Dow Chemical ET378	
Cellulube A60 (Now Fyrquel) U	Creosote		Dow Chemical ET588	
Cellolube 90, 100, 150, 220, 300, 500 U	Creosote, Coal Tar		Dow Corning-3	
Cellutherm 2505A U	Creosote, Wood Tar		Dow Corning-4	
Cetane (Hexadecane) B	Creosylic Acid		Dow Corning-5	
China Wood Oil (Tung Oil)A	Crude Oil		Dow Corning-11	
Chloracetic AcidA	Cumene		Dow Corning-33	
ChlorodaneC			Dow Corning-44	
Chlorextol B	Cutting Oil		ε	
Chlorinated Salt BrineU	Cyclohexane		Dow Corning-55	
Chlorinated Solvents, DryU	Cyclohexanol		Dow Corning-200	
Chlorinated Solvents, Wet U	P-Cymene	U	Dow Corning-220	
Chlorine, DryC	D		Dow Corning 510	
Chlorine, WetC	Decalin	U	Dow Corning-550	
Chlorine DioxideU	Decane	U	Dow Corning-705	
Chlorine Dioxide (8% CI as	Delco Brake Fluid	В	Dow Corning-710	
NACIO2 in solution)U	Denatured Alcohol	A	Dow Corning-1208	
Chlorine TrifluorideU	Detergent Solutions		Dow Corning-4050	
Chloroacetone C	Developing Fluids (Photo)		Dow Corning-6620	
Chloroacetic AcidU	Dextron		Dow Corning-F60	
Chlorobenzene U	Diacetone		Dow Corning-F61	
Chlorobenzene, (Mono)U	Diacetone Alcohol		Dow Corning-XF60	
Chlorobromo Methane U	Diazon		Dow Guard	
ChlorobutadieneU	Dibenzyl Ether		Dowtherm Oil	
Chlorododecane U	Dibenzyl Sebacate		Dowtherm A or E	
Chloroform U	Dibromoethyl Benzene		Dowtherm 209, 50% Solution	В
O-ChloronaphthaleneU	Dibutylamine		Drinking Water	B
1-Chloro 1-Nitro Ethane U	Dibutyl Ether		Dry Cleaning Fluids	
Chlorosulfonic Acid	Dibutyl Phthalate		DTE Light Oil	B
Chlorotoluene	Dibutyl Sebacate		${f E}$	
Chlorox B	O-Dichlorobezene		Elco 28-EP Lubricant	C
O-Chlorphenol	P-Dichlorobenzene		Epichlorohydrin	
Chrome Alum	Dichloro-Butane		Epoxy Resins	
Chrome Plating Solutions U	Dichloro-Isopropyl Ether		Esam-6 Fluid	
Chromic Ovides 88 Wt 9/ Agreeus	Dicyclohexylamine		Esso Fuel 208 Esso Golden Gasoline	
Chromic Oxides 88 Wt % Aqueous Solution U	Diesel Oil			
Circo Light Process Oil B	Di-Ester Lubricant MIL-L7808		Esso Motor Oil	
Citric Acid A	Di-Ester Synthetic Lubricant		Esso Transmission Fluid (TypeA).	
	Diethylamine		Esso WS3812 (MIL-L-7808A)	
City Service Koolmotor - AP Gear Oil 140-E.P. Lube B	Diethyl Benzene		Esstic 42, 43	
City Service #65, #120, #250 B	Diethyl Ether		Ethane	
Cobalt Chloride	Diethyl Sebacate		Ethanol	
Cobalt Chloride, 2N A	Diethylene Glycol		Ethanol Amine	
Cocoa nut Oil A	Difluorodibromomethane		Ethers	
	Disobutylene		Ethyl Acetate-Organic Ester	
Cod Liver Oil B Coffee A	Disococtyl Sebacate		Ethyl Acetoacetate	
	Disopropyl Benzene		Ethyl Acrylate	
Coliaba Liquors	Disopropyl Ketone		Ethyl Acrylic Acid	
Convolor 10	Dimethyl Aniline		Ethyl Alcohol	
Convelex 10	Dimethyl Formamide		Ethyl Benzene	
Conner A actata	Dimethyl Phthalate		Ethyl Benzoate	
Copper Acetate B	Dinitro Tuluene	U	Ethyl Bromide	U

	Freon, 114	A	HeliumA
Ethyl CellosolveU	Freon, 114B2	A	N-HeptaneB
Ethyl Cellulose B	Freon, 115	A	N-Hexaldehyde A
Ethyl Chlorocarbonate U	Freon, 142b	A	HexaneB
Ethyl Chloroformate U	Freon, 152a	A	N-Hexane-1B
Ethyl CyclopentaneC	Freon, 218		Hexyl AlcoholB
Ethyl Ether U	Freon, C316		High Viscosity Lubricant, U4B
Ethyl Formate B	Freon, C318		High Vicosity lubricant, H2B
Ethyl Hexanol A	Freon, 502		Hilo MS #1 U
Ethyl MercaptanC	Freon, 502		Houghto-Safe 271 (Water and Glycol
	Freon, BF		Base)B
Ethyl Oxalate U			Houghto-Safe 620 (Water/Glycol)B
Ethyl PentachlorobenzeneU	Freon, MF		•
Ethyl SilicateA	Freon, TF		Houghto-Safe 1120, Phosphate Ester U
Ethylene A	Freon, TA		Houghto-Safe 1120, Phosphate Ester U
Ethylene Chloride U	Freon, TC		Houghto-Safe 5040
Ehtylene Chlorohydrin B	Freon, TMC		(Water/OilEmulsion)B
Ethylene Diamine A	Freon, T-P35		Hydraulic Oil (Petroleum Base)B
Ethylene DibromideU	Freon, T-WD602	B	HydrazineB
Ethylene DichlorideU	Freon, PCA	A	Hydrobromic AcidU
Ethylene Glycol A	Fuel Oil	B	Hydrobromic Acid 40%B
Ethylene OxideU	Fuel Oil, Acidic	B	Hydrocarbons (Saturated)B
Ethylene Trichloride U	Fuel Oil, #6	U	Hydrochloric Acid Hot 37%U
Ethylmorpholene Stannous Octoate	Fumaric Acid	B	HydrochloricAcid Cold 37%B
(50/50 Mixture)	Fuming Sulpharic Acid - (20/25%		Hydrochloric Acid 3 MolarC
, F	Oleum)	U	Hydrochloric Acid Concentrated U
F-60 Fluid (Dow Corning) A	Furan (Furfuran)	U	Hydrocyanic AcidB
	Furfural		Hydro-Drive, MIH-50 (Petroleum
F-61 Fluid (Dow Corning)A	Furfuraldehyde		Base)B
Fatty Acids	Furfaryl Alcohol		Hydro-Drive, MIH-10 (Petroleum
FC-43 Heptacosofluorotributylamine A	Furyl Carbinol		Base)B
FC75 Fluorocarbon	Fryquel A60		Hydrofluoric Acid, 65% Max. Cold A
Ferric Chloride			Hydrofluoric Acid, 65%Min.Cold U
Ferric NitrateA	Fryquel 90,100,150,220,300,500	0	Hydrofluoric Acid, 65% Max. HotC
Ferric Sulfate A	G		Hydrofluoric Acid, 65% Min. Hot U
Fish Oil A	Gallic Acid	B	Hydrofluosilicic AcidB
Fluoroboric AcidA	Gasoline	B	Hydrogen Gas, Cold A
Fluorine (Liquid)C	Gelatin	A	Hydrogen Gas, Hot A
FluorobenzeneU	Girling Brake Fluid		Hydrogen Peroxide (1)B
Fluorocarbon Oils A	Glacial Acetic Acid		
FluorolubeA	Glauber's Salt		Hydrogen Peroxide 90%(1)
Fluorinated Cyclic EstersU	Glucose		Hydrogen Sulfide Dry, Cold
Fluosilicic Acid A	Glue (Depending ion Type)		Hydrogen Sulfide Dry, HotB
FormaldehydeC			Hydrogen Sulfide Wet, Cold
Formic AcidA	Glycerine-Glycerol		Hydrogen Sulfide Wet, HotB
Freon, 11U	Glycols		Hydrolube-Water/Ethylene GlycolB
Freon, 12	Green Suphate Liquor		HydroquinoneU
Freon, 12 and ASTM Oil #2 (50/50	Gulfcrown Grease		HydyneB
Mixture) B	Gulf Endurance Oils		HyjetU
Freon, 12 ans Suniso 4G -(50/50	Gulf FR Fluids (Emulsion)		Hyjet IIIU
Mixture) B	Gulf FRG-Fluids		Hyjet SU
Freon, 13	Gulf FRP-Fluids	U	Hyjet WU
Freon 13B1 A	Gulf Harmony Oils	B	Hypochlorous AcidU
	Gulf High Temperature Grease	B	Ţ
Freon, 14	Gulf Legion Oils	B	-
Freon, 21	Gulf Paramount Oils		Industron FF44B
Freen, 22	Gulf Sucurity Oils	B	Industron FF48B
Freon, 22 and ASTM Oil (50/50	H		Industron FF53B
Mixture)B			Industron FF80B
Freon, 31	Halothane		IodineU
Freon, 32	Hannifin Lube A		Iodine Pentafluoride U
Freon, 112 B	Heavy Water	B	Isobutyl Alcohol A
Freon, 113 A	HEF-2 (High EnergyFuel)		1300 uty1 7 Heorioi 7 1

In deducer.	MCS 463		MIL-L-6082C	
Isododecane B	Mercuric Chloride		MIL-H-6083C	
Iso-OctaneB	Mercury		MIL-L-6085A	
Isophorone (Ketone) U	Mercury Vapors		MIL-L-6086B	
Isopropanol A	Mesityl Oxide (Ketone)		MIL-A-6091	
Isopropyl AcetateU	Methane		MIL-L-6387	
Isopropyl Alcohol A	Methanol		MIL-C-6529C	
Isopropyl ChlorideU	Methyl Acetate		MIL-F-7024A	
Isopropyl Ether U	Methyl Acetoacetate		MIL-H-7083A	
J	Methyl Acrylic Acid		MIL-G-7118A	
JP 3 (MIL-J-5624) U	Methyl Alcohol		MIL-G-7187	
JP 4 (MIL-J-5624) U	Methyl Benzoate		MIL-G-7421A	
JP 5 (MIL-J-5624U	Methyl Bromide		MIL-H-7644	E
JP-6(MIL-J-25656)U	Methyl Butyl Ketone	U	MIL-L-7645	E
JP X (MIL-F-25604)B	Methyl Carbonate	U	MIL-G-7711A	U
	Methyl Cellosolve	.B	MIL-L-7808F	I
K	Methyl Chloride	U	MIL-L-7870A	Е
Kel F Liquids Kerosene C	Methyl Chloroformate	.U	MIL-C-8188C	U
Keystone #87HX-GreaseU	Methyl D-Bromide	U	MIL-A-8243B	Е
L	Methyl Cyclopentane		MIL-L-8383B	A
	Methylene Chloride		MIL-H-8446B	Е
Lactams-Amino Acids B	Methyl Dichloride		MIL-I-8660B	А
Lactic Acid, ColdA	Methyl Ether		MIL-L-9000F	Е
Lactic Acid, HotU	Methyl Ethyl Keton (MEK)		MIL-T-9188B	L
LacquersU	Methyl Ethyl Ketone Peroxide		MIL-L-9236B	U
Lacquer SolventsU	Methyl Formate		MIL-E-9500	Δ
Lactic AcidsA	Methyl Isobutyl Ketone (MIBK)		MIL-L-10295A	
Lard, Animal Fats B	Methyl Isopropyl Ketone		MIL-L-10324A	
Lavender OilU	Methyl Methacrylate		MIL-G-10924B	
Lead AcetateB	Methyl Oleate		MIL-L-11734B	
Lead Nitrate A	Methyl Salicylate		MIL-O-11773	
Lead SulfamateA	MIL-L-644B		MIL-P-12098	
Lehigh X1169B	MIL-L-2104B		MIL-H-13862	
Lehigh X1170B	MIL-L-2105B		MIL-H-13866A	
Light GreaseU	MIL-G-2108		MIL-H-13910B	
Ligroin (Petroleum Ether or Benzine) B	MIL-S-3136B, Type I Fuel		MIL-H-13919A	
Lime BleachB	MIL-S-3136B, Type II Fuel		MIL-L-14107B	
Lime Sulphur A	MIL-S-3136B, Type III Fuel		MIL-L-15016	
Lindol, Hydraulic Fluid (Phosphate	MIL-S-3136B, Type IV		MIL-L-15017	
Ester Type) U			MIL-15018B	
Linoleic AcidU	MIL-S-3136B, Type V			
Linseed Oil A	MIL-S-3136B, Type VI		MIL-L-15019A MIL-L-15719A	
Liquid OxygenU	MIL-S-3136B, Type VII MIL-L-3150A		MIL-G-15793	
Liquid Petroleum Gas (LPG)B	MIL-G-3278		MIL-G-13793	
LiquimolyB			MIL-F-16929A	
Lubricating Oils, DiesterC	MIL-L-3503			
Lubricating Oils, Petroleum Base B	MIL-L-3545B		MIL-L-16958A	
Lubricating Oils, SAE 10, 20, 30, 40,	MIL-C-4339C		MIL-F-17111	
50B	MIL-G-4343B		MIL-L-17331D	
Lye Solutions A	MIL-L-5020A		MIL-L-17353A	
M	MIL-J-5161F		MIL-L-17672B	
	MIL-C-5545A		MIL-L-18486A	
Magnesium Chloride	MIL-H-5559A		MIL-G-18709A	
Magnesium Hydroxide B	MIL-F-5566		MIL-H-19457B	
Magnesium Sulfate A	MIL-G-5572		MIL-F-19605	
Magnesium SulfiteA	MIL-F-5602	.B	MIL-L-19701	
Magnesium SaltsA	MIL-H-5606B		MIL-L-2126	F
Malathion	MIL-J-5624G, JP-3	U	MIL-G-21568A	Д
Maleic AcidU	MIL-J-5624G, JP-4		MIL-H-22072	Е
MCS 312U	MIL-J-5624, JP-5		MIL-H-22251	Е
MCS 352U	MIL-L-6081C		MIL-L-22396	A

	Neville AcidU	Petroleum Oil, Above
MIL-L-23699AC	Nickel AcetateB	250°F(121.1°C) U
MIL-G-23827AC	Nickel ChlorideB	PhenolU
MIL-G-25013DB	Nickel SaltsB	Phenol, 70%/30% H2O U
MIL-F-25172	Nickel SulfateA	Phenol, 85%/15% H2O U
MIL-L-25336B C	Niter CakeA	PhenylbenzeneU
MIL-F-25524A C	Nitric Acid (1) 3 MolarU	Phenyl Ethyl EtherU
MIL-G-25537AB	Nitric Acid (1) ConcentratedU	Phenyl Hydrazine U
MIL-F-25558B B	Nitric Acid DiluteB	PhoroneU
MIL-F-25576C C	Nitric Acid (1) Red Fuming(RFNA) U	Phosphoric Acid 20%B
MIL-H-25598 B	Nitric Acid (1) Inhibited, Red fuming	Phosphoric Acid 45%B
MIL-F-25656BU	(IRFNA)U	Phosphoric Acid, 3 Molar
MIL-L-25681C B	NitrobenzeneU	Phosphoric Acid, Concentrated U
	NitrobenzineU	
MIL-G-25760A		Phosphorous Trichloride Acid U
MIL-L-25968	Nitroethane	Pickling Solution
MIL-L-26087AA	Nitrogen	Picric Acid, H2O SolutionB
MIL-G-27343 A	Nitrogen(Tetroxide(N2O4)(1))U	Picric Acid, Molten U
MIL-P-27402B	NitromethaneC	Pinene
MIL-H-27601AB	NitropropaneU	Pine OilU
MIL-G-27617	<b>0</b>	Piperidine U
MIL-I-27686DB	O-A-548AB	Plating Solutions, Chrome U
MIL-L-27694AA	O-T-6324bU	Plating Solutions, Others
MIL-L-46000AC	Octachloro tolueneU	Pnuematic Service A
MIL-H-46001AA	OctadecaneB	Polyvinyl Acetate AmulsionB
MIL-L-46002 A		Potassium AcetateB
MIL-H-46004 B	N-OctaneU	Potassium Chloride A
MIL-P-46064A B	Octyl Alcohol	Potassium Cupro Cyanide A
MIL-H-81019BB	Oleic Acid	Potassium Cyanide A
MIL-S-81087A	Oleum (Fuming Sulfuric Acid)U	Potassium Dichromate A
MIL-H-83282 B	Oleum SpiritsC	Potassium Hydroxide A
Milk A	Olive oilB	Potassium Nitrate A
Mineral Oils	Oronite 8200A	Potassium Salts A
Mobil 24 DTEB	Oronite 8515A	Potassium Sulfate A
Mobil HF B	Orthochloro Ethyl BenzeneU	Potassium Sulfite A
Mobil Delvac 1100, 1110, 1120, 1130B	Ortho-DichlorobenzeneU	Prestone Antifreeze A
Mobil Nivac 20 and 30 A	OS 45 Type III(OS45)A	PRL-High Temp. Hydr. OilB
	OS 45 Type IV (OS45-1)A	Producer GasB
Mobil Velocite C B	OS70A	PropaneB
Mobilgas WA200, Type Automatic	Oxalic AcidB	
Trans. Fluid	Oxygen, ColdA	Propane Propionitrile
Mobil Oil SAE 20B	Oxygen, Cold 200-400°FU	Propyl Acetate
Mobiltherm 600 B	OzoneC	N-Propyl Acetone U
MobiluxB	P	Propyl Alcohol A
Mono BromobenzeneU		Propyl Nitrate U
Mono ChlorobenzeneU	P-S-66lbC	Propylene Oxide U
Mono EthanolamineU	P-D-680C	Pyranol, Transformer OilB
Monomethyl AnilineU	Paint Thinner, DucoU	PyranolU
Monmethyl Ether A	Palmitic AcidB	Pydraul, 10E, 29ELT U
Monmethyl Hydrazine B	Para-dichlorobenzeneU	Pydraul, 30E, 50E, 65E, 90E U
Monoitroluene & DinitrotolueneÊ	Par-al-KetoneU	Pydraul, 115EU
(40/60 Mix.)U	Parker O LubeA	Pydraul, 230E, 312C, 540C U
Monovinyl Acetylene B	Peanut OilB	Pyridine OilU
Mopar Brake Fluid B	Pentane, 2 MethylB	Pyrogard 42, 43, 53, 55 (Phosphate
Mustard Gas A	Pentane, 2-4 DimethylB	Ester) U
N	Pentane, 3 MethylB	Pyrogard, C, DB
	N-PentaneA	Pyrolingneous Acid U
Naptha U	Perchloric AcidB	PyrolubeU
Napthalene U	PerchloroethyleneU	PyrroleU
Naphthalenic AcidU	Petroleum Oil, CrudeB	R
Natural Gas A	Petroleum Oil, Below	<del></del>
Neatsfoot OilU	250°F(121.1°C)B	RadiationC
Neon A		Rapeseed OilB

	Spry	B	Tetrachloroethylene	U
Red Oil (MIL-H-5606) B	SR-6 Fuel	U	Tetraethyl Lead	C
Red Line 100 OilB	SR-10 Fuel	U	Tetraethyl Lead "Blend	."U
RJ-1 (MIL-F-25558) B	Standard Oil Mobilube GX90-EP		Tetrahydrofuran	U
RP-1 (MIL-R-25576)B	Lube	B	Tetralin	U
$\mathbf{S}$	Stannic Chloride		Texaco 3450 Gear Oil	U
	Stannic Chloride 50%		Texaco Capella A and AA	В
Sal Ammoniac	Stannous Chloride	A	Texaco Meropa #3	В
Salicylic Acid	Staulfer 7700	U	Texaco Regal B	
Salt Water A	Steam, Below 350°F (176.7°C)	U	Texaco Uni-Temp. Grease	
Santo Safe 300U	Steam, Above 350°F (176.7°C)	U	Texamatic "A" Transmission Oil	
SewageB	Stearic Acid		Texamatic 1581 Fluid	
Shell Alvania Grease #2 B	Stoddard Solvent	C	Texamatic 3401 Fluid	
Shell Carnea 19 and 29U	Styrene	U	Texamatic 3525 Fluid	
Shell Diala B	Styrene (Monomer)	U	Texamatic 3528 Fluid	
Shell Iris 905 A	Sucrose Solutions		Texas 1500 Oil	
Shell Iris 3XF Mine Fluid (Fire Resist.	Sulfite Liquors		Thiokol TP-908	
Hydr.) B	Sulfur		Thiokol TP-95	
Shell Iris Tellus #27, Pet. Base B	Sulfur Chloride		Thionyl Chloride	
Shell Iris Tellus #33B	Sulfur Dioxide, Wet		Tidewater Oil-Beedol	
Shell Iris UMF (5% Aromatic) B	Sulfur Dioxide, Dry		Tidewater Oil-Multigear 140, EP	Б
Shell Lo Hydrax 27 and 29 B	Sulfur Dioxide, Liquodified under	0	Lube	В
Shell Macoma 72B	pressure	U	Titanium Tetrachloride	
Silicate Esters A	Sulfur Hexaflouride		Toluene	
Silicone Greases A	Sulfur Liquors		Toluene Diisocyanate	
Silicone OilsA	Sulfur Molten		Transformer Oil	
Silver Nitrate A	Sulfur Trioxide			
Sinc; air Opaline CS-EP Lube B	Sulfuric Acid Dilute		Transmission Fluid Type A	
Skelly, Solvent B, C, EU			Triacetin	
Skydrol 500U	Sulfuric Acid Concentrated		Triayl Phosphate	
Skydrol 7000 U	Sulfuric Acid 20% Oleum		Tributoxyethyl Phosphate	
Soap Solutions A	Sulfuric Acid 3 Molar		Tributyl Mercaptan	
Socony Vacuum AMV AC781	Sulfurous Acid		Tributyl Phosphate	
(Grease) B	Sunoco SAE 10		Trichloroacetic Acid	
Socony Vacuum PD959B B	Sunoco #3661		Trichloroethane	
Soda AshA	Sunoco All Purpose Grease		Trichloroethylene	
Sodium AcetateB	Sunsafe(Fire Resist Hydr.Fluid)		Tricresyl Phosphate	
Sodium Bicarbonate (Baking Soda) A	Super Shell Gas		Triethanol Amine	
Sodium Bisulfite	Swan Finch EP Lube		Triethyl Aluminum	
Sodium Borate A	Swan Finch Hypoid-90	B	Triethyl Borane	U
Sodium Carbonate (Soda Ash) A	T		Triflouroethane	U
Sodium Chloride A	TT-N-95a	C	Trinitrotoluene	A
Sodium Cyanide A	TT-N-97B		Trioctyl Phosphate	U
Sodium HydroxideB	TT-I-735b		Tripoly Phosphate	В
Sodium HypochloriteB	TT-S-735, Type I		Tung Oil (China Wood Oil)	В
Sodium MetaphosphateB	TT-S-735, Type II		Turbine Oil	U
	TT-S-735, TypeIII		Turbine Oil #15 (MIL-L-7808A)	U
Sodium Nitrate	TT-S-735, Type IV		Turbine Oil #35	В
Sodium Perborate			Turpentine	
Sodium Peroxide	TT-S-735, Type V		Type I, Fuel (MIL-S-3136)	
Sodium Phosphate (Mono) B	TT-S-735, Type VI		Type II Fuel (MIL-S-3136)	
Sodium Phosphate (Dibasic)	TTT-656b		Type III Fuel (MIL-S-3136)	
Sodium Phosphate (Tribasic)B	Tannic Acid 100/		U	
Sodium Salts B	Tannic Acid, 10%			
Sodium Silicate	Tar Bituminous		Ucon Hydrolube J-4	
Sodium Sulfate	Tartaric Acid		Ucon Lubricant LB-65	
Sodium Sulfide A	Terpineol		Ucon Lubricant LB-135	A
Sodium Sulfite A	Tertiary Butyl Alcohol		Ucon Lubricant LB-285	
Sodium ThiosulfateA	Tertiary Butyl Catechol		Ucon Lubricant LB-300	
Sovasol #1, 2 and 3 B	Tertiary Butyl Mercaptan		Ucon Lubricant LB-625	A
Sovasol #73 and 74 B	Tetrabromomethane		Ucon Lubricant LB-1145	A
Soybean Oil A	Tetrabutyl Titanate	B	Ucon-Lubricant 50-HB55	A

Ucon-Lubricant 50-HB100	A
Ucon Lubricant 50-HB260	Α
Ucon Lubricant 50-HB660	
Ucon Lubricant 50-HB5100	
Ucon Oil LB-385	A
Ucon Oil LB-400X	Α
Ucon 50-HB-280X (Polyacrylon	
Glycol Deriv.)	
Univis 40 (Hydr. Fluid)	В
Univolt #35 (Mineral Oil)	В
Unsymmetrical Dimethyl Hydrazine	
	ъ
(UDMH)	D
${f V}$	
	_
VV-B-680	
VV-G-632	A
VV-G-671c	Α
VV-H-910	
VV-I-530a	
VV-K-211d	C
VV-K-220a	В
VV-L-751b	
VV-L-800	
VV-L-820b	
VV-L-825a, Type I	Α
VV-L-825a, Type II	٨
VV-L-825a, Type III	
VV-O-526	A
VV-P-216a	В
VV-P-236	
Varnish	
Vegetable Oil	C
Versilube	A
Vinegar	В
Vinyl Chloride	
•	U
$\mathbf{W}$	
Wagner 21B Brake Fluid	B
Water	
Wemco C	
Whiskey and Wines	A
White Pine Tar	П
** III to I III I III I III I I I I I I I	
White Oil	В
White Oil Wolmar Salt	B B
White Oil	B B
White Oil	B B A
White Oil	B B A
White Oil	B B A
White Oil	B A B
White Oil	B A B
White Oil	B B A B
White Oil	B B A B U U U
White Oil	B B A B U U U
White Oil	B B A B U U U
White Oil	B A B U U A
White Oil	B A B U U A
White Oil	B B A B U U U A
White Oil	B B A B U U U A A
White Oil	B B A B U U U A A B A
White Oil	B B A B U U U A A B A A

# CHAPTER 3 MAINTENANCE AND STORAGE

#### 3-1 GENERAL.

The major components and accessories of a MAXIFORCE® G2 Air Lifting Bag System require little maintenance to ensure optimum performance. However, this maintenance must be performed to ensure personnel and equipment safety, and the assurance that when the system is to be utilized, it will function as designed and intended. This chapter provides preventive and corrective maintenance procedures that are necessary to verify that the MAXIFORCE® G2 Air Lifting Bag System will operate satisfactorily.



Do not drag or drop the bag on the nipple area, as this can cause breakage of the brass inflation fitting and render the bag useless. **BREAKAGE OF THE BRASS INFLATION FITTING IS NOT COVERED UNDER WARRANTY.** 

#### 3-2 PREVENTIVE MAINTENANCE PLAN.

Preventive maintenance of the MAXIFORCE® G2 Air Lifting Bag System is accomplished in accordance with paragraphs 3-3 and 3-4.

#### 3-3 <u>POST OPERATION PREVENTIVE</u> MAINTENCE

Because of the contaminants present where a MAXIFORCE® Air Lifting Bag System is generally used (maintenance sites, construction sites, accident sites, etc.), it is important that the system components be thoroughly cleaned, inspected and prepared for their next use before being placed in storage.

#### 3-3.1 **CLEANING**



Do not use any petroleum based product to clean components of the MAXIFORCE® Air Lifting Bag System. Petroleum based products could adversely react with the non-metallic parts of the system components and

may result in a component failure when none should be expected or tolerated.

a. Keep the exterior of all components clean of all dirt, grit, oil and grease accumulations. Except for the lift bag(s), wipe the exterior surfaces with a lint free cotton machinery wiping towel LIGHTLY dampened with soap and warm water solution. Be particularly careful to remove all dirt, sand, grit, etc. from quick connect couplings and nipples. Swirl in a bucket with the soap and water solution until clean. Rinse with a wiping towel LIGHTLY dampened with clean water. Then dry the surfaces thoroughly with a clean, dry wiping towel or low pressure compressed air. Also clean the lift bag with a soap and warm water solution, but scrub the lift bag with a stiff bristle broom or brush and rinse by spraying with cold water. If the cleaning solution or rinse water gets into the lift bag through the nipple, allow the lift bag to dry thoroughly before its next use.

#### 3-3.2 **INSPECTION.**

- a. While the lift bag is still wet with the cleaning solution, inflate to 30 psi and check for air bubbles denoting a leak(s) including system quick connect safety couplings. Except for air leakage from between the air inlet fitting and the male nipple, replace rather than attempt to repair a leaking lift bag. If air leakage is detected from around the male nipple threads, proceed as follows:
  - 1. Deflate the lift bag.
  - 2. Disconnect the quick connect safety coupling from the lift bag male nipple.

WARNING

The nipple of the MAXIFORCE® G2 air bag has LEFT HANDED threads. When removing or installing a replaceable male nipple from/into a lift bag inlet fitting, be sure to hold the air bag over inlet fitting stationary while turning the male nipple. (LEFT HANDED) Allowing it to turn, will loosen its bond with the lift bag. During operation, this will result in air leakage or possibly the ejection of the fitting, resulting in a hazardous condition and rendering the lift bag useless.

3. Unscrew the lift bag **left handed** male nipple by inserting a 3/16" hex key into the hex

socket located in the air inlet hole of the fitting and rotating it **clockwise**. Be sure to hold the air bag over the inlet fitting stationary.

- 4. Clean the interfacing threads and inspect the male nipple for visual damage. If damaged, discard. If not damaged, install back into the inlet fitting by turning it counter-clockwise. The nipple is to be torqued to 84 in.\*lbs (7 ft.\*lbs).
- 5. Reconnect the lift bag to an air source, re-inflate to 30 psi and recheck for air leaks. If none are found, deflate the lift bag, disconnect the quick connect coupling and install the tethered protective cap over the male nipple in preparation for storage.
- b. After a lift bag is clean and dry, all surfaces should be thoroughly inspected for cuts, abrasion, air bubbles and bulges (ply separation), and other similar damage. Remove all debris from the surface. Minor surface cuts and abrasion can be repaired with rubber cement and should not be considered a problem unless they are deep enough to expose the Kevlar reinforcement layer.
- c. Inspect hose assemblies for cuts, cracks, crimps and brittleness. Inspect the hose quick connect safety coupling and nipple for secureness of attachment and burrs, nicks, corrosion and other similar damage that would prevent a leak proof interconnection. Install a G2 safety inline relief valve onto each hose end and turn the shut off knob cw (off). Apply 30 psi to the system and use a soapy water cleaning solution to check for air leaks (bubbles) around the quick connect safety couplings. Replace the couplings if bubbles are detected.
- d. Refer to the separate instruction manuals provided with the G2 pressure regulator and G2 controllers to inspect these components.
- e. If during the last three (3) months the MAXIFORCE® G2 Air Lifting Bag System and accessories have not been used for training or actual operational functions, they should be field tested to ensure they do not leak and are fully operational in preparation for their next use.

#### 3-3.3 **REPAIR**

The only repairs authorized on the MAXIFORCE® G2 Air Lifting Bag System components are those designated in the separate instruction manuals provided with the G2 pressure regulator and 150 psi ALB controllers G2, and the following procedures detailing replacement of the quick connect couplings and nipples.

- a. AIR HOSE NIPPLE REPLACEMENT. Refer to figure 3-1 and replace a worn or otherwise damaged air hose nipple in accordance with the following procedure.
  - 1. Square cut the air hose just behind the ferrule to

- release the nipple. Discard the nipple but the ferrule can be reused if not damaged.
- 2. Screw the ferrule counterclockwise fully onto the hose and back the ferrule out 1/2 turn. There should be approximately 1/16 inch clearance between the ferrule inside shoulder at the end of the hose.
- 3. Hold the ferrule stationary and turn the nipple clockwise into the ferrule until it is fully seated.

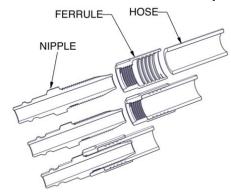


Figure 3-1. Air Hose Nipple Replacement

- b. AIR HOSE QUICK CONNECT COUPLING REPLACEMENT. Refer to figure 3-2 and replace a worn or otherwise damaged air hose quick connect coupling in accordance with the following procedure.
  - Square cut the air hose just behind the ferrule to release the quick connect coupling stem and the assembled ferrule (quick connect coupling). Discard the quick connect coupling but the ferrule can be reused if not damaged.
  - 2. Unscrew the ferrule from the quick connect coupling stem. Screw the ferrule, counterclockwise, fully onto the hose and back the 1/2 turn. There should be approximately 1/16 inch clearance between the ferrule inside shoulder at the end of the hose.
  - 3. Hold the ferrule stationary and turn the quick connect coupling stem clockwise into the ferrule until it is fully seated.

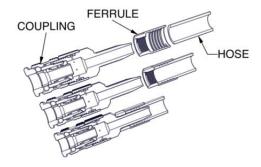


Figure 3-2. Air Hose Quick Connect Safety Coupling

#### Replacement

c. COMPONENT QUICK CONNECT COUPLING AND NIPPLE REPLACEMENT. The quick connect couplings and nipples assembled into the G2 pressure regulator, 150 psi ALB controllers G3 and the G2 safety inline relief valve are screw-type fittings. When their replacement is required, it is only necessary to unscrew the damaged part (quick connect safety coupling and/or nipple), remove and discard the "O" ring and screw in a replacement part using a new "O" ring. If an "O" ring is not used, be sure to wrap the male threads with two turns of teflon tape to assure a leak free connection.

#### 3-4 STORAGE.

- 3-4.1 Regardless of storage of the MAXIFORCE® G2 Air Lifting Bag System components at a stationary, mobile or at a movable facility requires the following:
- a. The short term (1 hour or less) temperature range must be within the limits of -75°F (-60°C) to +220°F (+105°C). The continuous temperature range must be within the limits of -40°F (-40°C) to +150°F (+65°C).
- b. The components must be protected from any extreme environmental conditions where blowing dust, sand, grit and other similar materials could cause damage. If these environmental conditions are likely to be encountered, plastic wrap all components for protection.
- c. Regardless of whether the lift bag(s) are to be stored flat or upright, the inlet nipple shall be covered with the tethered protective cap over the inlet nipple.
- 3-4.2 Additional storage requirements of the MAXIFORCE® G2 Air Lifting Bag System components are required in a truck or at a movable facility requires the following:
- a. System components designed for 150 psi operation (G3 pressure regulator, 150 psi ALB controller G3, G2 safety inline relief valve and other metallic items) that are stored in a truck compartment where they are subjected during transport to constant bumping will eventually be damaged. It is strongly recommended that these components be stored in their own cushioned cartons. It is further recommended that all components be strapped down, braced or otherwise secured within the compartment during transport.

## CHAPTER 4 PARTS LIST

4-1 **INTRODUCTION.** This chapter lists available standard and optional parts for the MAXIFORCE® Air Lifting Bag System. The parts list is used to identify and locate all repair parts, including all attaching hardware supplied. The parts should be ordered by part number when ordered from Paratech Incorporated, 1025 Lambrecht Road, Frankfort, Illinois 60423-7000.

#### 4-2 LIST OF MAJOR COMPONENTS.

The MAXIFORCE® Air Lifting Bag System is comprised of the user selected major components denoted in table 41.

Figure 4-2 Index Number	Qty	Component Name	Page No.
1-2	1	Air Source	4-2
3-4	1	G3 Pressure Regulator	4-2
5-6	1	G3 Controller	4-3
7	1	Air Hose	4-3
8-21	1	G2Lift Bag	4-4
22	1	Safety Inline Relief Valve	4-5
37-72	1	Adapters and Fittings	4-6
73-75	1	Rachet and Belt, and Lift Slings	4-8
76-82	1	Miscellaneous	4-9

Table 4-1. List of Major Components

#### 4-3 PARTS LIST TABLES.

The MAXIFORCE® Air Lifting Bag System parts are listed in table 4-2. The table contains five columns which are described below:

## 4-3.1 FIGURE AND INDEX NUMBER COLUMN.

This column shows the figure and index number of each part listed. Table 4-2 relates to illustrations contained in chapter 4. The index numbers which identify the individual parts are separated from the figure number by a hyphen. Index numbers run consecutively.

- 4-3.2 **DESCRIPTION COLUMN.** The DESCRIPTION column describes each part (by noun name and modifiers) in sufficient detail for clarity. Descriptions are successively indented to the right to show assembly and part relationship.
- 4-3.3 **QUANTITY COLUMN.** Quantities specified in the QUANTITY column are the total number of each part required per assembly.
- 4-3.4 **CAGE COLUMN.** The assembly and parts are identified by the five digit code 30978. The code number, in accordance with Federal Supply Cataloging Handbook H-4-1, identifies Paratech Incorporated, 1025 Lambrecht Road, Frankfort, IL 60423-7000 as the manufacturer of all parts.
- 4-3.5 **PART NUMBER COLUMN.** The part number column contains an identifying number for each part listed. Vendor numbers are shown where applicable.

#### 4-4 LIST OF MANUFACTURERS.

Manufacturer's (vendor's) code number (30978) used in parts list tables is in accordance with Federal Supply Cataloging Handbook H-4-1 and identifies Paratech Incorporated, 1025 Lambrecht, Road, Frankfort, IL 60423-7000 as the manufacturer of all parts.

Table 4-2 MAXIFORCE Lifting Bag System Components Parts List

Figure and Index Number	Description	Quantity	CAGE	Part Number		
	AIR SOURCE	1	20070	000012		
4-2-1	AIR CYLINDER, With valve and gauge, 13 cu ft (368 litres)	1	30978	800013		
-1 -2	AIR CYLINDER, With valve and gauge, 80 cu ft (2,265 litres)  MANUAL AIR COMPRESSOR (hand/foot pump)	1 1	30978 30978	800080 800400		
	1 G3 PRESSURE REGULATORS	2	20050	00540453		
4-2-3	PRESSURE REGULATOR, Piston Type, 5500 to 215 psi (379 to 14.8 bar), CGA 346/347 inlet	1	30978	895401G3		
-4	PRESSURE REGULATOR, Piston Type, 5500 to 215 psi	1	30978	895401DG3		

Figure and Index Number	Description	Quantity	CAGE	Part Number
	G3 CONTROLLERS			
-6	CONTROLLER, Dual "Deadman" 150 psi ALB Controller G3	1	30978	890900G3-150




	AIR HOSE			
4-2-7	AIR HOSE, Black, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long	1	30978	890513
-7	AIR HOSE, Blue, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long	1	30978	890514
-7	AIR HOSE, Yellow, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long	1	30978	890515
-7	AIR HOSE, Red, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long	1	30978	890516
-7	AIR HOSE, Green, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long	1	30978	890517
-7	AIR HOSE, Grey, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long	1	30978	890518
-7	AIR HOSE, Black, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long	1	30978	890522
-7	AIR HOSE, Blue, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long	1	30978	890523
-7	AIR HOSE, Yellow, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long	1	30978	890520
-7	AIR HOSE, Red, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long	1	30978	890521
-7	AIR HOSE, Green, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long	1	30978	890524
-7	AIR HOSE, Grey, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long	1	30978	890525
-7	AIR HOSE, Black, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long	1	30978	890546
-7	AIR HOSE, Blue, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long	1	30978	890543
-7	AIR HOSE, Yellow, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long	1	30978	890542
-7	AIR HOSE, Red, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long	1	30978	890541
-7	AIR HOSE, Green, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long	1	30978	890544
-7	AIR HOSE, Grey, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long	1	30978	890545



7

Figure and Index Number	Description	Quantity	CAGE	Part Number
	LIFT BAGS (See Table 1-1 for Physical Characteristics)			
4-2-8	LIFT BAG, Model KPI-1, 1.5 ton (1,360 kg) capacity	1	30978	888110G2
-9	LIFT BAG, Model KPI-3, 3.5 ton (3,175 kg) capacity	1	30978	888120G2
-10	LIFT BAG, Model KPI-5, 5.4 ton (4,898 kg) capacity	1	30978	888130G2
-10	LIFT BAG, Model KPI-8, 8.2 ton (7,438 kg) capacity	1	30978	888135G2
-11	LIFT BAG, Model KPI-10, 12.9 ton (11,702 kg) capacity	1	30978	888138G2
-12	LIFT BAG, Model KPI-10, 12.9 toli (11,702 kg) capacity  LIFT BAG, Model KPI-12, 13.7 ton (12,428 kg) capacity	1	30978	888140G2
-13	LIFT BAG, Model KPI-12, 13.7 toll (12,428 kg) capacity  LIFT BAG, Model KPI-17, 19.0 ton (17,236 kg) capacity	1	30978	888150G2
-14	LIFT BAG, Model KPI-17, 19.0 toll (17,230 kg) capacity	1	30978	888160G2
-16	LIFT BAG, Model KPI-28, 34.0 ton (30,844 kg) capacity	1	30978	888165G2
-17	LIFT BAG, Model KPI-32, 38.0 ton (34,437 kg) capacity	1	30978	888170G2
-18	LIFT BAG, Model KPI-35L, 39.5 ton (35,833 kg) capacity	1	30978	888180G2
-19	LIFT BAG, Model KPI-44, 52.7 ton (47,808 kg) capacity	1	30978	888190G2
-20	LIFT BAG, Model KPI-55, 69.7 ton (63,230 kg) capacity	1	30978	888195G2
-21	LIFT BAG, Model KPI-74, 89.2 ton (80,920 kg) capacity	1	30978	888200G2
8	9 10 12 13 14			
17			5	21
	LIFT BAG SETS			
	LIFT BAG SET, 3 Bag, 91.0 U.S. ton (82.6 metric ton)	1	30978	889048G2
	(consists of 1 each of index numbers: 14, 16, 17)			
	LIFT BAG SET, 5 Bag, 102.9 U.S. ton (93.4 metric ton)	1	30978	889050G2
	(consists of 1 each of index number: 13 and 2 each of item			
	number: 14, 15)			
	LIFT BAG SET, 5 Bag, 117.5 U.S. ton (106.6 metric ton)	1	30978	889052G2
	(consists of 1 each of index number: 9 and 2 each of item			
	numbers: 14, 17)	1	20070	00000202
	LIFT BAG SET, 9 Bag, 151.3 U.S. ton (137.2 metric ton)	1	30978	889092G2
	(consists of 1 each of index number: 8, 9, 10, 13, 17 and 2 each of item number: 14, 15)			
	cach of item number. 14, 13)			

Figure and Index Number	Description	Quantity	CAGE	Part Number
	LIFT BAG SETS (Continued) LIFT BAG SET, 8 Bag, 218.4 U.S. ton (198.0 metric ton) (consists of 1 each of index numbers: 13, 18 and 2 each of	1	30978	889117G2
	index numbers: 14, 15, 17) LIFT BAG SET, 11 Bag, 242.2 U.S. ton (219.4 metric ton) (consists of 1 each of index number: 8, 9, 10, 13, 19; and 2	1	30978	889136G2
	each of index numbers: 14, 15, 17) LIFT BAG SET, 8 Bag, 285.8 U.S. ton (259 metric ton) (consists of 1 each of index number: 13, 18 and 2 each of	1	30978	889140G2
	index numbers: 15, 17, 19) LIFT BAG SET, 7 Bag, 277.7 U.S. ton (251.8 metric ton) (consists of 1 each of index number: 13, 14, 15, 17, 18, 19,	1	30978	889234G2
	21) LIFT BAG SET, 10 Bag, 288.1 U.S. ton (261.2 metric ton) (consists of 1 each of index numbers: 8, 9, 10, 13, 14, 15,	1	30978	889245G2
	17, 18, 19, 21) LIFT BAG SET, 14 Bag, 412.9 U.S. ton (374.6 metric ton) (consists of 1 each of index numbers: 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21)	1	30978	889346G2
4-2-22	SAFETY INLINE RELIEF VALVE RELIEF VALVE, Safety inline, 165 psi (11.4 bar)	1	30978	890490-150

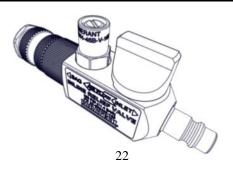

	ADAPTERS AND AIR FITINGS			
4-2-23	NIPPLE, 1/4 inch NPTM (fits MAXIFORCE and Vetter)	1	30978	890667
-24	NIPPLE, 1/8 inch NPTM (fits MAXIFORCE and Vetter)	1	30978	890668
-25	NIPPLE, 1/8 inch NPTM	1	30978	890683
-26	NIPPLE, 1/4 inch NPTF	1	30978	890682
-27	NIPPLE, 1/4 inch NPTM	1	30978	890681
-28	NIPPLE, 1/2 inch NPTF	1	30978	890685
-29	NIPPLE, 1/2 inch NPTM	1	30978	890684
-30	NIPPLE, 3/8 inch NPTF	1	30978	890777
-31	NIPPLE, 3/8 inch NPTM	1	30978	890718
-32	NIPPLE, ALB 3/8-24 LH thread	1	30978	890686
-33	NIPPLE, Strut Inlet 1/8 inch NPSM	1	30978	796065
-34	NIPPLE, 3/8 inch hose stem.	1	30978	890691
-35	NIPPLE, 3/8 inch (9.5 mm) hose, locking	1	30978	890672
-36	NIPPLE, 3/8 inch hose stem with ferrule	1	30978	890691 & 90624

	Descri	ption		Quantity	G A GE	Part
	Descri	ption		Quantity	CACE	
				Quantity	CAGE	Number
						Number
ADADTE	ERS AND AIR	EITINGS (C	antinuad)			
PROTECTOR, Ni		,		1	30978	890695
			30978	890709T		
	PROTECTOR, Nipple G2					8907091 890711V
·						890711V 890712V
						890703V
						890704V 890721AV
		_				
						890716V
·						890714V
						890700V
·						890700AV
·						890720V
						890710V
<i>'</i>						890673
						890675
						890674
FERRULE, for 3/	8" hose stem			1		890624
NIPPLE, Double	male			1	30978	890730
24	25	26	27	28	29	30
1 32	33	34	35	36	37	38
	41	42	43	44	45	46
48	49	50	51	52	53	54
	COUPLING, 1/4 COUPLING, 1/4 COUPLING, 1/4 COUPLING, 1/4 COUPLING, 3/8 COUPLING, 3/8 COUPLING, 3/8 COUPLING, 3/8 COUPLING, 3/8 COUPLING, 1/2 FITTING, 3/8 inc FITTING, 3/8 inc FITTING, 3/8 inc FITTING, 3/8 inc FERRULE, for 3/ NIPPLE, Double  23 24	COUPLING, 1/4 inch NPTF COUPLING, 1/4 inch NPSM oper COUPLING, 1/4 inch NPSM oper COUPLING, 1/4 inch NPSM with COUPLING, 3/8 inch NPTF COUPLING, 3/8 inch NPTM COUPLING, 3/8 inch hose stem COUPLING, 3/8 inch hose stem COUPLING, 1/2 inch NPTF COUPLING, 1/2 inch NPTM FITTING, 3/8 inch (9.5 mm) hose FITTING, 3/8 inch (9.5 mm) hose FITTING, 3/8 inch (9.5 mm) hose FERRULE, for 3/8" hose stem NIPPLE, Double male	COUPLING, 1/4 inch NPTF	COUPLING, 1/4 inch NPTF	COUPLING, 1/4 inch NPTM	COUPLING, 1/4 inch NPTF

Ei anna				
Figure				Part
and Index	Description	Quantity	CAGE	Number
Number				Number
Tullioci	ADAPTERS AND AIR FITINGS (Continued)			
-55	NIPPLE, Industrial double male with valve	1	30978	890732
-56	NIPPLE, Male and locking tire chuck.	1	30978	890731
-57	NIPPLE AND GLAD HAND.	1	30978	890734
-58	Y, With two 1/4 inch NPTM couplings	1	30978	890735
-59	Y, With two 1/4 inch NPTM couplings and MAXIFORCE nipple	1	30978	890736
-60	Y, with three couplings	1	30978	890740
-61	NIPPLE, Male and tire valve inflator	1	30978	890737
-62	NIPPLE, Male and 12 inch (30.5 cm) hose and clamp	1	30978	890737
-63	NIPPLE, With industrial twist lock and valve	1	30978	890749
-64	COUPLING, Industrial, 1/4 inch NPTF	1	30978	890751
-65	COUPLING, Industrial, 1/4 inch NPTM	1	30978	890752
-66	NIPPLE, Industrial, 1/8 inch NPTM	1	30978	890760
-67	NIPPLE, Industrial, 1/4 inch NPTM	1	30978	890761
-68	NIPPLE, Industrial, 3/8 inch NPTM	1	30978	890762
-69	NIPPLE, Industrial, 1/4 inch NPTF.	1	30978	890763
-70	ADAPTER, CGA-346 high pressure air and CGA-580 nitrogen	1	30978	895380
-71	CONNECTOR, Dual tank, with check valves, CGA-346/347	1	30978	800130
-72	CONNECTOR, Dual tank, with check valves, DIN fittings	1	30978	800135
5	55 56 57 58 58 64 64 667	59	6	60
	67 68 69 70 72 71			

Figure and Index Number	Description	Quantity	CAGE	Part Number
	MISCELLANEOUS			
4-2-76	SHEET, Neoprene, 20 in. (508 cm) x 20in. (50.8 cm)	1	30978	890466
4-2-70	x 1/8 in (0.32 cm)			
-77	STORAGE CASE, 13 x 6 x 4.75 in. (33 x 15.2 x 12.1 cm)	1	30978	000905
-78	STORAGE CASE, CUSTOM U.S., master control package	1	30978	890337
	Exterior = $24.83 \times 19.69 \times 11.88 \text{ in.}$ (63.07 x 50.01 x 30.18 cm)			
-79	150 PSI MASTER CONTOL KIT G2 INSERT	1	30978	890324
-80	LABEL, 150 PSI VIEW PARTS G2	1	30978	890150G2L
-80	LABEL, 10 BAR VIEW PARTS G2 DIN	1	30978	890150G2DL
-81	DVD VIDEO, MAXIFORCE TRAINING	1	30978	890000
-82	TIRE CHUCK, Locking 1/4 NPTF	1	30978	890750
			-	

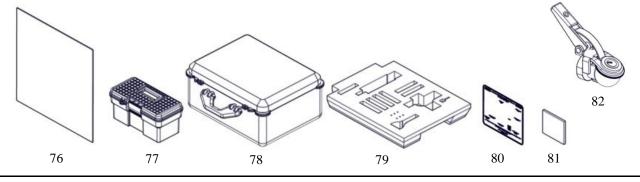


Figure and Index Number	Description	Quantity	CAGE	Part Number
	CONTROL PACKAGES			
	CONTROL KIT, U.S. (consists of 1 of each item number: 3, 6, 7 [16 ft black], 7 [16 ft yellow], 7 [16 ft red])	1	30978	890351G2-150
	CONTROL KIT, Metric (consists of 1 of each item number: 4, 6, 7 [16 ft black], 7 [16 ft yellow], 7 [16 ft red])	1	30978	890351G2D-10
	VEHICLE MAINTENANCE KIT, (consist 1 of each item number: 6, 7 [16 ft black], 7 [16 ft yellow], 7 [16 ft red]; 2 each of	1	30978	889360G2-150
	index number: 19, 22)  MASTER CONTROL KIT, U.S. (consists of 1 each of index	1	30978	890300G2-150
	7 [16 ft red], 7 [16 ft green], 55, 56, 63, 78, 79, 80; 2 each of index number: 26, 59; 4 each of index number: 22, 32)  MASTER CONTROL KIT, Metric (consists of 1 each of index number: 4, 6, 7 [16 ft black], 7 [16 ft blue], 7 [16 ft yellow], 7 [16 ft red], 7 [16 ft green], 55, 56, 63, 78, 79, 80; 2 each of index number: 26, 59; 4 each of index number: 22, 32)	1	30978	890300G2D-10
	US&R LIFT BAG KITS US&R LIFT BAG KIT, (consists of 1 each of index number: 3, 6,	1	30978	889351G2-150
	7 [16 ft black], 7 [16 ft blue], 7 [16 ft yellow], 7 [16 ft red], 7 [16 ft green], 14, 16, 18, 19, 55, 56, 63, 78, 79, 80; 2 each of index number: 8, 9, 10, 13, 21, 26, 59; 4 each of index number: 32; 14 each of index number: 22)	-		
	US&R LIFT BAG KIT, (consists of 2 each of index number: 3, 6, 7 [16 ft black], 7 [16 ft blue], 7 [16 ft yellow], 7 [16 ft red], 7 [16 ft green], 14, 16, 18, 19, 55, 56, 63, 73, 79, 80; 4 each of index number: 8, 9, 10, 13, 21, 26, 59; 8 each of index number: 32;28 each of index number: 22)	1	30978	889350G2-150
	PNEUMATIC COMPONENTS AND ADAPTER KIT PNEUMATIC COMPONENTS AND ADAPTER KIT	1	30978	890729

#### 4-5 <u>EXPLODED ASSEMBLIES</u>

The following figures illustrate the various components of the two controllers and one pressure regulator used with the MAXIFORCE® Air Lifting Bag System. They are accompanied by their parts lists for easy identification and individual components.

Any repairs of these assemblies should be performed according to the specifications documented in their own Operation and Maintenance Manuals obtained from Paratech Incorporated, 1025 Lambrecht Road, Frankfort Illinois, 60423-7000 U.S.A.

## 4-5.2 **DUAL "DEADMAN" 150 PSI ALB CONTROLLER G3**

Item Number	Description	Quantity	CAGE	Part Number
1	BODY, DUAL DEADMAN ALB G3	1	30978	890890B
2	O-RING, (5/32 X .070) BN70	2	30978	890488
3	GAUGE 1.5" 150 PSI 1/8 BACK MT	2	30978	890605
4	GAUGE BASE FOR G3 CONTROLLERS	2	30978	890860
5	BELLEVILLE DISC SPR .406" ID	2	30978	890499
6	1/8 NPS X ½ X 1/8 HEX PANEL NUT	2	30978	890491
7	M47 X 10 BTNHD TORX SS	8	30978	670378
8	VALVE, CLIPPARD MJV-2C	4	30978	891096
9	CLIPPARD VALVE, BAND SEAL	2	30978	891093
10	SPL RET RING FOR 5/8 BORE SS	4	30978	670380
11	Ø1/4" BRASS BALL	6	30978	895419
12	5/16-24 X 5/16' SCH SET SCR SS	6	30978	890893
13	SPRING, C0480-038-0500-S	4	30978	891095
14	CARTRIDGE VALVE BUTTON G3 GRN	2	30978	890861G
15	CARTRIDGE VALVE BUTTON G3 RED	2	30978	890861R
16	VENT RELIEF VALVE, 155 PSI	2	30978	890588
17	DEADMAN GAUGE LIGHT G3	1	30978	890862
18	DUAL DEADMAN BUTTON PLATE G3	1	30978	890863
19	CPLG 1/4-20 NPS OPEN VENT ASM	3	30978	890703V
20	LABEL, G3 RED DOWN ARROW	2	30978	890864
21	LABEL, DUAL D ALB BUTTON PLATE	1	30978	890866
22	LABEL, DUAL DEADMAN BACK	1	30978	890867
23	LABEL, DUAL DEADMAN ALB FRONT	1	30978	890865

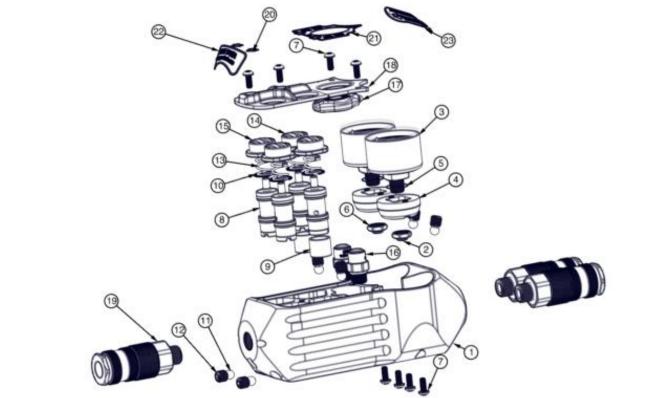


Figure 4-2. Dual "Deadman" 150 psi ALB Controller G3

#### 4-5.3 CGA G3 PRESSURE REGULATOR

Item Number	PRESSURE REGULATOR  Description	Quantity	CAGE	Part Number
1	BODY, REGULATOR G3, PRESET ALB	Quantity	30978	895423
2	CARTRIDGE HOUSING, REG	1	30978	895413
3	SEAT, MAIN CARTR. REGULATOR	1	30978	895413 895412
4	O-RING AS-010 (1/4 X .070) BN90	1	30978	895513
5	SPACER FOR CARTRIDGE	1	30978	895414
6	FILTER, SINTER, FOR REGULTR.	1	30978	895415
7	NEEDLE, MAIN REG VALVE, CARTR	1	30978	895411
8	SPRING, NEEDLE VALVE.	1	30978	895222
9	BALL, 5/32 440C GRADE 24.	1	30978	891135
10	END CAP CARTRIDGE.	1	30978	895416
11	O-RING AS-015 90BN (9/16X.070).	1	30978	890252
12	PISTON, PRESET REG	1	30978	895317
13	O-RING AS-121 1-1/16X.103 BN70		30978	895247
14	PIN, DISC GUIDE REG	1	30978	895325
15	DISC SPRNG 20X10.2X1MM L=1.55	10	30978	895273
16	REGULATOR END CAP, PRESET G3	1	30978	895329
17	ADJUSTING SCR, PRESET	1	30978	895321
18	KNOB, ON/OFF REGULATOR G3	1	30978	890498
19	SPRING PIN 3/32 X 5/16 S.S	1	30978	890935
20	O-RING AS-013 (7/16X.070) BN70.	2	30978	550174
21	O-RING 5/16X.070 POLYURETH. 90	2	30978	890489
22	Ø1.25 INT RETAINING RING SS.	1	30978	895218
23	Ø1" POROUS MEDIA DISC	1	30978	796V48
24	Ø1" LD INT RET RING SS	1	30978	796V43
25	Ø1/4" BRASS BALL	2	30978	895419
26	5/16-24 X 5/16 SCH SET SCR SS	2	30978	890893
27	NIPPLE 5500PSI CGA 347 SHORT.	1	30978	895334
28	NUT, 5500PSI CGA 347 SHORT	1	30978	895336
29	RET. CRESCENT RING 1/2" SHAFT.	1	30978	015779
30	O-RING 1/4X.070 POLYURETHANE90	1	30978	550195
31	NIPPLE WITH 1/4 NPTM	1	30978	890681
32	VENT RELIEF VALVE, 250 PSI	1	30978	890250
33	LABEL, Ø1.5" PLATE COVER	1	30978	895328
34	ROUND LABEL ON, GREEN G3	_	30978	895ON
35	ROUND LABEL OFF, RED G3		30978	895OFF
36	LABEL FOR G3 REGULATOR	1	30978	895401G3L
37	LABEL BACK PRESET	1	30978	895401G3L1

## 4-5.3 CGA G3 PRESSURE REGULATOR (Continued)

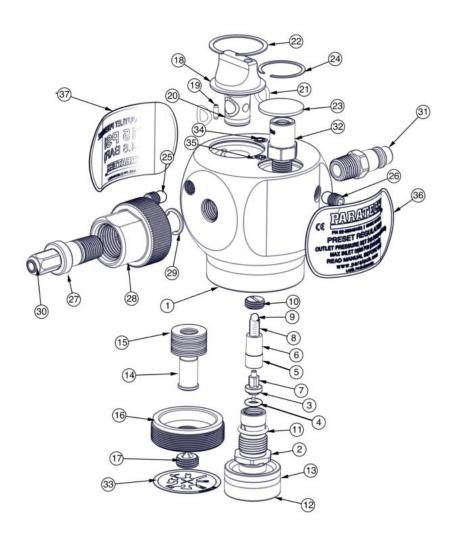


Figure 4-3 CGA G3 Pressure Regulator

## 4-5.4 **DIN G3 PRESSURE REGULATOR**

Item Number	Description	Quantity	CAGE	Part Number
1	BODY, REGULATOR G3, PRESET ALB	1	30978	895410
2	CARTRIDGE HOUSING, REG		30978	895413
3	SEAT, MAIN CARTR. REGULATOR	1	30978	895412
4	O-RING AS-010 (1/4 X .070) BN90	1	30978	895513
5	SPACER FOR CARTRIDGE	1	30978	895414
6	FILTER, SINTER, FOR REGULTR	1	30978	895415
7	NEEDLE, MAIN REG VALVE, CARTR	1	30978	895411
8	SPRING, NEEDLE VALVE	1	30978	895222
9	BALL, 5/32 440C GRADE 24	1	30978	891135
10	END CAP CARTRIDGE	1	30978	895416
11	O-RING AS-015 90BN (9/16X.070)	1	30978	890252
12	PISTON, PRESET REG	1	30978	895317
13	O-RING AS-121 1-1/16X.103 BN70	1	30978	895247
14	PIN, DISC GUIDE REG	1	30978	895325
15	DISC SPRNG 20X10.2X1MM L=1.55	10	30978	895273
16	REGULATOR END CAP, PRESET G3	1	30978	895329
17	ADJUSTING SCR, PRESET	1	30978	895321
18	KNOB, ON/OFF REGULATOR G3	1	30978	890498
19	SPRING PIN 3/32 X 5/16 S.S	1	30978	890935
20	O-RING AS-013 (7/16X.070) BN70	2	30978	550174
21	O-RING 5/16X.070 POLYURETH. 90	2	30978	890489
22	Ø1.25 INT RETAINING RING SS	1	30978	895218
23	Ø1" POROUS MEDIA DISC	1	30978	796V48
24	Ø1" LD INT RET RING SS	1	30978	796V43
25	Ø1/4" BRASS BALL	2	30978	895419
26	5/16-24 X 5/16 SCH SET SCR SS	2	30978	890893
27	GAUGE 1.5" 6000 PSI 1/8 BACK MT	1	30978	890596
28	GAUGE HOUSING REGULATOR G3	1	30978	890957
29	M47 X 10 BTNHD TORX SS	2	30978	670378
30	NIPPLE WITH 1/4 NPTM	1	30978	890681
31	VENT RELIEF VALVE, 250 PSI	1	30978	890250
32	NIPPLE - DIN	1	30978	895367
33	NUT, 5500 PSI DIN	1	30978	895353
34	O-RING AS-111 7/16X.103 BN70	1	30978	891154
35	LABEL, Ø1.5" PLATE COVER	1	30978	895328
36	ROUND LABEL ON, GREEN G3	1	30978	895ON
37	ROUND LABEL OFF, RED G3	1	30978	895OFF
38	LABEL, REGULATOR ALB PRESET DIN	1	30978	895401DG3L
39	LABEL, INLET PRESSURE	1	30978	895101

## **DIN G3 PRESSURE REGULATOR (Continued)**

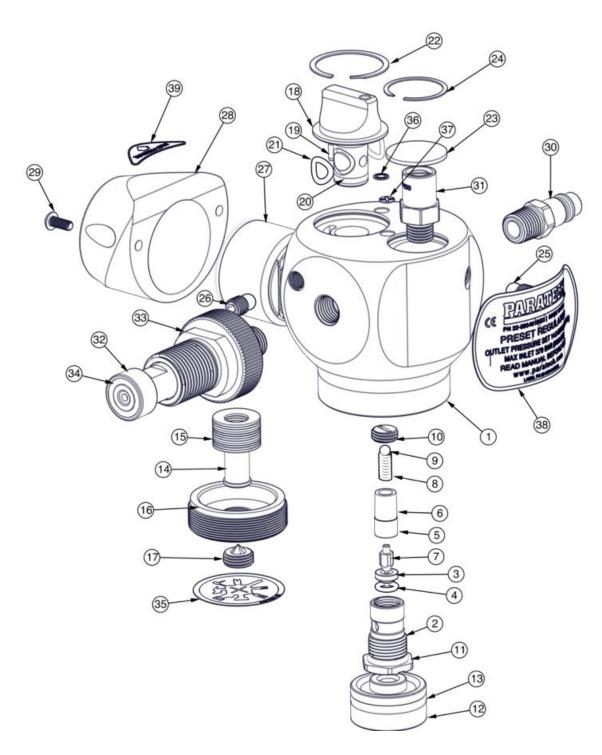


Figure 4-4 DIN G3 Pressure Regulator

## **MAXIFORCE G2 WARRANTY**

Each MAXIFORCE G2 or component thereof, manufactured by Paratech Incorporated, has been thoroughly inspected and properly adjusted before shipment to insure the highest quality and the greatest possible reliability.

Paratech Incorporated (hereinafter referred to as "Seller") hereby warrants the MAXIFORCE G2 or component thereof to the original retail buyer only against defects in material and workmanship under normal use and service for a period of 3-years from the date of purchase. This warranty shall constitute the sole warranty of the Seller with respect to the MAXIFORCE G2 or component thereof. THE SELLER HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. The Seller neither assumes nor authorizes any other person to assume for it any other obligations or liabilities in connection with the sale or use of this product.

Should there be any defects in the material or workmanship of the MAXIFORCE G2, buyer should return the defective product to the factory for inspection with shipping prepaid, within 3-years of the date of purchase, and a copy of original receipt. If inspection shows that the MAXIFORCE G2 or a component thereof is defective and that such defects were not caused by negligence, misuse, accident or unauthorized service, the product sold hereunder will be repaired or replaced at the option of the Seller, without charge, FOB at the factory, Frankfort, Illinois.

THIS REMEDY SHALL BE THE EXCLUSIVE REMEDY FOR BREACH OF WARRANTY WITH RESPECT TO THE MAXIFORCE G2 OR COMPONENTS THEREOF. THE SELLER SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY WITH RESPECT TO THE MAXIFORCE G2 AND COMPONENTS THEREOF FROM ANY DELAY IN THE PERFORMANCE OF THE REMEDY HEREUNDER.



PARATECH INCORPORATED P.O. BOX 1000 1025 LAMBRECHT ROAD FRANKFORT, ILLINOIS 60423-7000

TELEPHONE (815) 469-3911 FAX (815) 469-7748