



# OPERATION, PREVENTIVE MAINTENANCE AND PARTS SUPPORT MANUAL

FOR

## MAXIFORCE® G3 AIR LIFTING BAG SYSTEM

**20 APRIL 2024**

**PN 22-890800G3**

Paratech Incorporated  
P.O. Box 1000, Frankfort, IL 60423 USA  
Customer Service: 800.435.9358  
Phone: 815.469.3911 Fax: 815.469.7748  
www.paratech.com E-mail: paratech@paratech.us

Paratech Europe, Branch of Paratech Inc.  
P.O. Box 174, 5260 Odense S, Denmark  
www.paratech.com Email: Paratech@paratech.dk





## LIST OF EFFECTIVE PAGES

Date of original pages is:

Original.....0.....20 April 2024

Total number of pages in this publication is 54 consisting of the following:

Page No.	*Change No.	Page No.	*Change No.
Title and A.....0		1-1 through 1-9.....0	
Change Record.....0		1-10 blank.....0	
Change Record-2 blank.....0		2-1 through 2-15.....0	
Validation Certificate.....0		2-16 blank.....0	
Foreward-1.....0		3-1 through 3-3.....0	
Forward-2 blank.....0		3-4 blank.....0	
i. through v.....0		4-1 through 4-13.....0	

\* Zero in this column indicates an original page.

## VALIDATION CERTIFICATE

---

**TECHNICAL MANUAL TITLE**

OPERATION, PREVENTIVE MAINTENANCE AND PARTS SUPPORT MANUAL FOR  
MAXIFORCE® G3 AIR LIFTING BAG SYSTEMS.

---

**TECHNICAL MANUAL NUMBER**

P/N 22-890800G3

---

**DATE**

20 APRIL 2024

---

**CONTRACT/NO.**

---

**I – VALIDATION**

Except as stated in II, the technical manual identified above has been satisfactorily validated in accordance with all requirements of the applicable contract. The technical manual is hereby certified to be accurate and complete, and the information, instruction, text, and illustration conform in all respects to the applicable general and detailed specifications.

**II – EXCEPTIONS****EXCEPTIONS**

NONE

**AUTHORIZED BY**

**Kenneth Nielsen, Chief Operating Officer**

**Paratech Incorporated  
1025 Lambrecht Drive  
Frankfort, IL 60423**

---

**SIGNATURE OF PUBLICATIONS QUALITY ASSURANCE OFFICER**

---

**DATE**

SIGNATURE ON FILE

---

QAP20/002/B

**Change Record**

<b>Change No.</b>	<b>Date</b>	<b>Title or Brief Description</b>	<b>Signature of Validating Officer</b>

QAP20/003/B



## FOREWORD

This technical manual conforms to Military Specifications MIL-M-38784 General Style and Format Requirements, MIL-M-7298 Commercial Equipment Technical Manual and MIL-M-15071 Equipment and Systems Content Requirements for Technical Manuals. The manual contains description, operating instructions, theory of operation, scheduled maintenance recommendations and parts lists for MAXIFORCE® G3 Air Lifting Bag Systems manufactured by Paratech Incorporated, 1025 Lambrecht Road, Frankfort, Illinois 60423-7000.

All pertinent data relative to the MAXIFORCE® G3 Air Lifting Bag Systems is contained herein without specific reference to other publications. Refer to the table of contents for the arrangement of the contents within this publication.

This manual consists of one volume arranged in four chapters as follows:

Chapter 1 - General Information and Safety Precautions

Chapter 2 - Operation

Chapter 3 - Scheduled Maintenance

Chapter 4 - Parts List





## TABLE OF CONTENTS

Chapter/Para	Title	Page
1	GENERAL INFORMATION AND SAFETY... 1-1	
	FIRST PROCEDURES	
1-1	Safety Precautions.....	1-1
1-2	Scope of Manual.....	1-1
1-3	Arrangement.....	1-1
1-4	Equipment Function.....	1-1
1-5	Interrelationship of Components.....	1-1
1-6	Equipment Description.....	1-3
1-7	Reference Data.....	1-7
1-8	Equipment, Accessories and.....	1-7
	Documents	
2.	OPERATION.....	2-1
2-1	Introduction.....	2-1
2-2	System Functional Operation.....	2-1
2-3	Component Interconnection Prior.....	2-1
	to Inflation	
2-4	Normal Operating Procedure During.....	2-3
	Inflation	
2-5	Changing Air Cylinders.....	2-4
2-6	Normal Operating Procedure During.....	2-4
	Deflation	
2-7	Component Disconnection After.....	2-4
	Deflation	
2-8	Applications.....	2-5
2-9	Lift Bag Chemical Compatibility.....	2-8
3.	MAINTENANCE AND STORAGE.....	3-1
3-1	General.....	3-1
3-2	Preventative Maintenance Plan.....	3-1
3-3	Post Operational Preventative.....	3-1
	Maintenance	
3-4	Storage.....	3-3
4.	PARTS LIST.....	4-1
4-1	Introduction.....	4-1
4-2	List of Major Components.....	4-1
4-3	Parts List Tables.....	4-1
4-4	List of Manufacturers.....	4-1
4-5	Exploded Assemblies.....	4-10
	Controllers and Regulators	

## LIST OF TABLES

Table	Title	Page
1-1	MAXIFORCE® G3 Air Lifting Bag Reference Data.....	1-7
4-1	List of Major Components.....	4-1
4-2	MAXIFORCE® G3 Air Lifting Bag System Components Parts List.....	4-2

## LIST OF FIGURES

Figure	Title	Page
1-1	MAXIFORCE® G3 Air Lifting Bag System.....	1-2
1-2	MAXIFORCE® G3 Lift Bag.....	1-3
1-3	G3 Pressure Regulator.....	1-4
1-4	G3 Pressure Regulator, DIN.....	1-4
1-5	Dual “Deadman” 180 psi ALB Controller G3...	1-5
1-6	Manual Compressor.....	1-6
1-7	Air Cylinder.....	1-6
1-8	Hoses.....	1-6
1-9	G3 Inline Relief Valve.....	1-6
2-1	Quick Connect Coupling Safety Locking Ring	2-2
2-2	Typical Applications .....	2-6
2-3	Correct Method of Safety Cribbing/Bracing.....	2-7
2-4	Lift Bag Stacking and Tandem Combinations...	2-7
2-5	Correct Method for Inflating Stacked Lift Bags..	2-8
2-6	Using Two Lift Bags to Lift Cylindrical.....	2-8
	Objects	
3-1	Air Hose Nipple Replacement.....	3-2
3-2	Air Hose Quick Connect Coupling.....	3-2
	Replacement	
4-2	Dual “Deadman” 180 psi ALB Controller G3...	4-10
4-3	CGA G3 Pressure Regulator.....	4-12
4-4	DIN G3 Pressure Regulator.....	4-14

# SAFETY FIRST

Personnel safety and the prevention of equipment damage were primary considerations during the design and expected utilization of MAXIFORCE® G3 Air Lifting Bag Systems. When MAXIFORCE® G3 Air Lifting Bag Systems are properly used in combination with good common sense, an extremely safe method of applying force is realized.

Although the following safety first list is quite extensive, the majority of the precautions are just good common sense for any personnel qualified in the use of lift bags. However, some of the precautions are not obvious and Paratech strongly recommends that all operating/assisting/maintenance personnel read and understand the complete safety first procedures in order to ensure personnel and equipment safety.

Since there are four distinct operational phases of lift bag use: Prior to Inflation, During Inflation and While Inflated, During Deflation, and After Removal, the safety first list is charted to reflect these applications. As shown in the following table, during each operational phase, each safety procedure may be required Always (A), If Time Permits (ITP), or Depending Upon Application (DUA).

SAFETY FIRST PROCEDURE	PRIOR TO INFLATION	DURING INFLATION AND WHILE INFLATED	DURING DEFLATION	AFTER REMOVAL
Regardless of the condition of lift bag use, SAFETY FIRST is primary to prevent injury or death and/or equipment damage.	A	A	A	A
All personnel at the immediate lift bag site must be trained and qualified.		A	A	
All personnel at the immediate lift bag site must be properly suited up (protective clothing, helmet, eye protection, gloves, footwear, etc.) at all times.	ITP	A	A	
Never exceed the maximum inflation pressure marked on the lift bag. (180 psi/12.4 bar)		A		
Do not handle hoses or lift bags while the system is pressurized.		A	A	
Do not connect or disconnect system components when the system is pressurized. The only exception is disconnection of a safety in-line relief valve from a controller. Refer to the technical manual for multiple lift bag use.		A	A	

Observance of the following safety first procedures will assure the safe and efficient utilization of the MAXIFORCE® G3 Air Lifting Bag System

<b>SAFETY FIRST PROCEDURE</b>	<b>PRIOR TO INFLATION</b>	<b>DURING INFLATION AND WHILE INFLATED</b>	<b>DURING DEFLATION</b>	<b>AFTER REMOVAL</b>
Always be on the opposite side of any expected movement.	<b>A</b>	<b>DUA</b>	<b>A</b>	
Always stand clear of a load that is only supported by lift bag(s). Never be below a lift bag supported load that has no blocking or cribbing for positive support. Always <b>“Lift an inch, crib an inch”</b> .	<b>A</b>	<b>A</b>	<b>A</b>	
Use blocking, shoring, and cribbing wherever possible to support and sustain loads.	<b>A</b>	<b>A</b>	<b>A</b>	
Use locking rings on couplings to prevent release of air pressure due to accidental disengagement of system components.	<b>A</b>	<b>A</b>	<b>A</b>	
Always center load on lift bag or it may be violently ejected from under load during pressurization.	<b>DUA</b>	<b>A</b>	<b>A</b>	
Be extremely careful to stabilize, as much as possible, unstable (off-center) loads.	<b>A</b>	<b>A</b>	<b>A</b>	
Be careful that hoses are not kinked.	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
Check visually that equipment is not damaged (scuffs, kinks, tears, ply separation, etc.) and audibly for the leakage of air.	<b>ITP</b>			<b>A</b>
Never stack more than two lift bags on each other during operation.	<b>A</b>			
If required to stack two lift bags for increased height, always place smaller bag centered on the top.	<b>A</b>			
Use proper sized lift bag(s) for the load conditions encountered.	<b>A</b>			
During transport of lift bags, carry in such a way so as to protect the inflation nipple even though the nipple is recessed. Use two men on large lift bags over 30 pounds (14kg).	<b>A</b>			<b>A</b>
Protect bag with thermal blanket, plywood, etc. whenever a lift bag will contact a surface in excess of 150°F (65°C).	<b>ITP</b>			<b>A (storage)</b>
Never use a lift bag where contact temperatures are in excess of 220°F (105°C).	<b>A</b>			<b>A (storage)</b>

<b>SAFETY FIRST PROCEDURE</b>	<b>PRIOR TO INFLATION</b>	<b>DURING INFLATION AND WHILE INFLATED</b>	<b>DURING DEFLATION</b>	<b>AFTER REMOVAL</b>
Never work in the dark. Use flashlights or flood lights to provide shadow-free illumination of work area.	<b>ITP</b>	<b>ITP</b>	<b>ITP</b>	
Inflate only enough to achieve desired lift.		<b>A</b>		
If force must be applied to a small diameter or small area object, always use plywood, rubber mud flaps, etc. between the lift bag and the object to distribute the load more evenly over the lift bag surface. Otherwise, safe maximum lifting force cannot be applied.		<b>A</b>		
Always evaluate the condition prior to execution in order to determine which size lift bag to use and where to apply it to achieve the desired result.	<b>ITP</b>			
Always inflate a lift bag slowly to prevent possible shifting of load. Stop if load begins to shift, stabilize, and block load before continuing.		<b>A</b>		
Be sure all valves between air source and lift bag(s) are in a closed position before turning on air source to system. This will prevent an uncontrolled lift. Also, open air supply source slowly to prevent damage to regulator.	<b>A</b>			
Never lift with a lift bag directly in contact with sharp or pointed objects that may puncture, abrade, or otherwise damage the lift bag.	<b>DUA</b>			
Always have 3 points of contact to ensure a stable foundation when lifting unsecured loads.	<b>DUA</b>			
Undue haste could result in injury to personnel and damage/render the lift bag system useless.	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
Keep as far away as possible from lift bag(s). Hose length governs this safety first procedure.		<b>A</b>	<b>A</b>	
Never inflate a lift bag over 30 psi (2 bar) when not under load.				<b>A (maintenance)</b>

## **CHAPTER 1**

### **GENERAL INFORMATION**

#### **1-1 SAFETY PRECAUTIONS**

Refer to the Safety First procedures Chapter 1, General Information and Safety Precautions for the procedures to be observed to assure safe and efficient utilization of MAXIFORCE® G3 Air Lifting Bag Systems.

#### **1-2 SCOPE OF MANUAL**

This technical manual provides instructions for the operation, preventive maintenance and parts support for MAXIFORCE® G3 Air Lifting Bag Systems manufactured by Paratech Incorporated, 1025 Lambrecht Rd, Frankfort, Illinois 60423-7000.

#### **1-3 ARRANGEMENT**

Refer to the Table of Contents for arrangement of the subject matter in this manual.

#### **1-4 EQUIPMENT FUNCTION**

1-4.1 MAXIFORCE® G3 Air Lifting Bag Systems are multi-application, portable inflation systems used for lift and displacement of heavy objects, up to 213,400 lbs. (96,797 kilograms), while requiring less than 1.1 inch (2.79 centimeters) of bag insertion clearance. Total capable lift (utilizing two stacked bags) is 40 inches (100 centimeters). Inflation may be obtained from any air source (self-contained compressed air cylinder, air compressor, truck air brake system, building compressed air system, foot pump, etc.) capable of supplying 180 psi (12.4 bar) pressure.

1-4.2 MAXIFORCE® G3 Air Lifting Bag Systems are designed for use in emergency situations such as building collapse, structural containment, vehicular extrications, industrial entrapment, and excavation collapse and containment.

1-4.3 In addition to use during emergency situations, MAXIFORCE® G3 Air Lifting Bag Systems are also used effectively used for:

a. Preventive and/or corrective maintenance procedures where positioning and aligning heavy equipment and machinery in mills, manufacturing facilities and maintenance shops is required such as removing wheels, pulleys, and gears from large machinery.

b. Lifting or shifting pipelines requiring welding and maintenance.

c. Breaking out granite and marble blocks and slabs in quarrying operations.

d. Re-railing railroad and mining cars, pre-stressing support columns, general maintenance requiring lifting in rail, mining, underground and subway work.

e. Lifting operations underwater or on unstable, soft ground (mud, sand, snow, strewn debris, etc.) where conventional jacking equipment tends to sink.

f. Since the lift bags contain no spark producing parts, they may also be used safely in explosive environments.

#### **1-5 INTERRELATIONSHIP OF COMPONENTS.**

Refer to figure 1-1 for the interrelationship of the six basic components (air source, G3 pressure regulator, G3 controller, safety inline relief valve, interconnecting hose, and G3 lift bag) comprising MAXIFORCE® G3 Air Lifting Bag Systems and their relative sizes.

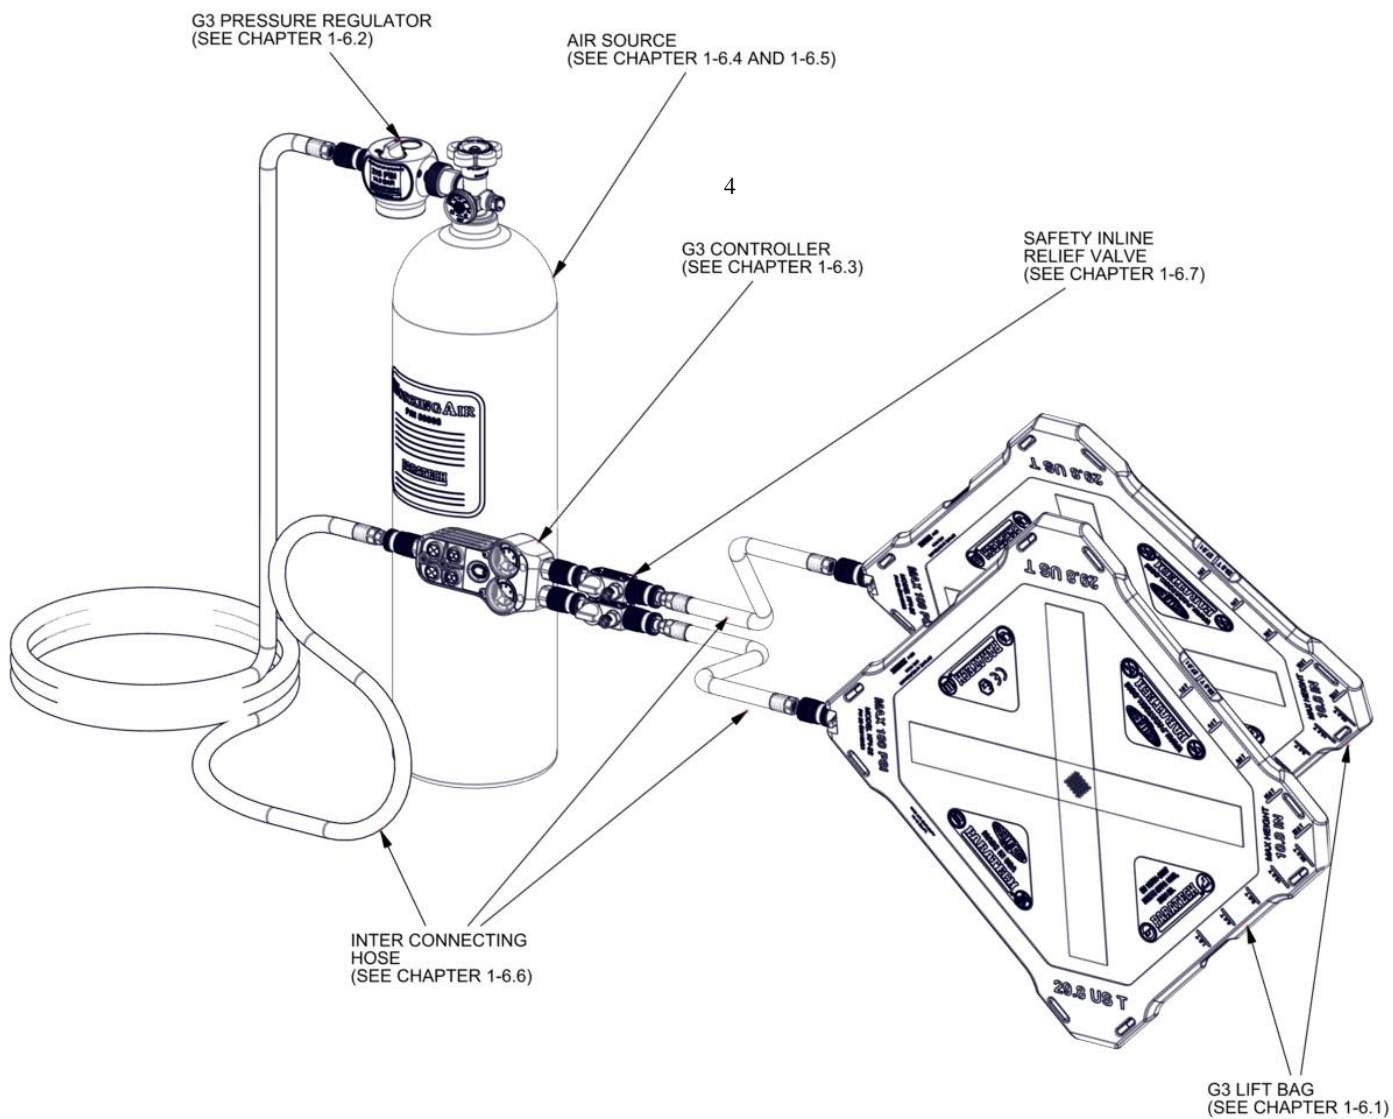


Figure 1-1. MAXIFORCE® G3 Air Lifting Bag System

For further component explanation, see the chapter shown under the component within figure 1-1. See

Chapter 2 “OPERATION” for component connection and system operation.

## 1-6 EQUIPMENT DESCRIPTION

### 1-6.1 G3 LIFT BAG

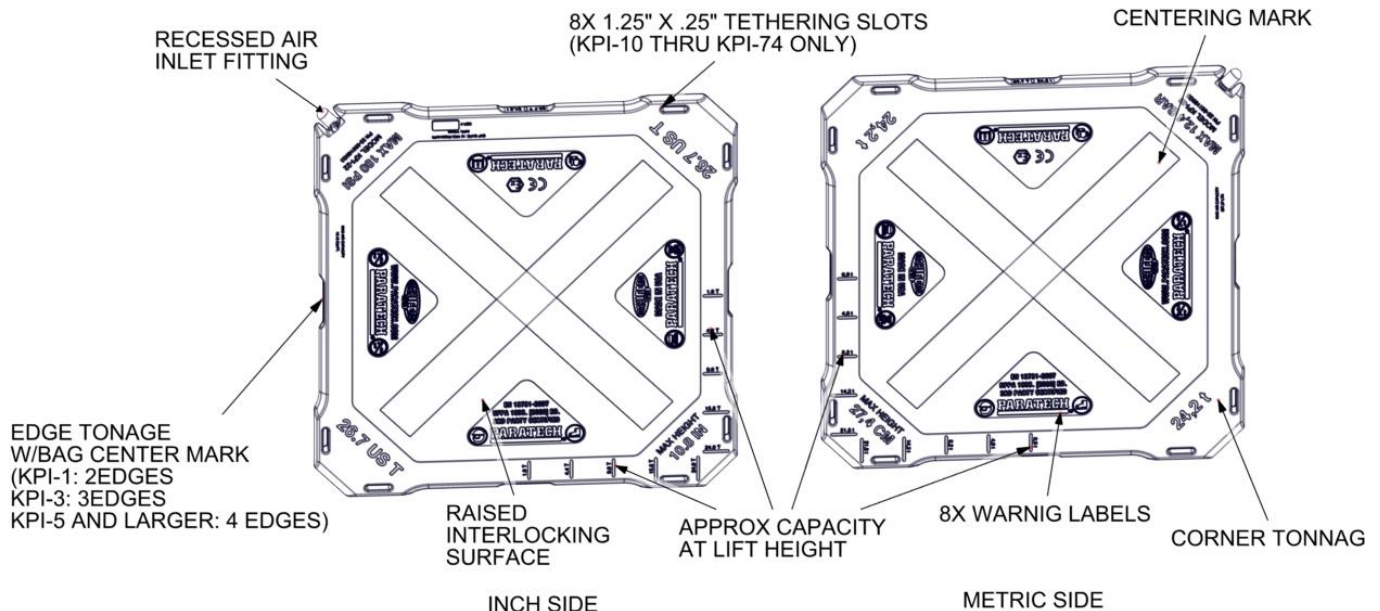


Figure 1-2. MAXIFORCE® G3 Lift Bag

MAXIFORCE® G3 Lift Bags (figure 1-2) are composite items fabricated from neoprene, reinforced with six layers (three per side) of Kevlar reinforced fabric for strength and rigidity even at full inflation pressure of 180 psi (12.4 bar).

All Lift Bags incorporate molded raised interlocking surfaces designed for maximum friction and holding capability.

All air bags have a bright yellow "X" molded into each side to provide high visibility during pre-inflation centering.

The threaded air inlet fitting is recessed to help protect the fitting from damage. A tethered nipple cap is provided to protect from contamination and to help protect the outside surface of the fitting. The tether is to prevent accidental loss of the cap.

Tethering slots eyelets are molded into larger air bags to

be used to assist in transport and insertion positioning prior to inflation.

Corners and edges have the maximum tonnage molded into the bag and filled with bright yellow silicone adhesive (inch side) white (metric side) to help identify and quickly select an air bag in low light situations. The edge tonnage has a center mark to identify the center of the bag in low insertion applications where the center of the bag cannot be seen.

Four yellow, symbol driven, warning labels are permanently molded into the bag surface for quick reference and reminders of safety related warnings and information.

Each Lift Bag is proof tested at twice the operating (full inflation) pressure and has a minimum burst pressure of four times the operating 180 psi (12.4 Bar) pressure. Refer to Table 1-1 for a summary of the technical data for each MAXIFORCE® G3 Lift Bag.

## 1-6. 2 G3 PRESSURE REGULATORS.

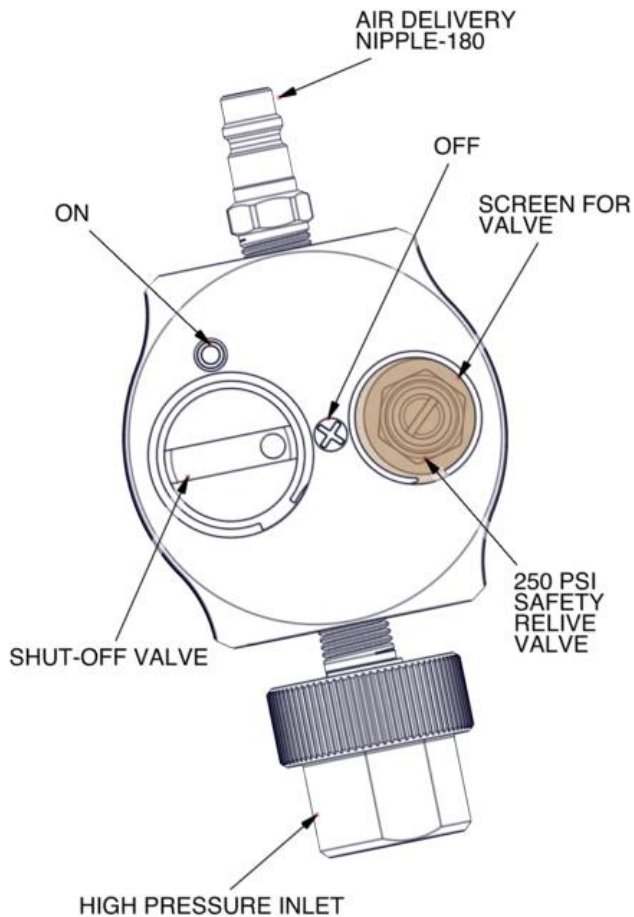


Figure 1-3 CGA G3 - 180 Pressure Regulator

The G3 pressure regulators (figures 1-3 & 1-4) reduce inlet pressure of up to 5,500 psi (379 bar) to 215 psi (14.8 bar). The pressure regulator is designed to mate with a CGA-346/347 adapter fitting (figure 1-3). Other fittings are available such as CGA-580 (nitrogen cylinder adapter), DIN nipple (figure 1-4) and nut assembly and British nipple and knob assemblies are also available. The DIN regulator includes an input pressure gauge.

The G3 pressure regulators incorporate a piston sensor and soft seated main valve to provide bubble tight service. G3 pressure regulators are pre-set from the factory to an optimal outlet pressure of 215 psi (14.8 bar) for simplified set-up and operation.

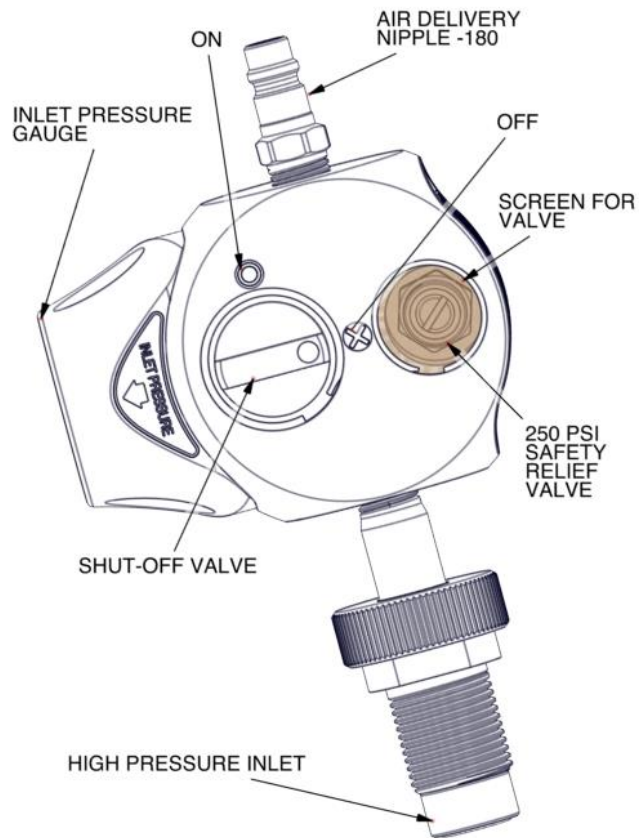


Figure 1-4 DIN G3 - 12 Pressure Regulator

The G3 pressure regulator will operate with any breathing air. When using any gaseous media, it is necessary to remove moisture to prevent "icing"; a condition that occurs at high expansion ratios during regulator operation. A 10-micron internal filter is incorporated in the pressure regulator. Coarser filters are available if excessive contamination is a problem.

The shut-off valve is either opened to permit regulated delivery air to pressurize the lift bag system or closed to prevent (seal off) regulated delivery air.

A 250 psi (17.2 bar) safety relief valve is installed to prevent delivery pressures exceeding 250 psi (17.2 bar).



### 1-6.3 G3 CONTROLLER

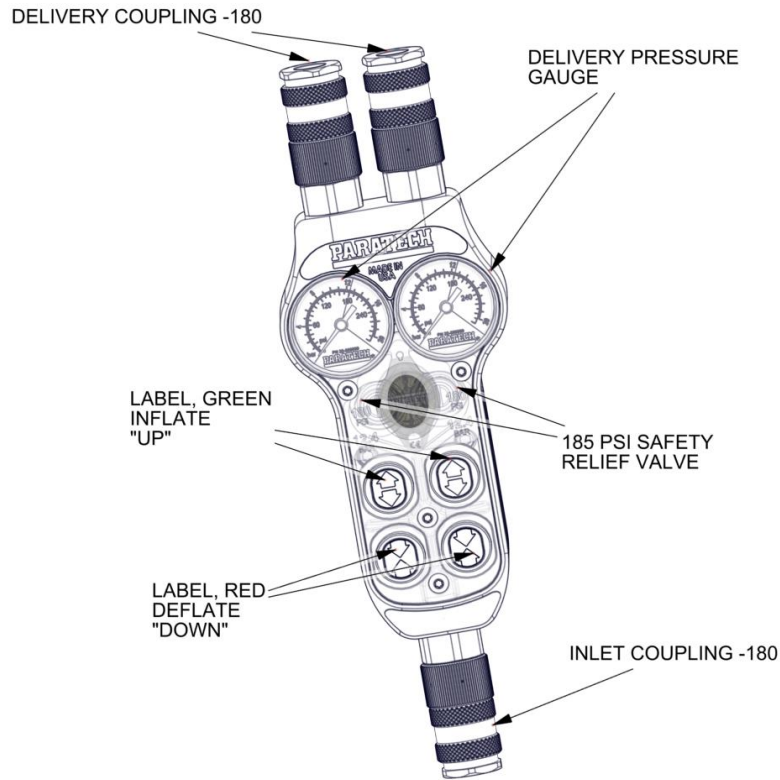


Figure 1-5. Dual "Deadman" 180 psi ALB Controller G3

The dual "deadman" 180 psi ALB controller G3 (figure 1-5) is single input/dual output that incorporates locking, quick connect safety couplings to prevent accidental disconnection during use.

Control buttons permit regulated air pressure to inflate the lift bag or deflate to relieve system air pressure to collapse the lift bag. Green button(s) inflates "UP" and the red button(s) deflates "DOWN" by activating control valve assemblies beneath their respective side of the button.

Delivery gauges are provided to monitor the air pressure applied to the lift bag(s). Gauges are surrounded by an aluminum housing to help protect them from damage.

185 psi (12.8 bar) non-adjustable safety relief valves are installed into the controller to limit the applied air pressure and prevent over pressurizing. Due to the tolerance associated with the mechanical vent relief valves; controllers are set 5 psi (0.4 bar) higher to 185 psi (12.8 bar) to insure the system always gets to 180 psi (12.4 bar) operation.

The dual "deadman" controller has a second set of controls that are identical yet independent from the first set so two air bags can be controlled at the same time yet independently. If using the dual "deadman" controller in a single lift bag operation, either set can be used.

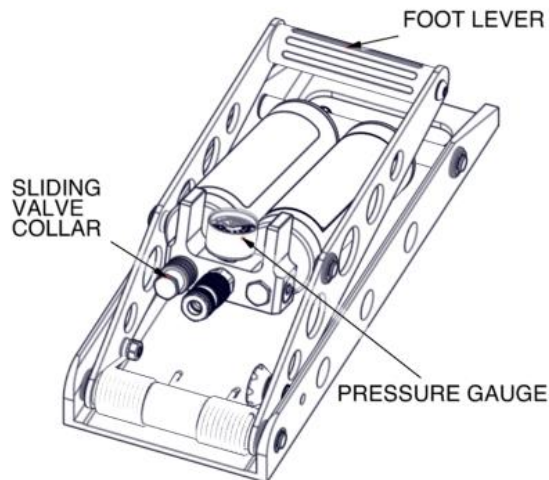


Figure 1-6. Manual Compressor

1-6.4 **MANUAL COMPRESSOR.** The manual compressor (figure 1-6) is a foot/hand lever operated compressor used to deliver pressurized air to the air bag. A sliding valve collar permits isolating one of the two cylinders thereby increasing the delivered pressure and decreasing the delivered volume by a factor of 2.

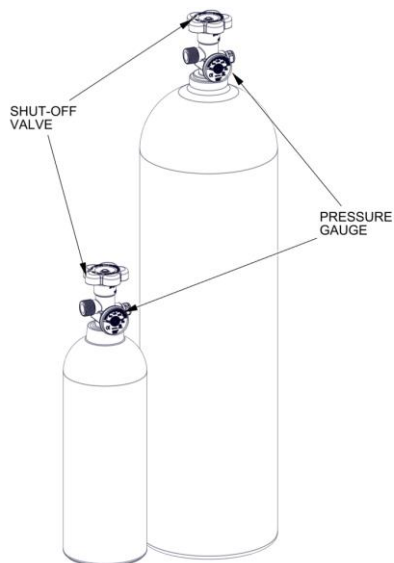


Figure 1-7. Air Cylinder

1-6.5 **AIR CYLINDER.** An air cylinder (figure 1-7) is used to store compressed air for use on the air bag. The shut off valve that permits or prevents the flow of compressed air to the G3 regulator.

The pressure gauge measures the amount of pressure within the tank.

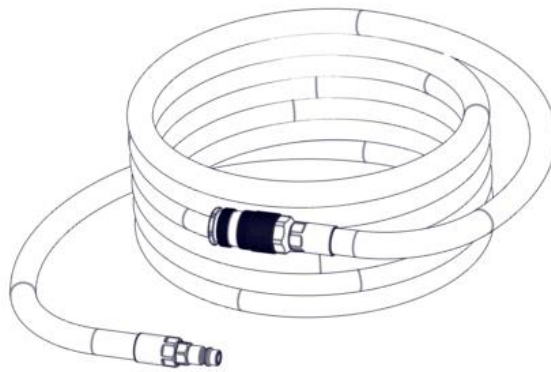


Figure 1-8. Hoses

1-6.6 **HOSES.** Hoses (figure 1-8) are used to convey air from the air supply source to the lift bag(s). All hoses are equipped with locking, quick connect, safety fittings to prevent their accidental disconnection or improper connection. The locking ring must be turned up against the release ring during operation to prevent system leaks.

All hoses are general purpose Ø3/8" inside diameter PVC (vinyl) core, single spiral poly yarn braid reinforced and a PVC abrasion resistant cover.

The service temperature range is -15°F to +150°F (-25°C to +65°C). All hoses have a working pressure of 300 psi (20.7 Bar) with a 4:1 safety factor.

Available hose lengths are 16 foot (5meter), 32 foot (10 meter) and 50 foot (15 meter). Available color in all lengths are red, yellow, blue, green, grey, and black.

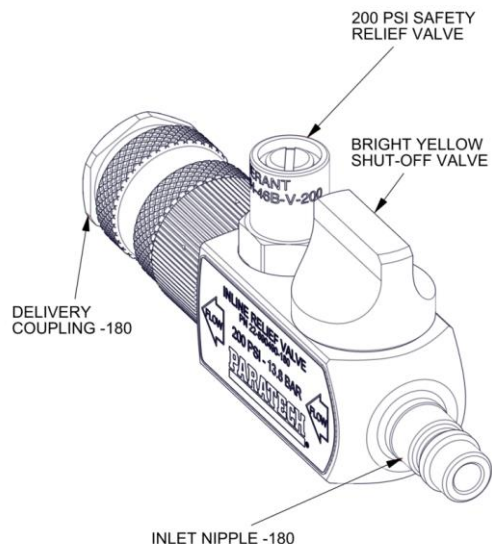


Figure 1-9. G3 Inline Relief Valve

1-6.7 **G3 INLINE RELIEF VALVE.** The G3 safety inline relief valve (figure 1-9) is designed to keep MAXIFORCE® G3 lift bags fully and properly inflated when the lift bag(s) are; 1. Disconnected from the controller and 2. When excess pressure must be automatically relieved due to shifting loads and/or temperature changes.

The safety inline relief valve consists of an air inlet and outlet with locking ring quick connect safety coupling. The locking ring must be turned up against the release ring during operation to prevent system leaks. A shut-off valve is used to isolate the lift bag and a non-adjustable safety relief valve is designed to relieve lift bag pressures in excess of 200 psi (13.8 bar). Inline relief valves for 180 (12.4 bar) psi are easily identified by a bright yellow shut off knob and a black accented coupling.

1-6.8 **FITTINGS.** A variety of adapters, couplings and air fittings are available to permit alternate air sources to inflate the MAXIFORCE® G3 lift bag(s) or enable various air powered tools and accessories to be equipped with the same fittings permitting convenience of operation and/or combining equipment resources such as hoses,

regulators, self-contained compressed air cylinders, etc. All fittings include a quick connect safety couplings. The locking ring must be turned up against the release ring during operation to prevent system leaks.

1-7 **REFERENCE DATA.** Reference data pertaining to MAXIFORCE® G3 lift bags system components are summarized for quick reference in Tables 1-1 and 1-2.

1-8 **EQUIPMENT, ACCESSORIES, DOCUMENTS.**

1-8.1 **EQUIPMENT SUPPLIED.** Data pertaining to the dimensions and weight of MAXIFORCE® G3 lift bags are presented in Table 1-2.

1-8.2 **ACCESSORIES.** Accessories used in conjunction with MAXIFORCE® G3 lift bag systems are listed with sufficient descriptive information regarding their use and application in Chapter 4, Parts List.

1-8.3 **DOCUMENTS.** No documents other than this publication are required as supporting literature for MAXIFORCE® G3 lift bag system.

Table 1-1. MAXIFORCE G3 Lift Bag Reference Data  
**LIFT BAG CONSTANTS:**

Base Material.....	Neoprene
Reinforcing Material .....	Kevlar
Number of Reinforcing Layers (Each Side).....	3
Surface Type.....	Molded Non-Slip
Short Term Temperature Range °F (°C).....	-75 (-60) to +200 (+105)
Continuous Duty Temperature Range °F (°C).....	-40 (-40) to +150 (+65)
Maximum Working Pressure PSI (Bar).....	180 (12.4)
Test Pressure PSI (Bar).....	360 (24.8)

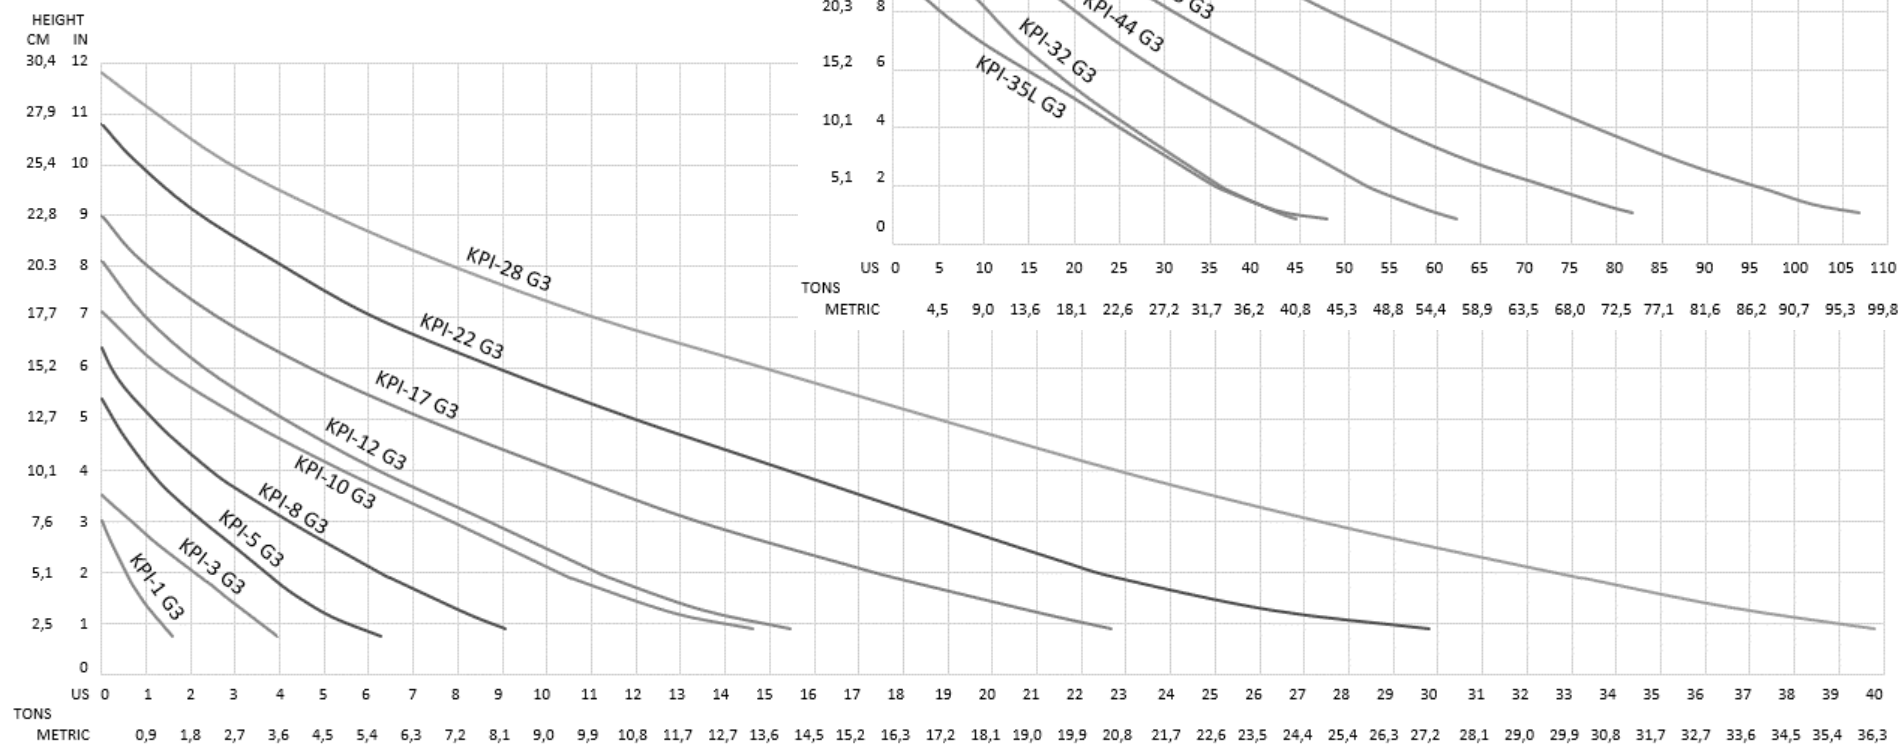


Table 1-1. MAXIFORCE® G3 Lift Bag Reference Data (Continued)

## MAXIFORCE G3 AIR BAG TECHNICAL DATA

PN	MODEL	DIMENSIONS W/O NIPPLE		WEIGHT		MAX LIFT CAPACITY		MAX WORK PRESSURE		MAX LIFT HEIGHT		MAX AIR CAPACITY	
		INCH	cm	LBS	kg	US TONS	METRIC TON	PSI	BAR	INCH	cm	CU. FT.	LITERS
22-888110G3	KPI-1	6 X 6 X 0.75	15,2 X 15,2 X 1,9	1.2	0,6	1.6	1,4	180	12,4	3.0	7,6	0.2	4,5
22-888120G3	KPI-3	6 X 12 X 0.75	15,2 X 30,5 X 1,9	2.3	1,0	4.0	3,6	180	12,4	3.5	8,9	0.4	12,4
22-888130G3	KPI-5	10 X 10 X 0.75	25,4 X 25,4 X 1,9	3.2	1,5	6.3	5,7	180	12,4	5.4	13,7	1.0	28,0
22-888135G3	KPI-8	12 X 12 X 0.88	30,5 X 30,5 X 2,2	5.4	2,5	9.1	8,2	180	12,4	6.4	16,3	2.0	57,0
22-888138G3	KPI-10	12 X 18 X 0.88	30,5 X 45,7 X 2,2	8.0	3,6	14.6	13,3	180	12,4	7.1	18,0	3.6	101,1
22-888140G3	KPI-12	15 X 15 X 0.88	38,1 X 38,1 X 2,2	8.3	3,8	15.5	14,0	180	12,4	8.1	20,6	4.0	114,1
22-888150G3	KPI-17	15 X 21 X 0.88	38,1 X 53,3 X 2,2	11.4	5,2	22.7	20,6	180	12,4	9.0	22,6	6.8	191,6
22-888160G3	KPI-22	20 X 20 X 0.88	50,8 X 50,8 X 2,2	14.5	6,6	29.8	27,0	180	12,4	10.8	27,4	10.2	287,4
22-888165G3	KPI-28	20 X 26 X 0.88	50,8 X 66,0 X 2,2	19.5	8,8	39.8	36,1	180	12,4	11.8	29,9	15.0	425,4
22-888170G3	KPI-32	24 X 24 X 0.88	61,0 X 61,0 X 2,2	21.2	9,6	44.6	40,5	180	12,4	13.0	33,0	17.1	485,1
22-888180G3	KPI-35L	15 X 42 X 0.88	38,1 X 106,6 X 2,2	22.5	10,2	47.9	43,5	180	12,4	9.5	24,1	13.7	387,6
22-888190G3	KPI-44	28 X 28 X 0.88	71,1 X 71,1 X 2,2	28.7	13,0	62.4	56,6	180	12,4	15.3	38,9	30.2	855,0
22-888195G3	KPI-55	32 X 32 X 1.1	81,2 X 81,2 X 2,9	<b>50.7</b>	<b>23,0</b>	81.6	74,1	180	12,4	17.0	43,2	46.6	1318,7
22-888200G3	KPI-74	37 X 37 X 1.1	93,9 X 93,9 X 2,9	68.2	30,9	106.7	96,8	180	12,4	20.0	50,8	68.8	1948,0

Table 1-1. MAXIFORCE® G3 Lift Bag Reference Data (Continued)

## CHAPTER 2 OPERATION

### 2-1 INTRODUCTION

2-1.1 MAXIFORCE® G3 Lifting Bag Systems are multi-application, portable inflation systems used for lift and displacement of heavy rigid objects, up to 213,400 pounds (96,797 kilograms), while requiring less than 1.1 inch (2.79 centimeters) of bag insertion clearance. Total capable lift (utilizing two stacked lift bags) is 40 inches (100 centimeters). Inflation may be obtained from any air source (self-contained compressed air cylinder, air compressor, truck air brake system, building compressed air system, foot pump, etc.) capable of supplying 180 psi (12.4 Bar) pressure.

2-1.2 MAXIFORCE® G3 Lifting Bag Systems are designed for use in emergency situations such as building collapse, structural containment, vehicular extrication, industrial entrapment, and excavation collapse and containment. The specific situation requiring the use of a MAXIFORCE® G3 Lifting Bag System will generally determine the size and quantity of lift bag(s) to be utilized in combination with each other.

See Chapter 2-8 (page 2-5) for application examples.

### 2-2 SYSTEM FUNCTIONAL OPERATION.

Functionally, an interconnected MAXIFORCE® G3 Life Bag System operates as follows:

a. A self-contained air cylinder, air compressor, foot pump or alternate air supply provides the necessary volume and pressure to pressurize the system and ultimately inflate the lift bag.

b. After a lift bag(s) is properly positioned for a lift/displacement, the air supply is “turned on”. High pressure air is reduced by the pressure regulator to a usable 215 psi (14.8 Bar)

c. The reduced air pressure is supplied via an air hose to a 180 psi ALB controller G3. The controller permits air to flow via air hose(s) to either one or two lift bags permitting a controlled lift/displacement. In the line between the controller and the lift bag(s) are inline relief valve(s) to maintain proper pressure in the lift bags while disconnected from the controller.

d. As air flows into the lift bag, it increases in height resulting in a corresponding lift/displacement. Maximum lift/displacement force occurs at insertion height (maximum lift bag surface area). As additional air flows into the lift bag, the cross section reduces as the height increases resulting in a corresponding reduction in lift/displacement capacity.

e. When the lift bag(s) are to be partially or fully deflated, control(s) on the controller are operated to perform this function as well as prevent any further inlet pressure from flowing beyond the controller.

f. At the conclusion of operation, the air supply is “turned-off”, any residual system air pressure is relieved (“bled off”) through the controller, the system components are disconnected, inspected and stored for later use.

### 2-3 COMPONENT INTERCONNECT PRIOR TO INFLATION.

#### **WARNING**

Refer to the SAFETY FIRST instructions preceding chapter 1 for those safety first procedures to be followed for each specific operational phase of the application at hand. Regardless of the lift bag applications or environmental conditions, strict adherence to SAFETY FIRST is essential to prevent personnel injury/death and/or equipment damage. It may make a difference between saving a life or endangering/sacrificing another life.

2-3.1 The following procedures describe in detail a typical interconnection of the previously described components comprising a MAXIFORCE® G3 Air Lifting Bag System. This procedure can be accomplished by trained personnel in less than one minute. If the specific application does not require the use of all the referenced components or some of the components are not available, elimination of the non-applicable steps and proceed with the interconnection. Any adapters, couplings and/or fittings required in conjunction with the

components are addressed generally but not specific during the interconnection. It is assumed these parts are available and will be installed where required in the system.

2-3.2 Refer to Table 1-1 to determine the required lift bag(s) for the load/displacement and full inflation height demands for the application at hand. Once proper lift/displacement and height configuration is determined and the individual components selector, it is only necessary to clean, where required, the individual components sufficiently to clear them of any contaminants that would prevent their full engagement and proper locking to each other and to interconnect the components.

**WARNING**

Refer to the SAFETY FIRST instructions preceding chapter 1 and adhere to applicable “prior to inflation” procedures.

**WARNING**

Most steps within this chapter discuss component connection. Check that the quick connect coupling is fully engaged and locked into position to assure a leak free connection. Be certain to turn the safety locking ring on any quick connect safety coupling to the locked position as shown in figure 2-1.

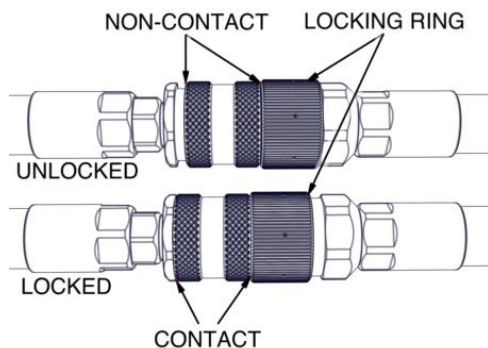


Figure 2-1 Quick Connect Coupling Safety Locking Ring

a. Remove all dust, dirt, oil or grease from the MAXIFORCE® G3 Air Lifting Bag System components. Do not use any system components without first cleaning off any contaminants.

b. Inspect all inlet and delivery fittings for any damage that will permit air leakage. Do not use any component if an air leakage condition is suspected or exists.

c. Attach the high pressure inlet of the G3 pressure regulator to the air supply. Tighten connection to prevent air leakage. Do not over tighten.

d. Check that the G3 pressure regulator shut-off valve is closed (full clockwise).

e. Attach an air hose quick connect safety coupling to the G3 pressure regulator air delivery nipple using the appropriate interconnecting fittings as required.

f. Attach the inlet quick connect safety coupling on a 180 psi ALB controller G3 to the air hose quick connect nipple.

g. Attach the inlet quick connect nipple on a G3 safety inline relief valve to the delivery quick connect safety coupling on a 180 psi ALB controller G3. Check that the G3 safety inline relief valve shut-off valve is closed (full clockwise).

h. If using a dual "deadman" 180 psi ALB controller G3, attach the inlet quick connect nipple on a second G3 safety inline relief valve to the second delivery quick connect safety coupling on the dual "deadman" 180 psi ALB controller G3. Check that the G3 safety inline relief valve shut-off valve is closed (full clockwise).

i. Attach an air hose quick connect nipple to the G3 safety inline relief valve delivery quick connect coupling using the appropriate interconnecting fittings as required. Connect additional lengths of air hose of the same color as required.

j. If a second G3 safety inline relief valve is used, attach air hose quick connect nipple to the second G3 safety inline relief valve delivery safety coupling using the appropriate interconnecting fittings as required. A different colored air hose should be used to permit the rapid and positive identification of the lift bag connected to each side of the controller. Connect additional lengths of air hose of the same color as required.

k. Attach a lift bag nipple to the air hose quick connect safety coupling.

l. If a second lift bag is being used, attach the second lift bag nipple to the other air hose quick connect safety coupling.

m. The MAXIFORCE® G3 Air Lifting Bag System is now fully interconnected and can be positioned with any required shoring and/or cribbing and inflated for a lift/displacement.

## 2-4 **NORMAL OPERATING PROCEDURE DURING INFLATION.**

Proceed as follows to inflate the lift bag(s) after the individual components are interconnected, (per chapter 2-3) the lift bag(s) are positioned and the necessary shoring and/or cribbing is in position.

### **WARNING**

Refer to the SAFETY FIRST instructions preceding chapter 1 and adhere to the applicable "during and while inflated" procedures.

### **WARNING**

Be sure **all** shut-off valves are in a closed position prior to opening the air supply to the system; this will prevent an uncontrolled lift/displacement.

a. **Slowly** open (turn counter-clockwise) the air supply to the G3 pressure regulator. The supply pressure will be indicated on the air supply pressure gauge. The G3 pressure regulator is pre-set from the factory to an optimal pressure outlet setting of 215 psi (14.8 bar) for simplified set-up and operation.

b. **Slowly** open (turn counter-clockwise) the G3 pressure regulator shut-off valve.

d. Open the shut-off valve on the G3 safety inline relief valve(s).

### **NOTE:**

**When operating the lift bag, always inflate slowly and only lift or move the amount necessary.**

e. Press the inflate (green) button of the dual "deadman" 180 psi ALB controller G3 repeatedly to **slowly** inflate the lift bag to the required height or 180 psi (12.4 bar). Inflating the lift bag(s) slowly will minimize the possibility of shifting. If a second lift bag is interconnected to the controller, operate the second push button to **slowly** inflate the second lift bag. The lift bags may be inflated simultaneously or alternately as desired by the operator.

f. With the lift bag inflated to the desired height/pressure close (turn clockwise) the shut-off valve on the G3 safety inline relief valve(s).

g. If additional lift bags are required for the application, proceed as follows:

1. Determine the lift bag to remain inflated and in position. Be sure the shut-off valve on the associated G3 safety inline relief valve.

2. Before disconnecting the G3 safety inline relief valve from the G3 controller, be sure to release the pressure between the components by pressing the "deflate" (red) button. Be sure the gauge on the controller reads 0 psi before disconnection. Release the safety locking ring on the quick connect safety coupling between the G3 controller and the G3 safety inline relief valve. Disengage the coupling lock ring to release the G3 safety inline relief valve from the G3 controller.

3. Attach the inlet port quick connect nipple on a G3 safety inline relief valve to the outlet port quick connect safety coupling on the G3 controller. Check that the G3 safety inline relief valve shut-off valve is closed (full clockwise).

4. Attach an air hose quick connect nipple to the G3 safety inline relief valve delivery safety coupling using the appropriate interconnecting fittings as required. Connect additional lengths of air hose as required.

5. Attach a G3 lift bag nipple to the air hose quick connect safety coupling.



6. Press the inflate (green) button of the dual “deadman” 180 psi ALB controller G3 repeatedly to **slowly** inflate the lift bag to the required height or 180 psi (12.4 bar). Inflating the lift bag(s) slowly will minimize the possibility of shifting.

7. Adhere to procedural steps 1 through 6 to add any additional quantity of lift bags required for the application.

## 2-5 **CHANGING AIR CYLINDERS.**

### **NOTE**

If the air source for a given application requires the use of air cylinder, it should be changed during inflation whenever the air cylinder pressure falls below 250 psi (17.2 Bar).

a. Close (turn clockwise) the air cylinder and the G3 pressure regulator shut-off valves. Any residual system air pressure will be relieved through the controller or by turning the quick connect safety coupling locking ring ccw.

b. As required, turn the nut on the G3 pressure regulator high pressure inlet or interconnecting air cylinder to pressure regulator fitting to the unlocked position. Disengage the inlet nipple to release the air cylinder from the G3 pressure regulator.

c. Attach the high-pressure inlet on the G3 pressure regulator to a full air cylinder. Tighten all connections just enough to prevent air leakage. Do not over tighten.

d. e. Slowly open (turn counter clockwise) the air supply to the G3 pressure regulator. The supply pressure will be indicated on the air supply pressure gauge. The G3 pressure regulator is pre-set from the factory to an optimal pressure outlet setting of 215 psi (14.8 bar) for simplified set-up and operation.

f. **Slowly** open (turn counter clockwise) the G3 pressure regulator shut-off valve.

## 2-6 **NORMAL OPERATING PROCEDURE DURING DEFLATION.**

### **NOTE**

If a lift bag(s) is to be removed after it is deflated, shoring or cribbing must be in position, as required, to restrain the load permitting the removal of the lift bag(s).

a. To either partially or fully deflate an inflated lift bag(s) **disconnected** from a controller, open and close as required the shut-off valve on the safety inline relief valve to slowly achieve the desired deflation. The lift bag design prevents it from deflating rapidly. Alternately opening and closing the shut-off valve will permit a more slowly controlled deflation. This prevents any quick load movements that may cause damage or personnel injury. Repeat for any additional lift bag(s) disconnected from the controller that can be partially or fully deflated.

b. To either partially or fully deflate an inflated lift bag (s) **connected** to a controller, press and release the deflate side (red) button repeatedly to **slowly** deflate the lift bag. Repeat for an additional lift bag connected to the controller if it can be partially or fully deflated.

c. Gather the system components together in preparation for movement to another work area or for disconnection, post inspection and storage.

## 2-7 **COMPONENT DISCONNECTION AFTER DEFLATION.**

The following procedures describe in detail a typical disconnection of the previously described components comprising a MAXIFORCE® G3 Air Lifting Bag System. This procedure can be accomplished by trained personnel in less than one minute. If the specific application did not require the use of all the referenced components or some of the components are not available, eliminate the non-applicable steps and proceed with the disconnection. Any adapters, couplings and/or air fittings used in conjunction with the components are not addressed during the disconnection.

a. Remove the lift bag(s) from its lift/ displacement position and gather the interconnected system components together.

1. Turn off the air supply. Any residual system air pressure can be relieved through the controller or the safety couplings by turning the locking ring ccw. If a significant continuous pressure is observed, the air supply shut-off valve is probably defective and air leakage should be anticipated when the air supply is disconnected from the G3 pressure regulator.

2. Once the air supply is turned off and press the deflate (red) button on the dual “deadman” 180 psi ALB controller G3 to exhaust air from the system.

b. Turn the safety locking ring on the air hose quick connect safety coupling, interconnecting the lift bag, to the unlocked position. This will also relief any residual air from the system. Disengage the coupling release ring to disengage the lift bag from the air hose.

c. Turn the safety locking ring on the safety inline relief valve quick connect safety coupling, interconnecting the air hose, to the unlocked position. Disengage the coupling release ring to disengage the air hose from the safety inline relief valve.

d. Turn the safety locking ring on the 180 psi ALB controller G3 quick connect safety coupling, interconnecting the safety inline relief valve, to the unlocked position. Disengage the coupling release ring to disengage the safety inline relief valve from the 180 psi ALB controller G3.

e. If a dual “deadman” 180 psi ALB controller G3 is used with two safety inline relief valves and associated lift bags, repeat preceding steps b through d.

f. Turn the safety locking ring on the air hose quick connect safety coupling, interconnecting the G3 pressure regulator to the unlocked position. Disengage the coupling release ring to disengage the air hose from the G3 pressure regulator.

g. As required, turn the safety locking ring on the air source fitting quick connect safety coupling, interconnecting the G3 pressure regulator to the unlocked position. Disengage the coupling lock release or other fitting to disengage the pressure regulator from the air source.

h. If the components are not to be immediately reused, perform the post operation inspection and storage in accordance with Chapter 3.

## 2-8 APPLICATIONS.

2-8.1 MAXIFORCE® G3 Air Lifting Bag Systems are multi-application, portable inflation systems used for lift and displacement of heavy rigid objects, up to 213,400 pounds (96,797 kilograms), while requiring less than 1.1 inch (2.79 centimeters) of bag insertion clearance. Total capable lift (utilizing two stacked lift bags) is 40 inches (100 centimeters).

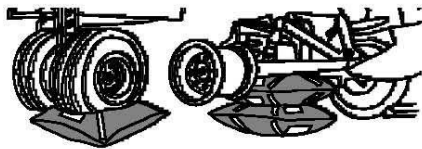
2-8.2 As shown in figure 2-2, MAXIFORCE® G3 Air Lifting Bag Systems are designed for use in emergency situations such as building collapse, structural containment, vehicular extrications, industrial entrapment, and excavation collapse and containment.

2-8.3 In addition to use during emergency situations, MAXIFORCE® G3 Air Lifting Bag Systems are also effectively used for:

a. Preventive and/or corrective maintenance procedures where positioning and aligning heavy equipment and machinery in mills, manufacturing facilities and maintenance shops is required such as removing wheels, pulleys and gears from large machinery.

b. Lifting or shifting pipelines requiring welding and maintenance.


c. Breaking out granite and marble blocks and slabs in quarrying operation




AIRCRAFT FLAT TIRE  
SUPPORT & REPAIR



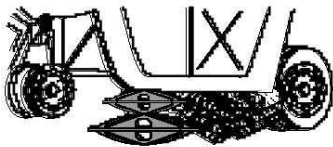
HALF-TRAK TIRE REPAIR




VEHICLE JACKING OPERATION

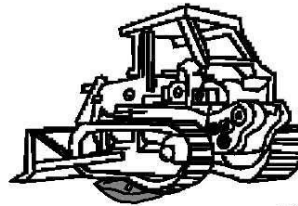


RAISING EARTH MOVER  
MIRED IN MUD

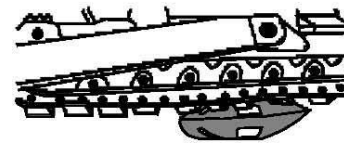


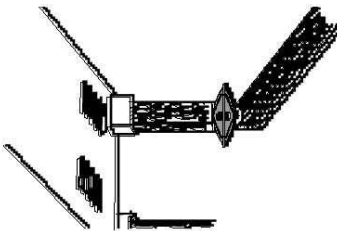
LIFTING SECTION OF COLLAPSED  
HIGHWAY OVERPASS




POSITIONING OF HEAVY MACHINERY

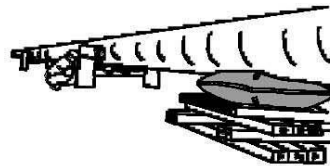


RAISING PIPELINE FOR INSPECTION

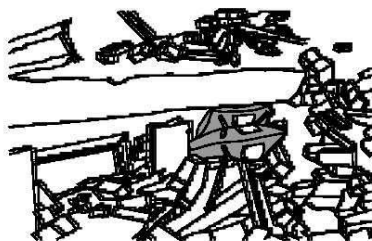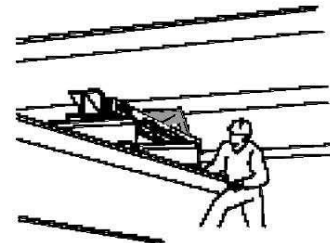

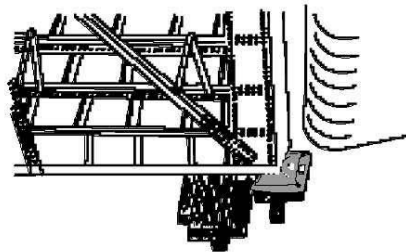RAISING SECTION OF COLLAPSED  
BUILDING TO ALLOW RESCUE ACCESS



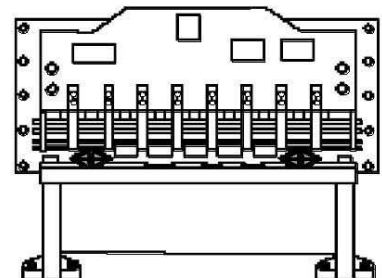
JACKING UP CANAL LOCK GATE  
DURING MAINTENANCE



LIFTING AND STABILIZING CUTTER



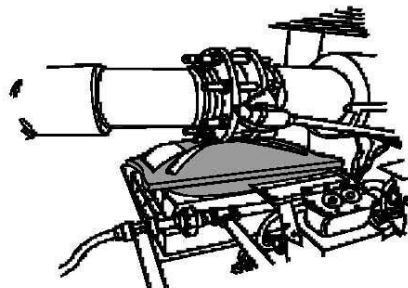OPENING DOOR OF GRINDING  
MACHINE TO FREE VICTIM'S ARM



ALIGNING AND STABILIZING  
PIELINE SECTIONS



PRYING OPEN FENCE TO RESCUE  
TRAPPED ANIMAL

Figure 2-2

d. Re-railing railroad and mining cars, pre-stressing support columns, general maintenance requiring lifting in rail, mining, underground and subway work.

e. Lifting operations underwater or on unstable, soft ground (mud, sand, snow, strewn debris, etc.) where conventional jacking equipment tends to sink.

f. Since the lift bags contain no spark producing parts, they may also be used safely in explosive environments.

2-8.4 In addition to the SAFETY FIRST Procedures in the front of this publication, the following general application notes and procedures should be followed whenever a MAXIFORCE G3 Air Lifting Bag System is to be employed.

a. All procedures should be used as guidelines, not absolute dictates. Any previous application may, as a result of a seemingly inconsequential change, require modification or possibly completely new procedures to achieve the same result.

b. Lift bags are relatively lightweight. The maximum weight is 70 pounds (31,8 kg). All lift bags over 8 pounds incorporate at least two lifting eyelets.

c. If a lift bag is being used to lift or displace a thin surface or material, use plywood between the lift bag and the surface to more evenly distribute the applied force.

d. If a lift bag will be used on an icy, greasy or otherwise slick surface, use a granular material such as sand between the lift bag and the surface to increase the coefficient of friction, thereby preventing the lift bag from slipping.

e. Build support cribbing/bracing height to a point that just allows the lift bag(s) to be inserted. Safety cribbing/bracing must be installed as the load is being lifted, remembering the generally applied rule to “lift an inch, crib an inch”. Care must be exercised to avoid injury and damage in the event of a drop and/or load shift (figure 2-3). The top support cribbing/bracing layer must be sufficiently solid to prevent a cribbing/bracing shift and collapse during inflation when the lift bag(s) take on the characteristic double dome shape. Build safety

cribbing/bracing after the desired lift to minimize the drop distance in the event of air loss after inflation. After full safety cribbing/bracing is in place, the lift bag may be slowly deflated and removed, and the support cribbing/bracing removed, allowing the load to rest fully on the safety cribbing/bracing.

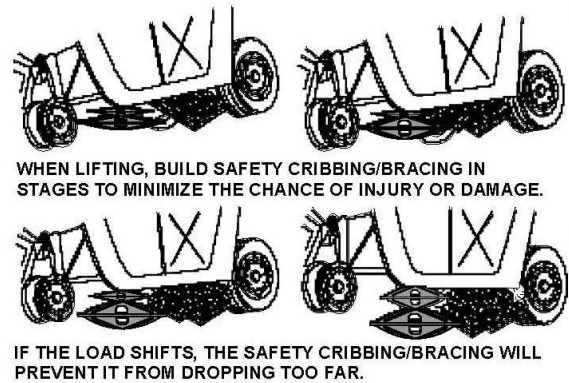


Figure 2-3. Correct Method of Safety Cribbing/Bracing

f. Lifting capacity does not increase by stacking 2 lift bags one on top of the other; only the lifting height increases. Lifting capacity is controlled by the smaller bag capacity. Use lift bags, side-by-side, to additively increase capacity by inflating the lift bags simultaneously. (Figure 2-4)

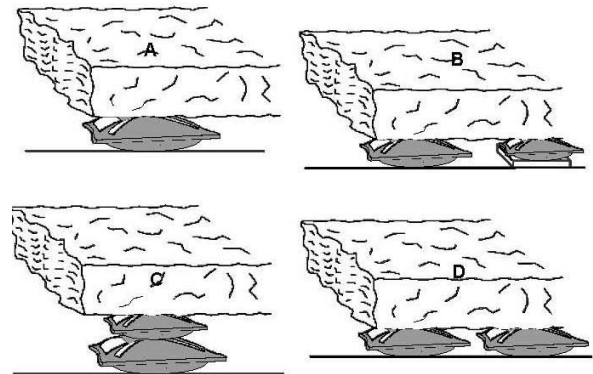


Figure 2-4. Lift bag Stacking and Tandem Combinations

g. If the lift requirement demands the use of two stacked lift bags, (figure 2-5) the smaller lift bag be on top (A) and the bottom lift bag inflated first until top lift bag contacts with the load (B). The top lift bag is then inflated to achieve the desired lift(C). If additional lift is required at full inflation of the top lift bag is further inflated (D).

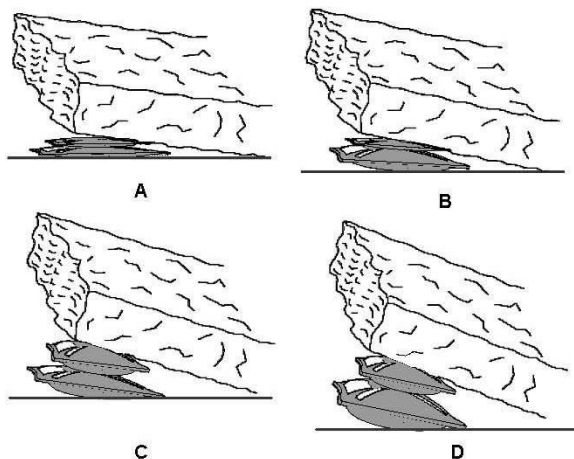


Figure 2-5. Correct Method for Inflating Stacked Lift Bags

h. When lifting large cylindrical objects (Figure 2-6), use a lift bag on both sides of cylinder and wedges to provide an even lift.

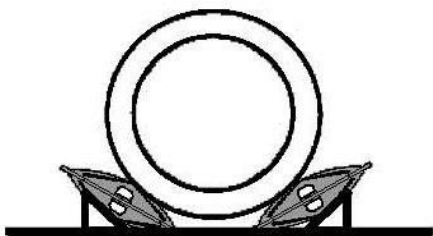


Figure 2-6. Correct Method of Inflating Stacked Lift Bags

## 2-9 LIFT BAG CHEMICAL COMPATIBILITY

Use the following chemical compatibility table only as a guide in determining the MAXIFORCE® G3 Lift Bag resistance to solvents, acids, salts and other chemical solutions. Each commodity is assigned an alpha character to denote its expected effect upon the lift bag. The specific ratings in this table are based upon published literature from various polymer suppliers and manufacturers and “Chemical Resistance Guide for Elastomers II” published by Compass Publications, copyright 1994. Paratech is unable to guarantee their accuracy and therefore assumes no liability for the use thereof.

### **A. - EXCELLENT SERVICE**

Long service may be expected with little reduction in properties due to the exposure. Suitable for continuous service.

### **B. - GOOD SERVICE**

Good service may be expected, but properties will be affected by the exposure. Usually suitable for continuous and intermittent service.

### **C. - FAIR SERVICE**

Fair service may be expected if exposure is limited or infrequent. Not recommended for continuous use but may give some service if it is the only option available.

### **U. - NOT RECOMMENDED FOR CONTINUOUS USE**

### **BLANK - INSUFFICIENT INFORMATION**

The table positions which are not rated indicate insufficient information at the time of publication to determine an accurate rating.

## A

Acetamide.....	B
Acetic Acid 5%.....	A
Acetic Acid 30%.....	A
Acetic Acid, Hot High Press.....	C
Acetic Acid, Glacial.....	U
Acetic Anhydride.....	A
Acetone.....	C
Acetophenone.....	U
Acetyl Acetone.....	U
Acetyl Chloride.....	U
Acetylene.....	B
Acetylene Tetrabomide.....	B
Acrylonitrile.....	C
Adipic Acid.....	A
Aero Lubriplate.....	A
Aero Safe 2300.....	U
Aero 2300W.....	U
Aero Shell IAC.....	B
Acero Shell 7A Grease.....	B
Aero Shell 17 Grease.....	B
Aero Shell 750.....	U
Aerozene 50 (50% Hydrazine 50%UDMH).....	U
Air- Below 300°F (148.9°C).....	A
Air Above 300°F (148.9°C).....	U
Alkazene.....	U
Alum-N3Cr-K.....	A
Aluminum Acetate.....	B
Aluminum Bromide.....	A
Aluminum Chloride.....	A
Aluminum Fluoride.....	A
Aluminum Nitrate.....	A
Aluminum Phosphate.....	A
Aluminum Salts.....	A
Aluminum Sulfate.....	A
Ambrex 33 Mobil.....	B
Amines, Mixed.....	B
Ammonia Anhydrous (Liquid).....	A
Ammonia Gas, Cold.....	A
Ammonia Gas, Hot.....	B
Ammonia & Lithium Metal Solution.....	U
Ammonium Carbonate.....	A
Ammonium Chloride.....	A
Ammonium Hydroxide (Concentrate).....	A
Ammonium Nitrate.....	A
Ammonium Nitrite.....	A
Ammonium Persulfate Solution.....	A
Ammonium Persulfate 10%.....	A
Ammonium Phosphate.....	A
Ammonium Phosphate, Mono-Basic.....	A
Ammonium Phosphate, Dibasic.....	A
Ammonium Phosphate, Tribasic.....	A
Ammonium Salts.....	A
Ammonium Sulfate.....	A
Ammonium Sulfide.....	A
Amyl Acetate.....	U
Amyl Alcohol.....	A

Amyl Borate.....	A
Amyl Chloride.....	U
Amyl Chloranaphthalene.....	U
Amyl Naphthalene.....	U
Anderol L-774 (diester).....	U
Anderol L-826 (diester).....	U
Anderol L-829 (diester).....	U
Ang-25 (Glyceral Ester).....	B
Ang-25 (di-ester Base) (TG749).....	U
Anhydrous Ammonia.....	A
Anhydrous Hydrazine.....	B
Anhydrous Hydrogen Fluoride.....	U
Anline.....	U
Anline Dyes.....	B
Anline Hydrchloride.....	U
Anline Oils.....	U
Animal Fats.....	B
Animal Fats (Lard Oil).....	B
AN-O-3 Grade M.....	B
An-O-6.....	B
AN-O-366.....	B
AN-VV-O-366b Hydr Fluid.....	B
Ansul Ether.....	U
Aqua Regia.....	U
Argon.....	U
Aroclor 1248.....	U
Aroclur 1254.....	U
Aroclur 1260.....	A
Aromatic Fuel 50%.....	U
Arsenic Acid.....	A
Arsenic Trichloride.....	A
Askarel.....	U
Asphalt Emulsion.....	U
Asphalt Topping.....	B
ASTM Oil #1.....	A
ASTM Oil #2.....	B
ASTM Oil #3.....	B
ASTM Oil #4.....	U
ASTM Reference Fuel A.....	B
ASTM Reference Fuel B.....	U
ASTM Reference Fuel C.....	U
ATL-857.....	U
Atlantic Dominion F.....	B
Aurex 903R Mobil.....	B
Automatic Transmission Fluid.....	B
Automotive Brake Fluid.....	B

## B

Bardol B.....	U
Barium Chloride.....	A
Barium Hydroxide.....	A
Barium Salts.....	A
Barium Sulfate.....	A
Barium Sulfide.....	A
Bayol D.....	B
Beer.....	A
Beet Sugar Liquors.....	A
Benzaldehyde.....	U

Benzene.....	U
Benzenesulfonic Acid.....	A
Benzine.....	B
Benzochloride.....	U
Benzoic Acid.....	A
Benzophenol.....	U
Benzyl Alcohol.....	B
Benzyl Benzoate.....	U
Benzyl Chloride.....	U
Black Point 77.....	C
Black Suphate Liquors.....	A
Blast Furnace Gas.....	U
Bleach Solutions.....	U
Borax.....	A
Bordeaux Mixture.....	B
Boric Acid.....	A
Boron Fluids (HEF).....	U
Brake Fluid (Non-Petroleum).....	B
Bray GG-130.....	U
Brayco 719-R (WH-910).....	B
Brayco 885 (MIL-L-6085A).....	U
Brayco 910.....	B
Bret 710.....	B
Brine.....	A
Brom-113.....	U
Brom-114.....	B
Bromine.....	U
Bromine Anhydrous.....	U
Bromine Pentafluoride.....	U
Bromine Trifluoride.....	U
Bromine Water.....	B
Bromobenzene.....	U
Bromochloro Trifluoroethane.....	U
Bunker Oil.....	B
Butadiene.....	B
Butane.....	A
Butane 2, 2-Dimethyl.....	B
Butane 2, 3-Dimethyl.....	B
Butanol (Butyl Alcohol).....	A
1-Butene, 2-Ethyl.....	U
Butter.....	B
Butyl Acetate.....	U
Butyl Acetate Ricinoleate.....	U
Butyl Acrylate.....	U
Butyl Alcohol.....	A
Butyl Amine.....	U
Butyl Benzoate.....	U
Butyl Butyrate.....	U
Butyl Carbitol.....	C
Butyl Cellosolve.....	U
Butyl Cellosolve Adipate.....	U
Buty Ether.....	U
Butyl Oleate.....	U
Butyl Stearate.....	U
Butylene.....	C
Butyraldehyde.....	U
Butyric Acid.....	U

## C

Carbon Tetrachloride .....	U
Carbonic Acid .....	A
Castor Oil.....	A
Cellosolve .....	U
Cellosolve Acetate .....	U
Cellosolve Butyl .....	U
Celloguard .....	A
Cellulube A60 (Now Fyrquel) .....	U
Cellulube 90, 100, 150, 220, 300, 500U	
Cellutherm 2505A .....	U
Cetane (Hexadecane) .....	B
China Wood Oil (Tung Oil).....	A
Chloracetic Acid .....	A
Chlorodane .....	C
Chlorextol .....	B
Chlorinated Salt Brine .....	U
Chlorinated Solvents, Dry.....	U
Chlorinated Solvents, Wet .....	U
Chlorine, Dry .....	C
Chlorine, Wet.....	C
Chlorine Dioxide .....	U
Chlorine Dioxide (8% CI as NACIO2 in solution) .....	U
Chlorine Trifluoride.....	U
Chloroacetone .....	C
Chloroacetic Acid .....	U
Chlorobenzene .....	U
Chlorobenzene, (Mono) .....	U
Chlorobromo Methane.....	U
Chlorobutadiene .....	U
Chlorododecane .....	U
Chloroform .....	U
O-Chloronaphthalene.....	U
1-Chloro 1-Nitro Ethane .....	U
Chlorosulfonic Acid.....	U
Chlorotoluene .....	U
Chlorox .....	B
O-Chlorophenol .....	U
Chrome Alum .....	A
Chrome Plating Solutions .....	U
Chromic Acid .....	U
Chromic Oxides 88 Wt % Aqueous Solution.....	U
Circo Light Process Oil.....	B
Citric Acid .....	A
City Service Koolmotor - AP Gear Oil 140-E.P. Lube .....	B
City Service #65, #120, #250.....	B
Cobalt Chloride.....	A
Cobalt Chloride, 2N.....	A
Cocoa nut Oil.....	A
Cod Liver Oil.....	B
Coffee .....	A
Coke Oven Gas.....	U
Coliche Liquors .....	A
Convelex 10 .....	U
Coolanol (Monsanto) .....	A
Copper Acetate .....	B

Copper Chloride .....	A
Copper Cyanide.....	A
Copper Salts .....	A
Copper Sulfate.....	A
Copper Sulfate 10% .....	A
Copper Sulfate 50% .....	A
Corn Oil .....	A
Cottonseed Oil.....	A
Creosols .....	U
Creosote .....	C
Creosote, Coal Tar .....	B
Creosote, Wood Tar .....	B
Creosylic Acid.....	U
Crude Oil.....	U
Cumene .....	U
Cutting Oil .....	B
Cyclohexane.....	U
Cyclohexanol .....	B
P-Cymene.....	U

## D

Decalin .....	U
Decane .....	U
Delco Brake Fluid .....	B
Denatured Alcohol .....	A
Detergent Solutions .....	B
Developing Fluids (Photo) .....	A
Dextron .....	B
Diacetone .....	U
Diacetone Alcohol.....	U
Diazon .....	C
Dibenzyl Ether .....	U
Dibenzyl Sebacate .....	U
Dibromoethyl Benzene.....	U
Dibutylamine.....	U
Dibutyl Ether.....	U
Dibutyl Phthalate.....	U
Dibutyl Sebacate .....	U
O-Dichlorobezene .....	U
P-Dichlorobenzene.....	U
Dichloro-Butane .....	U
Dichloro-Isopropyl Ether .....	U
Dicyclohexylamine .....	U
Diesel Oil .....	B
Di-Ester Lubricant MIL-L7808.....	U
Di-Ester Synthetic Lubricant.....	U
Diethylamine.....	B
Diethyl Benzene .....	U
Diethyl Ether.....	U
Diethyl Sebacate .....	U
Diethylene Glycol .....	A
Difluorodibromomethane .....	U
Disobutylene .....	U
Disocetyl Sebacate .....	U
Disopropyl Benzene .....	U
Disopropyl Ketone .....	U
Dimethyl Aniline.....	U
Dimethyl Formamide .....	U
Dimethyl Phthalate.....	U
Dinitro Tuluene .....	U

Diocetyl Phthalate .....	U
Diocetyl Sebacate.....	U
Dioxane .....	U
Diozolane .....	U
Dipentene .....	U
Diphenyl .....	U
Diphenyl Oxides.....	U
Dow Chemical 50-4.....	B
Dow Chemical ET378 .....	U
Dow Chemical ET588 .....	B
Dow Corning-3 .....	A
Dow Corning-4.....	A
Dow Corning-5 .....	A
Dow Corning-11 .....	A
Dow Corning-33.....	A
Dow Corning-44.....	A
Dow Corning-55.....	A
Dow Corning-200.....	A
Dow Corning-220 .....	A
Dow Corning 510 .....	A
Dow Corning-550 .....	A
Dow Corning-705 .....	A
Dow Corning-710 .....	A
Dow Corning-1208.....	A
Dow Corning-4050 .....	A
Dow Corning-6620 .....	A
Dow Corning-F60.....	A
Dow Corning-F61 .....	A
Dow Corning-XF60.....	A
Dow Guard .....	A
Dowtherm Oil .....	U
Dowtherm A or E .....	U
Dowtherm 209, 50% Solution .....	B
Drinking Water .....	B
Dry Cleaning Fluids .....	U
DTE Light Oil .....	B

## E

Elco 28-EP Lubricant .....	C
Epichlorohydrin.....	U
Epoxy Resins .....	A
Esam-6 Fluid .....	B
Esso Fuel 208 .....	B
Esso Golden Gasoline.....	U
Esso Motor Oil .....	C
Esso Transmission Fluid (TypeA) .....	B
Esso WS3812 (MIL-L-7808A) .....	U
Esstic 42, 43 .....	B
Ethane.....	B
Ethanol .....	A
Ethanol Amine.....	B
Ethers.....	U
Ethyl Acetate-Organic Ester .....	U
Ethyl Acetoacetate.....	U
Ethyl Acrylate.....	U
Ethyl Acrylic Acid.....	B
Ethyl Alcohol .....	A
Ethyl Benzene.....	U
Ethyl Benzoate .....	U
Ethyl Bromide .....	U

Ethyl Cellosolve..... U  
 Ethyl Cellulose ..... B  
 Ethyl Chlorocarbonate ..... U  
 Ethyl Chloroformate ..... U  
 Ethyl Cyclopentane..... C  
 Ethyl Ether..... U  
 Ethyl Formate ..... B  
 Ethyl Hexanol ..... A  
 Ethyl Mercaptan..... C  
 Ethyl Oxalate ..... U  
 Ethyl Pentachlorobenzene..... U  
 Ethyl Silicate..... A  
 Ethylene..... A  
 Ethylene Chloride ..... U  
 Ethylene Chlorohydrin..... B  
 Ethylene Diamine ..... A  
 Ethylene Dibromide..... U  
 Ethylene Dichloride ..... U  
 Ethylene Glycol ..... A  
 Ethylene Oxide ..... U  
 Ethylene Trichloride ..... U  
 Ethylmorpholine Stannous Octoate  
 (50/50 Mixture).....

## F

F-60 Fluid (Dow Corning)..... A  
 F-61 Fluid (Dow Corning)..... A  
 Fatty Acids..... B  
 FC-43 Heptacosofluorotributylamine A  
 FC75 Fluorocarbon ..... A  
 Ferric Chloride..... A  
 Ferric Nitrate..... A  
 Ferric Sulfate ..... A  
 Fish Oil ..... A  
 Fluoroboric Acid..... A  
 Fluorine (Liquid) ..... C  
 Fluorobenzene ..... U  
 Fluorocarbon Oils ..... A  
 Fluorolube..... A  
 Fluorinated Cyclic Esters..... U  
 Fluosilicic Acid..... A  
 Formaldehyde ..... C  
 Formic Acid..... A  
 Freon, 11 ..... U  
 Freon, 12 ..... A  
 Freon, 12 and ASTM Oil #2 (50/50  
 Mixture)..... B  
 Freon, 12 ans Suniso 4G -(50/50  
 Mixture)..... B  
 Freon, 13..... A  
 Freon 13B1 ..... A  
 Freon, 14..... A  
 Freon, 21 ..... B  
 Freon, 22..... A  
 Freon, 22 and ASTM Oil (50/50  
 Mixture)..... B  
 Freon, 31 ..... A  
 Freon, 32..... A  
 Freon, 112..... B  
 Freon, 113..... A

Freon, 114 ..... A  
 Freon, 114B2..... A  
 Freon, 115 ..... A  
 Freon, 142b ..... A  
 Freon, 152a ..... A  
 Freon, 218 ..... A  
 Freon, C316..... A  
 Freon, C318..... A  
 Freon, 502 ..... A  
 Freon, 502 ..... A  
 Freon, BF ..... B  
 Freon, MF ..... U  
 Freon, TF..... A  
 Freon, TA..... A  
 Freon, TC ..... A  
 Freon, TMC..... B  
 Freon, T-P35 ..... A  
 Freon, T-WD602..... B  
 Freon, PCA ..... A  
 Fuel Oil ..... B  
 Fuel Oil, Acidic..... B  
 Fuel Oil, #6 ..... U  
 Fumaric Acid..... B  
 Fuming Sulpharic Acid - (20/25%  
 Oleum)..... U  
 Furan (Furfuran)..... U  
 Furfural ..... B  
 Furfuraldehyde..... B  
 Furfaryl Alcohol..... U  
 Furyl Carbinol..... U  
 Fryquel A60 ..... U  
 Fryquel 90,100,150,220,300,500..... U

## G

Gallic Acid ..... B  
 Gasoline ..... B  
 Gelatin..... A  
 Girling Brake Fluid ..... B  
 Glacial Acetic Acid ..... U  
 Glauber's Salt ..... A  
 Glucose ..... A  
 Glue (Depending ion Type)..... A  
 Glycerine-Glycerol..... A  
 Glycols ..... A  
 Green Suphate Liquor ..... B  
 Gulfcrown Grease ..... B  
 Gulf Endurance Oils..... B  
 Gulf FR Fluids (Emulsion)..... B  
 Gulf FRG-Fluids ..... A  
 Gulf FRP-Fluids ..... U  
 Gulf Harmony Oils..... B  
 Gulf High Temperature Grease ..... B  
 Gulf Legion Oils ..... B  
 Gulf Paramount Oils ..... B  
 Gulf Scurity Oils ..... B

## H

Halothane..... U  
 Hannifin Lube A ..... A  
 Heavy Water ..... B  
 HEF-2 (High EnergyFuel)..... U

Helium..... A  
 N-Heptane ..... B  
 N-Hexaldehyde..... A  
 Hexane..... B  
 N-Hexane-1 ..... B  
 Hexyl Alcohol ..... B  
 High Viscosity Lubricant, U4..... B  
 High Vicosity lubricant, H2..... B  
 Hilo MS #1 ..... U  
 Houghto-Safe 271 (Water and Glycol  
 Base)..... B  
 Houghto-Safe 620 (Water/Glycol)..... B  
 Houghto-Safe 1010, Phosphate Ester U  
 Houghto-Safe 1120, Phosphate Ester U  
 Houghto-Safe 5040  
 (Water/OilEmulsion) ..... B  
 Hydraulic Oil (Petroleum Base) ..... B  
 Hydrazine ..... B  
 Hydrobromic Acid..... U  
 Hydrobromic Acid 40%..... B  
 Hydrocarbons (Saturated)..... B  
 Hydrochloric Acid Hot 37% ..... U  
 HydrochloricAcid Cold 37% ..... B  
 Hydrochloric Acid 3 Molar ..... C  
 Hydrochloric Acid Concentrated ..... U  
 Hydrocyanic Acid..... B  
 Hydro-Drive, MIH-50 (Petroleum  
 Base)..... B  
 Hydro-Drive, MIH-10 (Petroleum  
 Base)..... B  
 Hydrofluoric Acid, 65% Max. Cold .. A  
 Hydrofluoric Acid, 65%Min.Cold .... U  
 Hydrofluoric Acid, 65%Max. Hot ..... C  
 Hydrofluoric Acid, 65% Min. Hot..... U  
 Hydrofluosilicic Acid ..... B  
 Hydrogen Gas, Cold ..... A  
 Hydrogen Gas, Hot..... A  
 Hydrogen Peroxide (1) ..... B  
 Hydrogen Peroxide 90%(1) ..... U  
 Hydrogen Sulfide Dry, Cold ..... A  
 Hydrogen Sulfide Dry, Hot..... B  
 Hydrogen Sulfide Wet, Cold ..... A  
 Hydrogen Sulfide Wet, Hot ..... B  
 Hydrolube-Water/Ethylene Glycol ..... B  
 Hydroquinone ..... U  
 Hydyne ..... B  
 Hyjet..... U  
 Hyjet III..... U  
 Hyjet S..... U  
 Hyjet W ..... U  
 Hypochlorous Acid..... U

## I

Industron FF44 ..... B  
 Industron FF48 ..... B  
 Industron FF53 ..... B  
 Industron FF80 ..... B  
 Iodine..... U  
 Iodine Pentafluoride ..... U  
 Isobutyl Alcohol ..... A  
 Iso-Butyl N-Butyrate ..... U



Isododecane ..... B  
 Iso-Octane..... B  
 Isophorone (Ketone) ..... U  
 Isopropanol ..... A  
 Isopropyl Acetate..... U  
 Isopropyl Alcohol ..... A  
 Isopropyl Chloride ..... U  
 Isopropyl Ether ..... U

## J

JP 3 (MIL-J-5624) ..... U  
 JP 4 (MIL-J-5624) ..... U  
 JP 5 (MIL-J-5624)..... U  
 JP-6(MIL-J-25656) ..... U  
 JP X (MIL-F-25604)..... B

## K

Kel F Liquids Kerosene ..... C  
 Keystone #87HX-Grease ..... U

## L

Lactams-Amino Acids ..... B  
 Lactic Acid, Cold..... A  
 Lactic Acid, Hot..... U  
 Lacquers ..... U  
 Lacquer Solvents ..... U  
 Lactic Acids ..... A  
 Lard, Animal Fats ..... B  
 Lavender Oil ..... U  
 Lead Acetate ..... B  
 Lead Nitrate ..... A  
 Lead Sulfamate ..... A  
 Lehigh X1169 ..... B  
 Lehigh X1170 ..... B  
 Light Grease ..... U  
 Ligroin (Petroleum Ether or Benzine) B  
 Lime Bleach..... B  
 Lime Sulphur..... A  
 Lindol, Hydraulic Fluid (Phosphate  
 Ester Type) ..... U  
 Linoleic Acid..... U  
 Linseed Oil ..... A  
 Liquid Oxygen..... U  
 Liquid Petroleum Gas (LPG) ..... B  
 Liquimoly ..... B  
 Lubricating Oils, Diester..... C  
 Lubricating Oils, Petroleum Base ..... B  
 Lubricating Oils, SAE 10, 20, 30, 40,  
 50 ..... B  
 Lye Solutions..... A

## M

Magnesium Chloride..... A  
 Magnesium Hydroxide ..... B  
 Magnesium Sulfate ..... A  
 Magnesium Sulfite..... A  
 Magnesium Salts..... A  
 Malathion.....  
 Maleic Acid ..... U  
 MCS 312..... U  
 MCS 352..... U

MCS 463 ..... U  
 Mercuric Chloride ..... A  
 Mercury..... A  
 Mercury Vapors ..... A  
 Mesityl Oxide (Ketone)..... U  
 Methane ..... B  
 Methanol ..... A  
 Methyl Acetate..... B  
 Methyl Acetoacetate..... U  
 Methyl Acrylic Acid ..... B  
 Methyl Alcohol ..... A  
 Methyl Benzoate ..... U  
 Methyl Bromide ..... U  
 Methyl Butyl Ketone..... U  
 Methyl Carbonate..... U  
 Methyl Cellosolve ..... B  
 Methyl Chloride ..... U  
 Methyl Chloroformate..... U  
 Methyl D-Bromide..... U  
 Methyl Cyclopentane ..... U  
 Methylene Chloride..... U  
 Methyl Dichloride ..... U  
 Methyl Ether ..... C  
 Methyl Ethyl Ketone (MEK) ..... U  
 Methyl Ethyl Ketone Peroxide ..... U  
 Methyl Formate ..... B  
 Methyl Isobutyl Ketone (MIBK)..... U  
 Methyl Isopropyl Ketone ..... U  
 Methyl Methacrylate ..... U  
 Methyl Oleate..... U  
 Methyl Salicylate ..... U  
 MIL-L-644B ..... C  
 MIL-L-2104B..... A  
 MIL-L-2105B..... A  
 MIL-G-2108..... A  
 MIL-S-3136B, Type I Fuel ..... B  
 MIL-S-3136B, Type II Fuel..... U  
 MIL-S-3136B, Type III Fuel..... U  
 MIL-S-3136B, Type IV..... A  
 MIL-S-3136B, Type V..... B  
 MIL-S-3136B, Type VI..... U  
 MIL-S-3136B, Type VII ..... C  
 MIL-L-3150A ..... B  
 MIL-G-3278..... U  
 MIL-L-3503 ..... B  
 MIL-L-3545B..... B  
 MIL-C-4339C ..... U  
 MIL-G-4343B ..... B  
 MIL-L-5020A ..... B  
 MIL-J-5161F..... U  
 MIL-C-5545A ..... B  
 MIL-H-5559A ..... B  
 MIL-F-5566 ..... B  
 MIL-G-5572..... U  
 MIL-F-5602 ..... B  
 MIL-H-5606B ..... B  
 MIL-J-5624G, JP-3 ..... U  
 MIL-J-5624G, JP-4 ..... U  
 MIL-J-5624, JP-5 ..... U  
 MIL-L-6081C..... B

MIL-L-6082C ..... B  
 MIL-H-6083C ..... B  
 MIL-L-6085A ..... U  
 MIL-L-6086B ..... A  
 MIL-A-6091 ..... A  
 MIL-L-6387..... A  
 MIL-C-6529C ..... B  
 MIL-F-7024A ..... U  
 MIL-H-7083A ..... B  
 MIL-G-7118A ..... C  
 MIL-G-7187 ..... U  
 MIL-G-7421A ..... C  
 MIL-H-7644 ..... B  
 MIL-L-7645..... B  
 MIL-G-7711A ..... U  
 MIL-L-7808F ..... U  
 MIL-L-7870A ..... B  
 MIL-C-8188C ..... U  
 MIL-A-8243B ..... B  
 MIL-L-8383B ..... A  
 MIL-H-8446B ..... B  
 MIL-I-8660B ..... A  
 MIL-L-9000F ..... B  
 MIL-T-9188B ..... U  
 MIL-L-9236B ..... U  
 MIL-E-9500..... A  
 MIL-L-10295A ..... B  
 MIL-L-10324A..... B  
 MIL-G-10924B ..... U  
 MIL-L-11734B ..... C  
 MIL-O-11773 ..... C  
 MIL-P-12098 ..... B  
 MIL-H-13862 ..... B  
 MIL-H-13866A ..... B  
 MIL-H-13910B ..... B  
 MIL-H-13919A ..... B  
 MIL-L-14107B ..... A  
 MIL-L-15016..... B  
 MIL-L-15017..... B  
 MIL-15018B..... A  
 MIL-L-15019A ..... A  
 MIL-L-15719A ..... B  
 MIL-G-15793 ..... C  
 MIL-F-16884..... C  
 MIL-F-16929A ..... C  
 MIL-L-16958A ..... B  
 MIL-F-17111..... B  
 MIL-L-17331D..... B  
 MIL-L-17353A..... C  
 MIL-L-17672B ..... A  
 MIL-L-18486A ..... A  
 MIL-G-18709A ..... A  
 MIL-H-19457B ..... U  
 MIL-F-19605..... C  
 MIL-L-19701..... C  
 MIL-L-2126- ..... B  
 MIL-G-21568A ..... A  
 MIL-H-22072 ..... B  
 MIL-H-22251 ..... B  
 MIL-L-22396..... A

MIL-L-23699A..... C  
 MIL-G-23827A..... C  
 MIL-G-25013D..... B  
 MIL-F-25172..... C  
 MIL-L-25336B..... C  
 MIL-F-25524A..... C  
 MIL-G-25537A..... B  
 MIL-F-25558B..... B  
 MIL-F-25576C..... C  
 MIL-H-25598..... B  
 MIL-F-25656B..... U  
 MIL-L-25681C..... B  
 MIL-G-25760A..... C  
 MIL-L-25968..... C  
 MIL-L-26087A..... A  
 MIL-G-27343..... A  
 MIL-P-27402..... B  
 MIL-H-27601A..... B  
 MIL-G-27617.....  
 MIL-I-27686D..... B  
 MIL-L-27694A..... A  
 MIL-L-46000A..... C  
 MIL-H-46001A..... A  
 MIL-L-46002..... A  
 MIL-H-46004..... B  
 MIL-P-46064A..... B  
 MIL-H-81019B..... B  
 MIL-S-81087..... A  
 MIL-H-83282..... B  
 Milk..... A  
 Mineral Oils..... A  
 Mobil 24 DTE..... B  
 Mobil HF..... B  
 Mobil Delvac 1100, 1110, 1120, 1130B.....  
 Mobil Nivac 20 and 30..... A  
 Mobil Velocite C..... B  
 Mobilgas WA200, Type Automatic.....  
 Trans. Fluid..... B  
 Mobil Oil SAE 20..... B  
 Mobiltherm 600..... B  
 Mobilux..... B  
 Mono Bromobenzene..... U  
 Mono Chlorobenzene..... U  
 Mono Ethanolamine..... U  
 Monomethyl Aniline..... U  
 Monmethyl Ether..... A  
 Monmethyl Hydrazine..... B  
 Monoitroluene & DinitrotolueneÊ  
 (40/60 Mix.)..... U  
 Monovinyl Acetylene..... B  
 Mopar Brake Fluid..... B  
 Mustard Gas..... A

## N

Naptha..... U  
 Napthalene..... U  
 Naphthalenic Acid..... U  
 Natural Gas..... A  
 Neatsfoot Oil..... U  
 Neon..... A

Neville Acid..... U  
 Nickel Acetate..... B  
 Nickel Chloride..... B  
 Nickel Salts..... B  
 Nickel Sulfate..... A  
 Niter Cake..... A  
 Nitric Acid (1) 3 Molar..... U  
 Nitric Acid (1) Concentrated..... U  
 Nitric Acid Dilute..... B  
 Nitric Acid (1) Red Fuming(RFNA) ..U  
 Nitric Acid (1)Inhibited, Red fuming  
 (IRFNA)..... U  
 Nitrobenzene..... U  
 Nitrobenzine..... U  
 Nitroethane..... C  
 Nitrogen..... A  
 Nitrogen(Tetroxide(N2O4)(1))..... U  
 Nitromethane..... C  
 Nitropropane..... U

## O

O-A-548A..... B  
 O-T-6324b..... U  
 Octachloro toluene..... U  
 Octadecane..... B  
 N-Octane..... U  
 Octyl Alcohol..... B  
 Oleic Acid..... C  
 Oleum (Fuming Sulfuric Acid)..... U  
 Oleum Spirits..... C  
 Olive oil..... B  
 Oronite 8200..... A  
 Oronite 8515..... A  
 Orthochloro Ethyl Benzene..... U  
 Ortho-Dichlorobenzene..... U  
 OS 45 Type III(OS45)..... A  
 OS 45 Type IV (OS45-1)..... A  
 OS70..... A  
 Oxalic Acid..... B  
 Oxygen, Cold..... A  
 Oxygen, Cold 200-400°F..... U  
 Ozone..... C

## P

P-S-66lb..... C  
 P-D-680..... C  
 Paint Thinner, Duco..... U  
 Palmitic Acid..... B  
 Para-dichlorobenzene..... U  
 Par-al-Ketone..... U  
 Parker O Lube..... A  
 Peanut Oil..... B  
 Pentane, 2 Methyl..... B  
 Pentane, 2-4 Dimethyl..... B  
 Pentane, 3 Methyl..... B  
 N-Pentane..... A  
 Perchloric Acid..... B  
 Perchloroethylene..... U  
 Petroleum Oil, Crude..... B  
 Petroleum Oil, Below 250°F(121.1°C)  
 ..... B

Petroleum Oil, Above 250°F(121.1°C)  
 ..... U  
 Phenol..... U  
 Phenol, 70%/30% H2O..... U  
 Phenol, 85%/15% H2O..... U  
 Phenylbenzene..... U  
 Phenyl Ethyl Ether..... U  
 Phenyl Hydrazine..... U  
 Phorone..... U  
 Phosphoric Acid 20%..... B  
 Phosphoric Acid 45%..... B  
 Phosphoric Acid, 3 Molar..... C  
 Phosphoric Acid, Concentrated..... U  
 Phosphorous Trichloride Acid..... U  
 Pickling Solution..... U  
 Picric Acid, H2O Solution..... B  
 Picric Acid, Molten..... U  
 Pinene..... C  
 Pine Oil..... U  
 Piperidine..... U  
 Plating Solutions, Chrome..... U  
 Plating Solutions, Others.....  
 Pnuematic Service..... A  
 Polyvinyl Acetate Amulsion..... B  
 Potassium Acetate..... B  
 Potassium Chloride..... A  
 Potassium Cupro Cyanide..... A  
 Potassium Cyanide..... A  
 Potassium Dichromate..... A  
 Potassium Hydroxide..... A  
 Potassium Nitrate..... A  
 Potassium Salts..... A  
 Potassium Sulfate..... A  
 Potassium Sulfite..... A  
 Prestone Antifreeze..... A  
 PRL-High Temp. Hydr. Oil..... B  
 Producer Gas..... B  
 Propane..... B  
 Propane Propionitrile..... B  
 Propyl Acetate..... U  
 N-Propyl Acetone..... U  
 Propyl Alcohol..... A  
 Propyl Nitrate..... U  
 Propylene Oxide..... U  
 Pyranol, Transformer Oil..... B  
 Pyranol..... U  
 Pydraul, 10E, 29ELT..... U  
 Pydraul, 30E, 50E, 65E, 90E..... U  
 Pydraul, 115E..... U  
 Pydraul, 230E, 312C, 540C..... U  
 Pyridine Oil..... U  
 Pyrogard 42, 43, 53, 55 (Phosphate  
 Ester)..... U  
 Pyrogard, C, D..... B  
 Pyrolingneous Acid..... U  
 Pyrolube..... U  
 Pyrrole..... U

## R

Radiation..... C  
 Rapeseed Oil..... B

Red Oil (MIL-H-5606) .....	B
Red Line 100 Oil .....	B
RJ-1 (MIL-F-25558) .....	B
RP-1 (MIL-R-25576) .....	B

## S

Sal Ammoniac .....	A
Salicylic Acid .....	C
Salt Water .....	A
Santo Safe 300 .....	U
Sewage .....	B
Shell Alvania Grease #2 .....	B
Shell Carnea 19 and 29 .....	U
Shell Diala .....	B
Shell Iris 905 .....	A
Shell Iris 3XF Mine Fluid (Fire Resist. Hydr.) .....	B
Shell Iris Tellus #27, Pet. Base .....	B
Shell Iris Tellus #33 .....	B
Shell Iris UMF (5% Aromatic) .....	B
Shell Lo Hydrax 27 and 29 .....	B
Shell Macoma 72 .....	B
Silicate Esters .....	A
Silicone Greases .....	A
Silicone Oils .....	A
Silver Nitrate .....	A
Sinc;air Opaline CS-EP Lube .....	B
Skelly, Solvent B, C, E .....	U
Skydrol 500 .....	U
Skydrol 7000 .....	U
Soap Solutions .....	A
Socony Vacuum AMV AC781 (Grease) .....	B
Socony Vacuum PD959B .....	B
Soda Ash .....	A
Sodium Acetate .....	B
Sodium Bicarbonate (Baking Soda) .....	A
Sodium Bisulfite .....	A
Sodium Borate .....	A
Sodium Carbonate (Soda Ash) .....	A
Sodium Chloride .....	A
Sodium Cyanide .....	A
Sodium Hydroxide .....	B
Sodium Hypochlorite .....	B
Sodium Metaphosphate .....	B
Sodium Nitrate .....	B
Sodium Perborate .....	B
Sodium Peroxide .....	B
Sodium Phosphate (Mono) .....	B
Sodium Phosphate (Dibasic) .....	A
Sodium Phosphate (Tribasic) .....	B
Sodium Salts .....	B
Sodium Silicate .....	A
Sodium Sulfate .....	A
Sodium Sulfide .....	A
Sodium Sulfite .....	A
Sodium Thiosulfate .....	A
Sovasol #1, 2 and 3 .....	B
Sovasol #73 and 74 .....	B
Soybean Oil .....	A

Spry .....	B
SR-6 Fuel .....	U
SR-10 Fuel .....	U
Standard Oil Mobilube GX90-EP Lube .....	B
Stannic Chloride .....	B
Stannic Chloride 50% .....	U
Stannous Chloride .....	A
Staulfer 7700 .....	U
Steam, Below 350°F (176.7°C) .....	U
Steam, Above 350°F (176.7°C) .....	U
Stearic Acid .....	B
Stoddard Solvent .....	C
Styrene .....	U
Styrene (Monomer) .....	U
Sucrose Solutions .....	A
Sulfite Liquors .....	B
Sulfur .....	A
Sulfur Chloride .....	U
Sulfur Dioxide, Wet .....	B
Sulfur Dioxide, Dry .....	U
Sulfur Dioxide, Liquodified under pressure .....	U
Sulfur Hexafluoride .....	A
Sulfur Liquors .....	B
Sulfur Molten .....	C
Sulfur Trioxide .....	U
Sulfuric Acid Dilute .....	B
Sulfuric Acid Concentrated .....	U
Sulfuric Acid 20% Oleum .....	U
Sulfuric Acid 3 Molar .....	C
Sulfurous Acid .....	B
Sunoco SAE 10 .....	B
Sunoco #3661 .....	B
Sunoco All Purpose Grease .....	B
Sunsafe(Fire Resist Hydr.Fluid) .....	B
Super Shell Gas .....	B
Swan Finch EP Lube .....	U
Swan Finch Hypoid-90 .....	B

## T

TT-N-95a .....	C
TT-N-97B .....	C
TT-I-735b .....	B
TT-S-735, Type I .....	B
TT-S-735, Type II .....	C
TT-S-735, Type III .....	C
TT-S-735, Type IV .....	A
TT-S-735, Type V .....	B
TT-S-735, Type VI .....	B
TTT-656b .....	U
Tannic Acid .....	B
Tannic Acid, 10% .....	A
Tar Bituminous .....	C
Tartaric Acid .....	A
Terpineol .....	U
Tertiary Butyl Alcohol .....	B
Tertiary Butyl Catechol .....	B
Tertiary Butyl Mercaptan .....	U
Tetrabromomethane .....	U
Tetrabutyl Titanate .....	B

Tetrachloroethylene .....	U
Tetraethyl Lead .....	C
Tetraethyl Lead "Blend" .....	U
Tetrahydrofuran .....	U
Tetralin .....	U
Texaco 3450 Gear Oil .....	U
Texaco Capella A and AA .....	B
Texaco Meropa #3 .....	B
Texaco Regal B .....	U
Texaco Uni-Temp. Grease .....	B
Texamatic "A" Transmission Oil .....	B
Texamatic 1581 Fluid .....	B
Texamatic 3401 Fluid .....	B
Texamatic 3525 Fluid .....	B
Texamatic 3528 Fluid .....	B
Texas 1500 Oil .....	B
Thiokol TP-908 .....	B
Thiokol TP-95 .....	B
Thionyl Chloride .....	U
Tidewater Oil-Beedol .....	B
Tidewater Oil-Multigear 140, EP Lube .....	B
Titanium Tetrachloride .....	U
Toluene .....	U
Toluene Diisocyanate .....	U
Transformer Oil .....	B
Transmission Fluid Type A .....	B
Triacetin .....	B
Triaryl Phosphate .....	U
Tributoxyethyl Phosphate .....	U
Tributyl Mercaptan .....	U
Tributyl Phosphate .....	U
Trichloroacetic Acid .....	U
Trichloroethane .....	U
Trichloroethylene .....	U
Tricresyl Phosphate .....	B
Triethanol Amine .....	U
Triethyl Aluminum .....	U
Triethyl Borane .....	U
Trifluoroethane .....	U
Trinitrotoluene .....	A
Trioctyl Phosphate .....	U
Tripoly Phosphate .....	B
Tung Oil (China Wood Oil) .....	B
Turbine Oil .....	U
Turbine Oil #15 (MIL-L-7808A) .....	U
Turbine Oil #35 .....	B
Turpentine .....	U
Type I, Fuel (MIL-S-3136) .....	B
Type II Fuel (MIL-S-3136) .....	U
Type III Fuel (MIL-S-3136) .....	U

## U

Ucon Hydrolube J-4 .....	B
Ucon Lubricant LB-65 .....	A
Ucon Lubricant LB-135 .....	A
Ucon Lubricant LB-285 .....	A
Ucon Lubricant LB-300 .....	A
Ucon Lubricant LB-625 .....	A
Ucon Lubricant LB-1145 .....	A
Ucon-Lubricant 50-HB55 .....	A

Ucon-Lubricant 50-HB100 ..... A  
 Ucon Lubricant 50-HB260 ..... A  
 Ucon Lubricant 50-HB660 ..... A  
 Ucon Lubricant 50-HB5100 ..... A  
 Ucon Oil LB-385 ..... A  
 Ucon Oil LB-400X ..... A  
 Ucon 50-HB-280X (Polyacrylon  
 Glycol Deriv.) ..... A  
 Univis 40 (Hydr. Fluid) ..... B  
 Univolt #35 (Mineral Oil) ..... B  
 Unsymmetrical Dimethyl Hydrazine  
 (UDMH) ..... B

## V

VV-B-680 ..... B  
 VV-G-632 ..... A

Xylene ..... U  
 Xylidenes-Mixed-Aromatic Amines.. U  
 Xylol ..... U  
 Xenon ..... A

## Z

Zeolites ..... A  
 Zinc Acetate ..... B  
 Zinc Chloride ..... A  
 Zinc Salts ..... A  
 Zinc Sulfate ..... A

VV-G-671c ..... A  
 VV-H-910 ..... B  
 VV-I-530a ..... B  
 VV-K-211d ..... C  
 VV-K-220a ..... B  
 VV-L-751b ..... B  
 VV-L-800 ..... B  
 VV-L-820b ..... B  
 VV-L-825a, Type I ..... A  
 VV-L-825a, Type II ..... A  
 VV-L-825a, Type III ..... B  
 VV-O-526 ..... A  
 VV-P-216a ..... B  
 VV-P-236 ..... B  
 Varnish ..... U  
 Vegetable Oil ..... C

Versilube ..... A  
 Vinegar ..... B  
 Vinyl Chloride ..... U

## W

Wagner 21B Brake Fluid ..... B  
 Water ..... A  
 Wemco C ..... B  
 Whiskey and Wines ..... A  
 White Pine Tar ..... U  
 White Oil ..... B  
 Wolmar Salt ..... B  
 Wood Alcohol ..... A  
 Wood Oil ..... B

## X



## CHAPTER 3

### MAINTENANCE AND STORAGE

#### 3-1 GENERAL.

The major components and accessories of a MAXIFORCE® G3 Air Lifting Bag System require little maintenance to ensure optimum performance. However, this maintenance must be performed to ensure personnel and equipment safety, and the assurance that when the system is to be utilized, it will function as designed and intended. This chapter provides preventive and corrective maintenance procedures that are necessary to verify that the MAXIFORCE® G3 Air Lifting Bag System will operate satisfactorily.



Do not drag or drop the bag on the nipple area, as this can cause breakage of the brass inflation fitting and render the bag useless. ***BREAKAGE OF THE BRASS INFLATION FITTING IS NOT COVERED UNDER WARRANTY.***

#### 3-2 PREVENTIVE MAINTENANCE PLAN.

Preventive maintenance of the MAXIFORCE® G3 Air Lifting Bag System is accomplished in accordance with paragraphs 3-3 and 3-4.

#### 3-3 POST OPERATION PREVENTIVE MAINTENANCE

Because of the contaminants present where a MAXIFORCE® G3 Air Lifting Bag System is generally used (maintenance sites, construction sites, accident sites, etc.), it is important that the system components be thoroughly cleaned, inspected and prepared for their next use before being placed in storage.

##### 3-3.1 CLEANING



Do not use any petroleum-based product to clean components of the MAXIFORCE® G3 Air Lifting Bag System. Petroleum based products could adversely react with the non-metallic parts of the system components and may result in a component failure when none should be expected or tolerated.

a. Keep the exterior of all components clean of all dirt, grit, oil and grease accumulations. Except for the lift bag(s), wipe the exterior surfaces with a lint free cotton

machinery wiping towel **LIGHTLY** dampened with soap and warm water solution. Be particularly careful to remove all dirt, sand, grit, etc. from quick connect couplings and nipples. Swirl in a bucket with the soap and water solution until clean. Rinse with a wiping towel **LIGHTLY** dampened with clean water. Then dry the surfaces thoroughly with a clean, dry wiping towel or low pressure compressed air. Also clean the lift bag with a soap and warm water solution, but scrub the lift bag with a stiff bristle broom or brush and rinse by spraying with cold water. If the cleaning solution or rinse water gets into the lift bag through the nipple, allow the lift bag to dry thoroughly before its next use.

##### 3-3.2 INSPECTION.

a. While the lift bag is still wet with the cleaning solution, inflate to 30 psi and check for air bubbles denoting a leak(s) including system quick connect safety couplings. Except for air leakage from between the air inlet fitting and the male nipple, replace rather than attempt to repair a leaking lift bag. If air leakage is detected from around the male nipple threads, proceed as follows:

1. Deflate the lift bag.
2. Disconnect the quick connect safety coupling from the lift bag male nipple.

#### WARNING

The nipple of the MAXIFORCE® G3 air bag has **RIGHT HANDED** threads except KPI-1, KPI-3, KPI-5 **ARE LEFT HANDED**. When removing or installing a replaceable male nipple from/into a lift bag inlet fitting, be sure to hold the air bag over inlet fitting stationary while turning the male nipple, (**LEFT-HANDED OR RIGHT-HANDED**) Allowing it to turn, will loosen its bond with the lift bag. During operation, this will result in air leakage or possibly the ejection of the fitting, resulting in a hazardous condition and rendering the lift bag useless.

3. Unscrew the lift bag **left handed** male nipple by inserting a 3/16" hex key into the hex socket located in the air inlet hole of the fitting and rotating it **clockwise**. Be sure to hold the air bag over the inlet fitting stationary.

4. Clean the interfacing threads and inspect the male nipple for visual damage. If damaged, discard. If not damaged, install back into the inlet fitting by turning it counter-clockwise. **The nipple is to be torqued to 84 in.\*lbs (7 ft.\*lbs).**

5. Reconnect the lift bag to an air source, re-inflate to 30 psi and recheck for air leaks. If none are found, deflate the lift bag, disconnect the quick connect coupling and install the tethered protective cap over the male nipple in preparation for storage.

b. After a lift bag is clean and dry, all surfaces should be thoroughly inspected for cuts, abrasion, air bubbles and bulges (ply separation), and other similar damage. Remove all debris from the surface. Minor surface cuts and abrasion can be repaired with rubber cement and should not be considered a problem unless they are deep enough to expose the Kevlar reinforcement layer.

c. Inspect hose assemblies for cuts, cracks, crimps and brittleness. Inspect the hose quick connect coupling and nipple for secureness of attachment and burrs, nicks, corrosion and other similar damage that would prevent a leak proof interconnection.

d. Refer to the separate instruction manuals provided with the G3 pressure regulator and G3 controllers to inspect these components.

e. If during the last three (3) months the MAXIFORCE® G3 Air Lifting Bag System and accessories have not been used for training or actual operational functions, they should be field tested to ensure they do not leak and are fully operational in preparation for their next use.

### 3-3.3 **REPAIR**

The only repairs authorized on the MAXIFORCE® G3 Air Lifting Bag System components are those designated in the separate instruction manuals provided with the G3 pressure regulator and 180 psi ALB controllers G3 and the following procedures detailing replacement of the quick connect couplings and nipples.

a. **AIR HOSE NIPPLE REPLACEMENT.** Refer to figure 3-1 and replace a worn or otherwise damaged air hose nipple in accordance with the following procedure.

1. Square cut the air hose just behind the ferrule to release the nipple. Discard the nipple but the ferrule can be reused if not damaged.
2. Screw the ferrule counterclockwise fully into the

hose and back the 1/2 turn. There should be approximately 1/16-inch clearance between the ferrule inside shoulder at the end of the hose.

3. Hold the ferrule stationary and turn the quick connect coupling stem clockwise into the ferrule until it is fully seated.

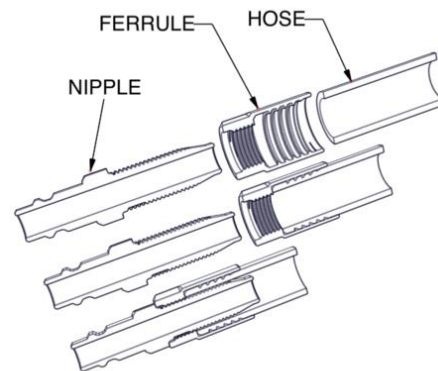


Figure 3-1. Air Hose Nipple Replacement

b. **AIR HOSE QUICK CONNECT COUPLING REPLACEMENT.** Refer to figure 3-2 and replace worn or otherwise damaged air hose quick connect couplings in accordance with the following procedure.

1. Square cut the hose just behind the ferrule to release the quick connect coupling stem and the assembled ferrule (quick connect coupling). Discard the quick connect coupling but the can be reused if not damaged.
2. Unscrew the ferrule from the quick connect coupling stem. Screw the ferrule counterclockwise, fully on to the hose and back 1/2 turn there should be approximately 1/16-inch clearance between the ferrule inside shoulder and end of the hose.
3. Hold the ferrule stationary and turn the quick connect coupling stem clockwise into the ferrule until it is fully seated.

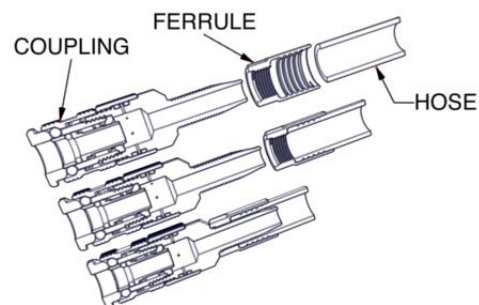


Figure 3-2 Air Hose Quick Connect Coupling Replacement

c. **COMPONENT QUICK CONNECT COUPLING AND NIPPLE REPLACEMENT.** The quick connect couplings and nipples assembled into the G3 pressure regulator, 215 psi ALB controllers G3 and the safety inline relief valve are screw-type fittings. When their replacement is required, it is only necessary to unscrew the damaged part (quick connect coupling and/or nipple), remove and discard the "O" ring and screw in a replacement part using a new "O" ring. If an "O" ring is not used, be sure to wrap the male threads with two turns of Teflon tape to assure a leak free connection.

#### -4 **STORAGE.**

3-4.1 Regardless of storage of the MAXIFORCE® Air Lifting Bag System components in a stationary, mobile or at a movable facility requires the following:

a. The short term (1 hour or less) temperature range must be within the limits of -75°F (-60°C) to +220°F (+105°C). The continuous temperature range must be within the limits of -40°F (-40°C) to +150°F (+65°C).

b. The components must be protected from any extreme

environmental conditions where blowing dust, sand, grit and other similar materials could cause damage. If these environmental conditions are likely to be encountered, plastic wrap all components for protection.

c. Regardless of whether the lift bag(s) are to be stored flat or upright, the inlet nipple shall be covered with the tethered protective cap over the inlet nipple.

3-4.2 Additional storage requirements of the MAXIFORCE® G3 Air Lifting Bag System components are required in a truck or at a movable facility requires the following:

a. System components designed for 180 psi operation (pressure regulator, 180 psi ALB controller, safety inline relief valve and other metallic items) that are stored in a truck compartment where they are subjected during transport to constant bumping will eventually be damaged. It is strongly recommended that these components be stored in their own cushioned cartons. It is further recommended that all components be strapped down, braced or otherwise secured within the compartment during transport.



## CHAPTER 4 PARTS LIST

**4-1 INTRODUCTION.** This chapter lists available standard and optional parts for the MAXIFORCE® G3 Air Lifting Bag System. The parts list is used to identify and locate all repair parts, including all attaching hardware supplied. The parts should be ordered by part number when ordered from Partech Incorporated, 1025 Lambrecht Road, Frankfort, Illinois 60423-7000.

### 4-2 LIST OF MAJOR COMPONENTS.

The MAXIFORCE® G3 Air Lifting Bag System is comprised of the user selected major components denoted in table 4-1.

Figure 4-2 Index Number	Qty	Component Name	Page No.
1	1	Air Source	4-2
2-3	1	G3 Pressure Regulator	4-2
4	1	G3 Controller	4-3
5	1	G3 Air Hose	4-3
6-19	1	G3 Lift Bag	4-4
20	1	Safety Inline Relief Valve	4-5
21-67	1	Adapters and Fittings	4-5
68-74	1	Miscellaneous	4-8

Table 4-1. List of Major Components

### 4-3 PARTS LIST TABLES.

The MAXIFORCE® G3 Air Lifting Bag System parts are listed in table 4-2. The table contains five columns which are described below:

**4-3.1 FIGURE AND INDEX NUMBER COLUMN.** This column shows the figure and index number of each part listed. Table 4-2 relates to illustrations contained in Chapter 4. The index numbers which identify the individual parts are separated from the figure number by a hyphen. Index numbers run consecutively.

**4-3.2 DESCRIPTION COLUMN.** The DESCRIPTION column describes each part (by noun name and modifiers) in sufficient detail for clarity. Descriptions are successively indented to the right to show assembly and part relationship.

**4-3.3 QUANTITY COLUMN.** Quantities specified in the QUANTITY column are the total number of each part required per assembly.

**4-3.4 CAGE COLUMN.** The assembly and parts are identified by the five-digit code 30978. The code number, in accordance with Federal Supply Cataloging Handbook H-4-1, identifies Partech Incorporated, 1025 Lambrecht Road, Frankfort, IL 60423-7000 as the manufacturer of all parts.

**4-3.5 PART NUMBER COLUMN.** The part number column contains an identifying number for each part listed. Vendor numbers are shown where applicable.

### 4-4 LIST OF MANUFACTURERS.

Manufacturer's (vendor's) code number (30978) used in parts list tables is in accordance with Federal Supply Cataloging Handbook H-4-1 and identifies Paratech Incorporated, 1025 Lambrecht, Road, Frankfort, IL 60423-7000 as the manufacturer of all parts.

### Table 4-2 MAXIFORCE Lifting Bag System Components Parts List

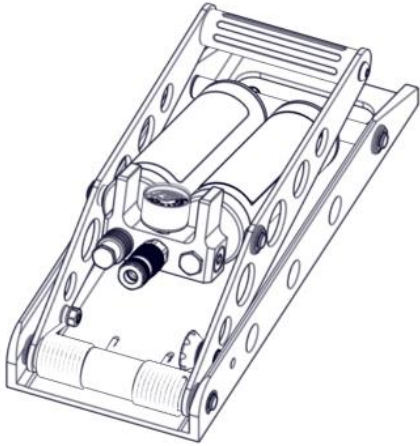


Figure and Index Number	Description	Quantity	CAGE	Part Number
	<b>AIR SOURCE</b>			
4-2-1	MANUAL COMPRESSOR 180PSI (hand/foot pump).....	1	30978	800400G3-180
 <p style="text-align: center;">1</p>				
	<b>G3 PRESSURE REGULATORS</b>			
4-2-2	PRESSURE REGULATOR, Piston Type, 5500 to 215 psi..... (379 to 14.8 bar), CGA 346/347 inlet	1	30978	895401G3-180
-3	PRESSURE REGULATOR, Piston Type, 5500 to 215 psi..... (379 to 14.8 bar) DIN inlet	1	30978	895401DG3-180
  <p style="text-align: center;">2<span style="margin-left: 300px;">3</span></p>				


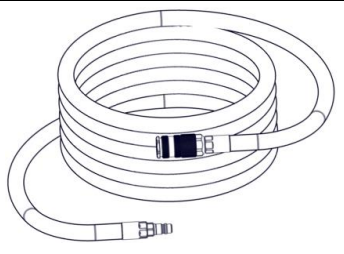
Figure and Index Number	Description	Quantity	CAGE	Part Number
4-2-4	<b>G3 CONTROLLERS</b> CONTROLLER, Dual "Deadman" 180 psi ALB Controller G3	1	30978	890900G3-180
 <p>4</p>				
4-2-5	<b>AIR HOSE</b> AIR HOSE, Black, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long...	1	30978	890513-180
-5.1	AIR HOSE, Blue, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long.....	1	30978	890514-180
-5.2	AIR HOSE, Yellow, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long..	1	30978	890515-180
-5.3	AIR HOSE, Red, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long.....	1	30978	890516-180
-5.4	AIR HOSE, Green, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long...	1	30978	890517-180
-5.5	AIR HOSE, Grey, 3/8 inch (9.5 mm) dia. X 16 ft (4.9 m) long....	1	30978	890518-180
-5.6	AIR HOSE, Black, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long...	1	30978	890522-180
-5.7	AIR HOSE, Blue, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long.....	1	30978	890523-180
-5.8	AIR HOSE, Yellow, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long..	1	30978	890520-180
-5.9	AIR HOSE, Red, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long.....	1	30978	890521-180
-5.10	AIR HOSE, Green, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long...	1	30978	890524-180
-5.11	AIR HOSE, Grey, 3/8 inch (9.5 mm) dia. X 32 ft (9.8 m) long....	1	30978	890525-180
-5.12	AIR HOSE, Black, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long..	1	30978	890546-180
-5.13	AIR HOSE, Blue, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long...	1	30978	890543-180
-5.14	AIR HOSE, Yellow, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long	1	30978	890542-180
-5.15	AIR HOSE, Red, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long....	1	30978	890541-180
-5.16	AIR HOSE, Green, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long..	1	30978	890544-180
-5.17	AIR HOSE, Grey, 3/8 inch (9.5 mm) dia. X 50 ft (15.2 m) long...	1	30978	890545-180
 <p>5</p>				

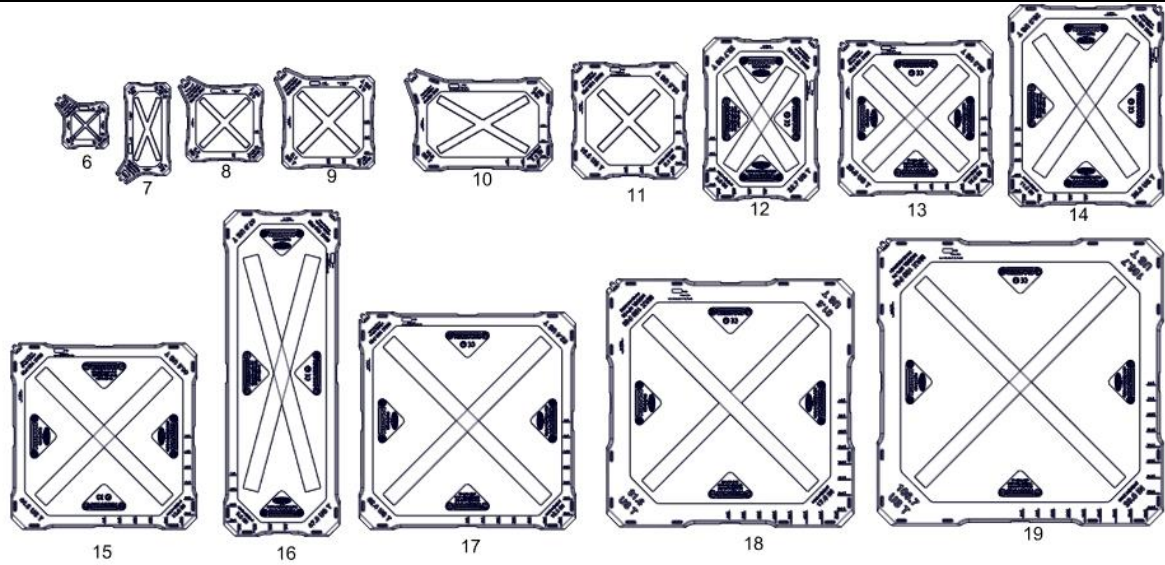
Figure and Index Number	Description	Quantity	CAGE	Part Number
<b>LIFT BAGS (See Table 1-1 for Physical Characteristics)</b>				
4-2-6	LIFT BAG, Model KPI-1, 1.6 T (1,4 t) capacity.....	1	30978	888110G3
-7	LIFT BAG, Model KPI-3, 4.0 T (3,6 t) capacity.....	1	30978	888120G3
-8	LIFT BAG, Model KPI-5, 6.3 T (5,7 t) capacity.....	1	30978	888130G3
-9	LIFT BAG, Model KPI-8, 9.1 T (8,2 t) capacity.....	1	30978	888135G3
-10	LIFT BAG, Model KPI-10, 14.6 T (13,2t) capacity.....	1	30978	888138G3
-11	LIFT BAG, Model KPI-12, 15.5 T (14,0t) capacity.....	1	30978	888140G3
-12	LIFT BAG, Model KPI-17, 22.7 T (20.6 t) capacity.....	1	30978	888150G3
-13	LIFT BAG, Model KPI-22, 29.8 T (27,0 t) capacity.....	1	30978	888160G3
-14	LIFT BAG, Model KPI-28, 39.8 T (36,1 t) capacity.....	1	30978	888165G3
-15	LIFT BAG, Model KPI-32, 44.6 T (40,5 t) capacity.....	1	30978	888170G3
-16	LIFT BAG, Model KPI-35L, 47.9 T (43,5 t) capacity.....	1	30978	888180G3
-17	LIFT BAG, Model KPI-44, 62.4 T (56,6 t) capacity.....	1	30978	888190G3
-18	LIFT BAG, Model KPI-55, 81.6 T (74,1 t) capacity.....	1	30978	888195G3
-19	LIFT BAG, Model KPI-74, 106.7 T (96,8 t) capacity.....	1	30978	888200G3
				
<b>LIFT BAG KITS</b>				
	PUMPER KIT, 3 Bag, 107.1 U.S. ton (97,2 metric ton)..... (consists of 1 each of index number: 12, 14, 15)	1	30978	889610G3-180
	ENGINE, LIGHT DUTY KIT, 5 Bag, 109.0 U.S. ton (98,9 metric ton)...(consists of 1 each of index number: 7 and 2 each of index numbers: 12, 13)	1	30978	889620G3-180
	LADDER, MEDIUM DUTY KIT, 6 Bag, 144.8 U.S. ton (131,4 metric ton)...(consists of 1 each of index number: 6, 7, and 2 each of item number: 13, 14)	1	30978	889630G3-180


Figure and Index Number	Description	Quantity	CAGE	Part Number
	<b>LIFT BAG KITS (Continued)</b>			
	TRUCK KIT, 5 Bag, 172.8 U.S. ton (156,8 metric ton)..... (consists of 1 each of index numbers: 6, and 2 each of index numbers: 14, 15)	1	30978	889640G3-180
	TENDER, LIGHT DUTY KIT, 7 Bag, 88.3 U.S. ton (80,6 metric ton)...(consists of 1 each of index number: 6, 7, 8, and 2 each of index numbers: 11, 12)	1	30978	889650G3-180
	SQUAD KIT, 13 Bag, 410.5 U.S. ton (372,4 metric ton)..... (consists of 1 each of index number: 6, 7, 8 and 2 each of index numbers: 12, 13, 14, 15, 17)	1	30978	889660G3-180
	<b>SAFETY INLINE RELIEF VALVE</b>			
4-2-20	180 RELIEF VALVE, Safety inline, 200 psi (13.8 bar).....	1	30978	890490-180
				
	<b>ADAPTERS AND AIR FITINGS</b>			
4-2-21	NIPPLE, 7/16 inch (fits MAXIFORCE and Vetter).....	1	30978	890652-180
-22	NIPPLE, 7/16 inch (fits MAXIFORCE Vetter).....	1	30978	890652L-180
-23	NIPPLE, 1/4 inch NPTF.....	1	30978	890682-180
-24	NIPPLE, 1/4 inch NPTM.....	1	30978	890681-180
-25	NIPPLE, 1/2 inch NPTF.....	1	30978	890685-180
-26	NIPPLE, 1/2 inch NPTM.....	1	30978	890684-180
-27	180 NIPPLE, ALB 7/16-24 thread.....	1	30978	890686-180
-28	180 NIPPLE, ALB 7/16-24 LH thread.....	1	30978	890686L-180
-29	NIPPLE, Strut Inlet 1/8 inch NPSM.....	1	30978	796065-180
-30	NIPPLE, 3/8 inch hose stem.....	1	30978	890691-180
-31	NIPPLE, 3/8 inch hose stem with ferrule.....	1	30978	890691-180 & 90624



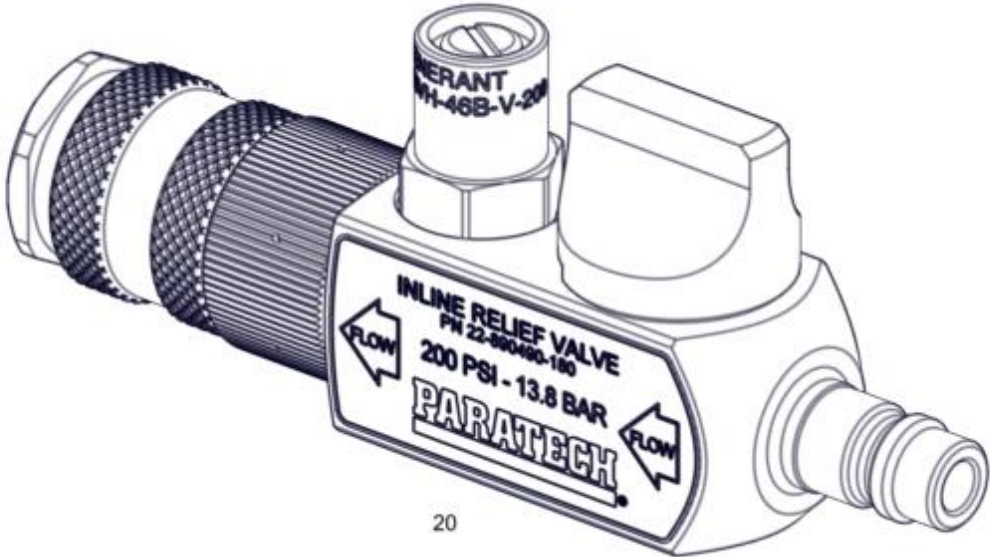Figure and Index Number	Description	Quantity	CAGE	Part Number
<b>ADAPTERS AND AIR FITINGS (Continued)</b>				
-32	PROTECTOR, Nipple.....	1	30978	890695
-33	PROTECTOR, Nipple .....	1	30978	890709T
-34	COUPLING, 1/4 inch NPT F.....	1	30978	890711V-180
-35	COUPLING, 1/4 inch NPTM.....	1	30978	890712V-180
-36	COUPLING, 1/4 inch NPSM open.....	1	30978	890703V-180
-37	COUPLING, 1/4 inch NPTM open.....	1	30978	890704V-180
-38	COUPLING, 1/4 inch NPSM with O-ring.....	1	30978	890721AV-180
-39	COUPLING, 3/8 inch NPTF.....	1	30978	890716V-180
-40	COUPLING, 3/8 inch NPTM.....	1	30978	890714V-180
-41	COUPLING, 3/8 inch hose stem with ferrule.....	1	30978	890700V-180
-42	COUPLING, 3/8 inch hose stem.....	1	30978	890700AV-180
-43	COUPLING, 1/2 inch NPT F.....	1	30978	890720V-180
-44	COUPLING, 1/2 inch NPTM.....	1	30978	890710V-180
-45	FITTING, 3/8 inch (9.5 mm) hose x 3/8 in. (9.5 mm) hose splice.	1	30978	890673
-46	FITTING, 3/8 in. (9.5 mm) hose x 1/4 in. NPTF.....	1	30978	890675
-47	FITTING, 3/8 inch (9.5 mm) hose x 1/4 in. NPTM.....	1	30978	890674
-48	FERRULE, for 3/8" hose stem.....	1	30978	890624
-49	NIPPLE, Double male.....	1	30978	890730-180

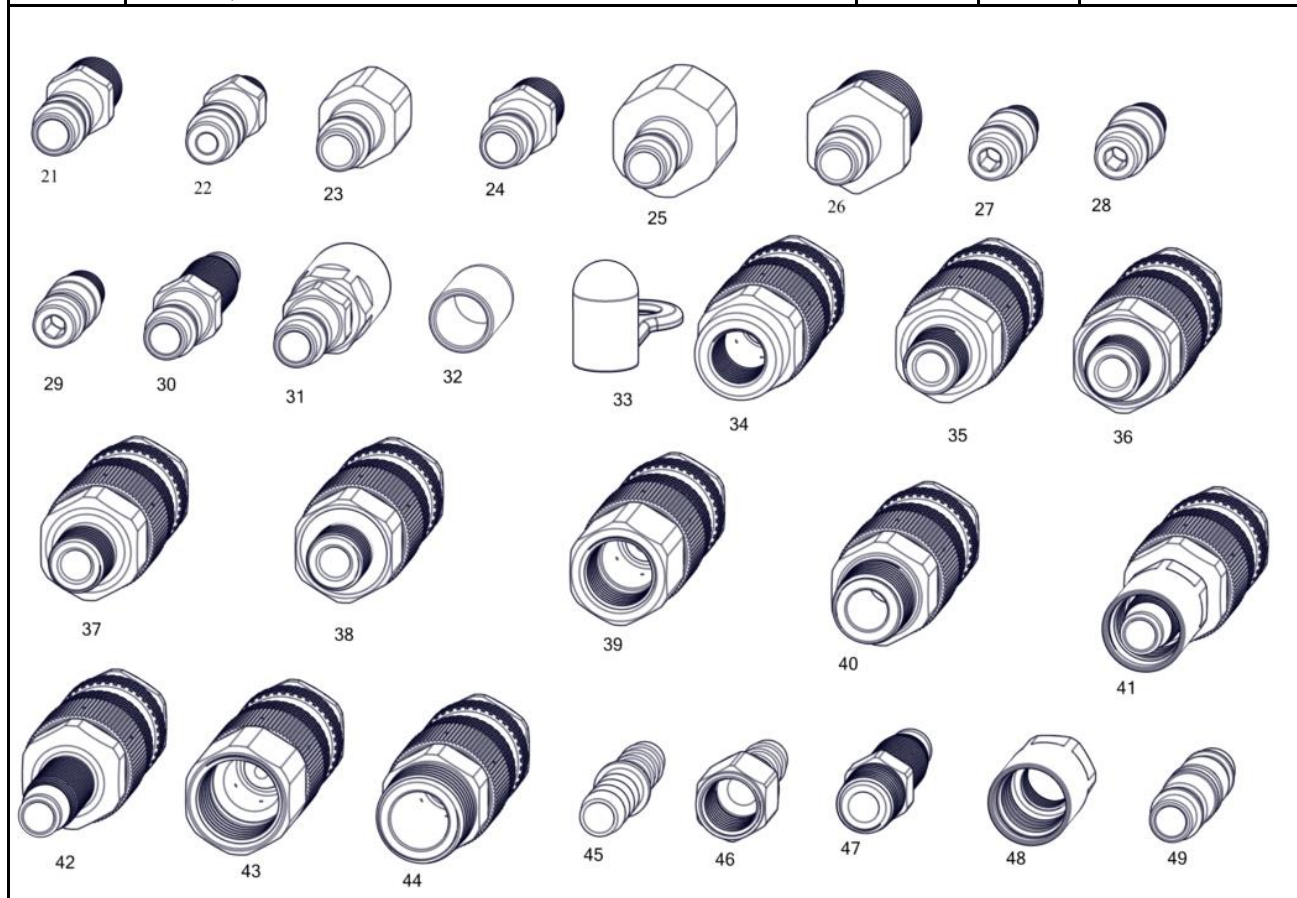


Figure and Index Number	Description	Quantity	CAGE	Part Number
<b>ADAPTERS AND AIR FITINGS (Continued)</b>				
-50	NIPPLE, Industrial double male with valve.....	1	30978	890732-180
-51	NIPPLE, Male and locking tire chuck.....	1	30978	890731-180
-52	NIPPLE AND GLAD HAND.....	1	30978	890734-180
-53	Y, With two 1/4 inch NPTM couplings.....	1	30978	890735-180
-54	Y, With two 1/4 inch NPTM couplings and MAXIFORCE nipple	1	30978	890736-180
-55	Y, with three couplings.....	1	30978	890740-180
-56	NIPPLE, Male and tire valve inflator.....	1	30978	890737-180
-57	NIPPLE, Male and 12 inch (30.5 cm) hose and clamp.....	1	30978	890738-180
-58	NIPPLE, With industrial twist lock and valve.....	1	30978	890749-180
-59	COUPLING, Industrial, 1/4 inch NPTF.....	1	30978	890751
-60	COUPLING, Industrial, 1/4 inch NPTM.....	1	30978	890752
-61	NIPPLE, Industrial, 1/8 inch NPTM.....	1	30978	890760
-62	NIPPLE, Industrial, 1/4 inch NPTM.....	1	30978	890761
-63	NIPPLE, Industrial, 3/8 inch NPTM.....	1	30978	890762
-64	NIPPLE, Industrial, 1/4 inch NPTF.....	1	30978	890763
-65	ADAPTER, CGA-346 high pressure air and CGA-580 nitrogen..	1	30978	895380
-66	CONNECTOR, Dual tank, with check valves, CGA-346/347.....	1	30978	800130
-67	CONNECTOR, Dual tank, with check valves, DIN fittings.....	1	30978	800135

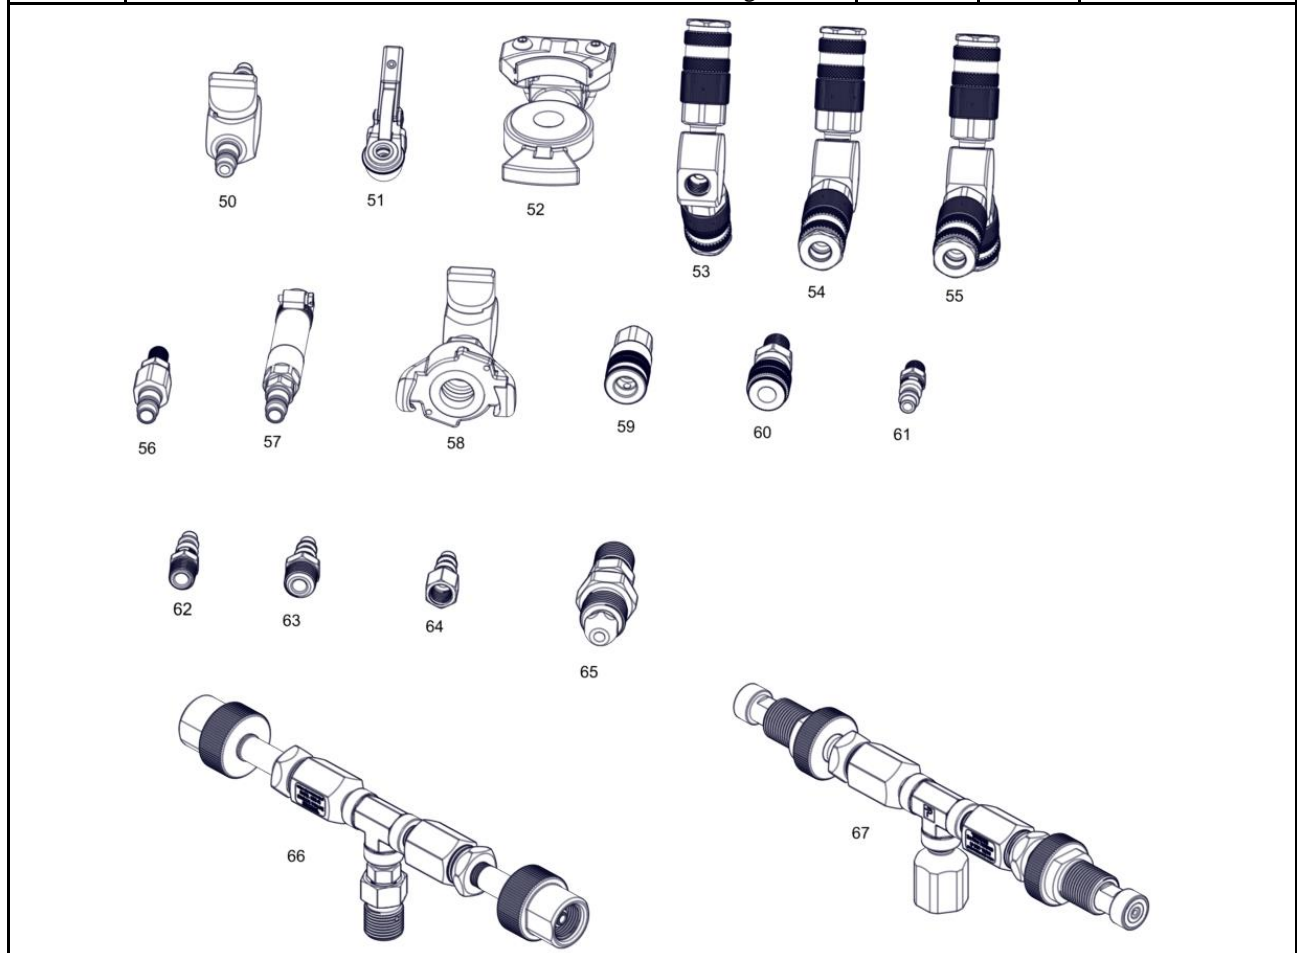


Figure and Index Number	Description	Quantity	CAGE	Part Number
	<b>MISCELLANEOUS</b>			
4-2-68	SHEET, Neoprene, 20 in. (508 cm) x 20in. (50.8 cm)..... x 1/8 in (0.32 cm)	1	30978	890466
-69	STORAGE CASE, 13 x 6 x 4.75 in. (33 x 15.2 x 12.1 cm).....	1	30978	000905
-70	STORAGE CASE, CUSTOM U.S., master control package..... Exterior = 24.83 x 19.69 x 11.88 in. (63.07 x 50.01 x 30.18 cm)	1	30978	890337
-71	180 PSI MASTER CONTROL KIT G3 INSERT.....	1	30978	890324
-72	LABEL, 180 PSI VIEW PARTS G3.....	1	30978	890150G3L
-72	LABEL, 12 BAR VIEW PARTS G3 DIN.....	1	30978	890150G3DL
-73	DVD VIDEO, MAXIFORCE TRAINING.....	1	30978	890000
-74	TIRE CHUCK, Locking 1/4 NPTF.....	1	30978	890750

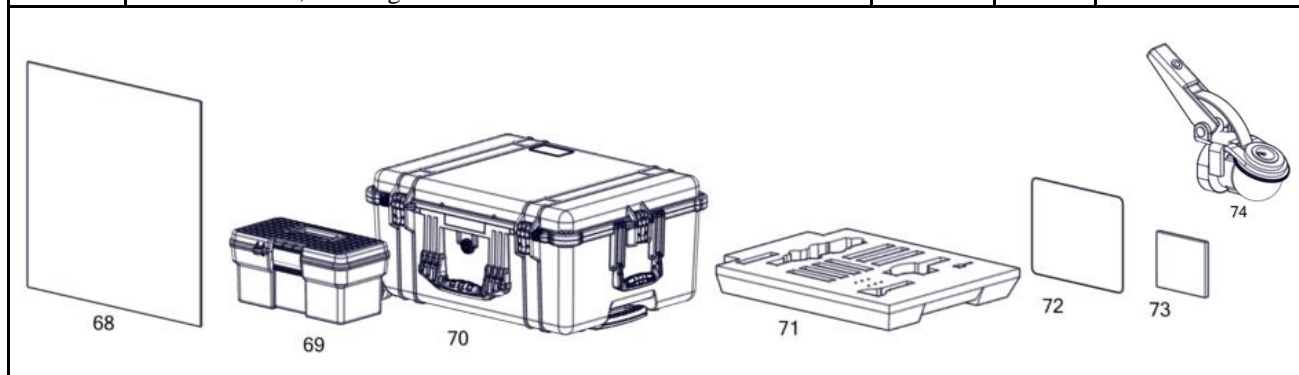


Figure and Index Number	Description	Quantity	CAGE	Part Number
	<b>CONTROL PACKAGES</b>			
	CONTROL KIT, U.S. (consists of 1 of each item number: 2, 4,..... 5 [16 ft black], 5.2 [16 ft yellow], 5.3 [16 ft red])	1	30978	890351G3-180
	CONTROL KIT, Metric (consists of 1 of each item number: 3, 4,... 5 [16 ft black], 5.2 [16 ft yellow], 5.3 [16 ft red])	1	30978	890351G3D-12
	VEHICLE MAINT. KIT, 2 Bag, 124.8 U.S. ton (113,2 metric ton)...(consists of 1 each of index numbers: 4, 5, 5.2, 5.3, and 2 each index numbers 17, 20)	1	30978	889600G3-180
	MASTER CONTROL KIT, U.S. (consists of 1 each of index..... number: 2, 4, 5 [16 ft black], 5.1 [16 ft blue], 5.2 [16 ft yellow], 5.3 [16 ft red], 5.4 [16 ft green], 28, 50, 51, 58, 70, 71, 72; 2 each of index number: 23, 3 each index number 27, 54; 4 each of index number: 20)	1	30978	890300G3-180
	MASTER CONTROL KIT, Metric (consists of 1 each of index.... number: 3, 4, 5 [16 ft black], 5.1 [16 ft blue], 5.2 [16 ft yellow], 5.3 [16 ft red], 5.4 [16 ft green], 28, 50, 51, 58, 70, 71, 72; 2 each of index number: 23, 3 each index number 27, 54; 4 each of index number: 20)	1	30978	890300G3D-12



	<b>US&amp;R LIFT BAG KITS</b>			
	US&R, MEDIUM DUTY KIT, 15 Bag, 551.7 U.S. ton (500,5 metric ton).....(consists of 1 each of index number: 6, 7, 8, and 2 each index number 11, 12, 14, 16, 17, 18 and Master Control Kit 22-890300G3-180)	1	30978	889670G3-180
	US&R, HEAVY DUTY KIT, 24 Bag, 916.2 U.S. ton (831,2 metric ton)...(consists of 2 each of index number: 6, 7, 8, 11, 12, 13, 16, 17, 18, 19 and 4 each index number 14 and Master Contril Kit 22-890300G3-180)	1	30978	889680G3-180
	<b>PNEUMATIC COMPONENTS AND ADAPTER KIT</b> PNEUMATIC COMPONENTS AND ADAPTER KIT..... (consists of 1 each of index numbers: 23, 24 25, 26, 30, 34 38, 42, 43, 44, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 69; and 2 each of item number: 48)	1	30978	890729-180

#### 4-5 EXPLODED ASSEMBLIES

The following figures illustrate the various components of the two controllers and one pressure regulator used with the MAXIFORCE® G3 Air Lifting Bag System. They are accompanied by their parts lists for easy identification and individual components.

Any repairs of these assemblies should be performed according to the specifications documented in their own Operation and Maintenance Manuals obtained from Paratech Incorporated, 1025 Lambrecht Road, Frankfort Illinois, 60423-7000 U.S.A.

#### 4-5.2 **DUAL “DEADMAN” 180 PSI ALB CONTROLLER G3**

Item Number	Description	Quantity	CAGE	Part Number
1	BODY, DUAL DEADMAN ALB G3.....	1	30978	890890B
2	O-RING, (5/32 X .070) BN70.....	2	30978	890488
3	GAUGE 1.5” 180 PSI 1/8 BACK MT.....	2	30978	890609
4	GAUGE BASE FOR G3 CONTROLLERS.....	2	30978	890860
5	BELLEVILLE DISC SPR .406” ID.....	2	30978	890499
6	1/8 NPS X ½ X 1/8 HEX PANEL NUT.....	2	30978	890491
7	M4-.7 X 10 BTNHD TORX SS.....	8	30978	670378
8	VALVE, CLIPPARD MJV-2C.....	4	30978	891096
9	CLIPPARD VALVE, BAND SEAL.....	2	30978	891093
10	SPL RET RING FOR 5/8 BORE SS.....	4	30978	670380
11	Ø1/4” BRASS BALL.....	6	30978	895419
12	5/16-24 X 5/16” SCH SET SCR SS.....	6	30978	890893
13	SPRING, C0480-038-0500-S.....	4	30978	891095
14	CRTG VALVE BUTTON G3 YELLOW.....	4	30978	890861Y
15	VENT RELIEF VALVE, 185 PSI.....	2	30978	890591
16	DEADMAN GAUGE LIGHT G3.....	1	30978	890862
17	DUAL DEADMAN BUTTON PLATE G3.....	1	30978	890863
18	CPLG 1/4-20 NPS OPEN VENT ASM.....	3	30978	890703V-180
19	LABEL, DOWN BUTTON.....	2	30978	890861L1
20	LABEL, UP BUTTON.....	2	30978	890861L2
21	LABEL, 890900-180 QR CODE.....	1	30978	890900G3180Q
22	LABEL, DUAL D ALB BUTTON PLATE.....	1	30978	890866-180
23	LABEL, DUAL DEADMAN BACK.....	1	30978	890867-180
24	LABEL, DUAL DEADMAN ALB FRONT.....	1	30978	890865-180

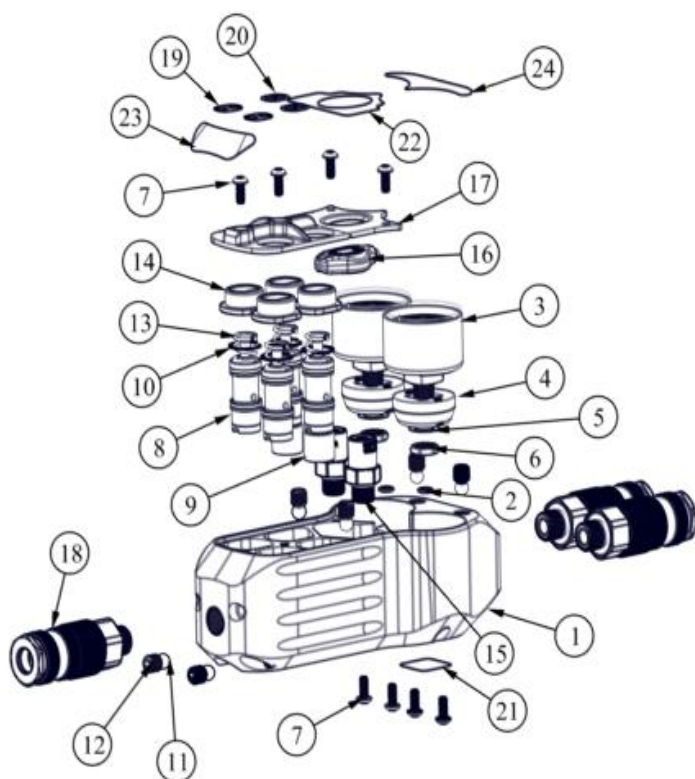


Figure 4-2. Dual “Deadman” 180 ALB Controller G3

4-5.3 **CGA G3 PRESSURE REGULATOR**

Item Number	Description	Quantity	CAGE	Part Number
1	BODY, REGULATOR G3, PRESET ALB.....	1	30978	895423
2	CARTRIDGE HOUSING, REG.....	1	30978	895413
3	SEAT, MAIN CARTR. REGULATOR.....	1	30978	895412
4	O-RING AS-010 (1/4 X .070) BN90.....	1	30978	895513
5	SPACER FOR CARTRIDGE.....	1	30978	895414
6	FILTER, SINTER, FOR REGULTR.....	1	30978	895415
7	NEEDLE, MAIN REG VALVE, CARTR.....	1	30978	895411
8	SPRING, NEEDLE VALVE.....	1	30978	895222
9	BALL, 5/32 440C GRADE 24.....	1	30978	891135
10	END CAP CARTRIDGE.....	1	30978	895416
11	O-RING AS-015 90BN (9/16X.070).....	1	30978	890252
12	PISTON, PRESET REG .....	1	30978	895317
13	O-RING AS-121 1-1/16X.103 BN70 .....	1	30978	895247
14	PIN, DISC GUIDE REG .....	1	30978	895325
15	DISC SPRNG 20X10.2X1MM L=1.55 .....	10	30978	895273
16	REGULATOR END CAP, PRESET G3.....	1	30978	895329
17	ADJUSTING SCR, PRESET .....	1	30978	895321
18	KNOB, ON/OFF REGULATOR G3 .....	1	30978	890498
19	SPRING PIN 3/32 X 5/16 S.S.....	1	30978	890935
20	O-RING AS-013 (7/16X.070) BN70.....	2	30978	550174
21	O-RING 5/16X.070 POLYURETH. 90 .....	2	30978	890489
22	Ø1.25 INT RETAINING RING SS.....	1	30978	895218
23	Ø1" POROUS MEDIA DISC.....	1	30978	796V48
24	Ø1" LD INT RET RING SS .....	1	30978	796V43
25	Ø1/4" BRASS BALL .....	2	30978	895419
26	5/16-24 X 5/16 SCH SET SCR SS.....	2	30978	890893
27	NIPPLE 5500PSI CGA 347 SHORT.....	1	30978	895334
28	NUT, 5500PSI CGA 347 SHORT .....	1	30978	895336
29	RET. CRESCENT RING 1/2" SHAFT.....	1	30978	015779
30	O-RING 1/4X.070 POLYURETHANE90.....	1	30978	550195
31	NIPPLE WITH 1/4 NPTM .....	1	30978	890681-180
32	VENT RELIEF VALVE, 250 PSI.....	1	30978	890250
33	LABEL,895401G3-180 QR CODE.....	1	30978	895401G3180Q
34	ROUND LABEL ON, GREEN G3 .....	1	30978	895ON
35	ROUND LABEL OFF, RED G3 .....	1	30978	895OFF
36	LABEL, ALB REG G3 180, PRESET.....	1	30978	895359L-180
37	LABEL BACK PRESET .....	1	30978	895401G3L1

4-5.3 **CGA G3 PRESSURE REGULATOR (Continued)**

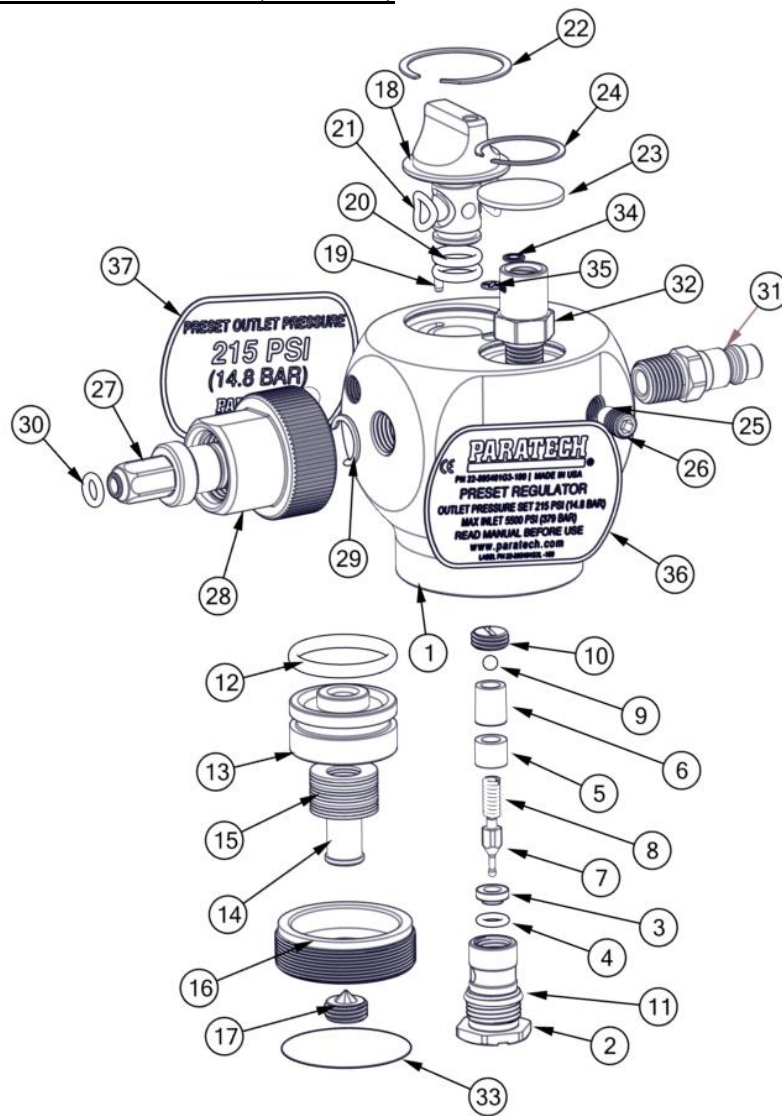


Figure 4-3 CGA G3 Pressure Regulator

4-5.4 **REGULATOR 12 ALB G3 PRESET DIN**

Item Number	Description	Quantity	CAGE	Part Number
1	BODY, REGULATOR G3, PRESET ALB.....	1	30978	895410
2	CARTRIDGE HOUSING, REG.....	1	30978	895413
3	SEAT, MAIN CARTR. REGULATOR.....	1	30978	895412
4	O-RING AS-010 (1/4 X .070) BN90.....	1	30978	895513
5	SPACER FOR CARTRIDGE.....	1	30978	895414
6	FILTER, SINTER, FOR REGULTR.....	1	30978	895415
7	NEEDLE, MAIN REG VALVE, CARTR.....	1	30978	895411
8	SPRING, NEEDLE VALVE.....	1	30978	895222
9	BALL, 5/32 440C GRADE 24.....	1	30978	891135
10	END CAP CARTRIDGE.....	1	30978	895416
11	O-RING AS-015 90BN (9/16X.070).....	1	30978	890252
12	PISTON, PRESET REG .....	1	30978	895317
13	O-RING AS-121 1-1/16X.103 BN70 .....	1	30978	895247
14	PIN, DISC GUIDE REG .....	1	30978	895325
15	DISC SPRNG 20X10.2X1MM L=1.55 .....	10	30978	895273
16	REGULATOR END CAP, PRESET G3.....	1	30978	895329
17	ADJUSTING SCR, PRESET .....	1	30978	895321
18	KNOB, ON/OFF REGULATOR G3 .....	1	30978	890498
19	SPRING PIN 3/32 X 5/16 S.S.....	1	30978	890935
20	O-RING AS-013 (7/16X.070) BN70.....	2	30978	550174
21	O-RING 5/16X.070 POLYURETH. 90 .....	2	30978	890489
22	Ø1.25 INT RETAINING RING SS.....	1	30978	895218
23	Ø1" POROUS MEDIA DISC.....	1	30978	796V48
24	Ø1" LD INT RET RING SS .....	1	30978	796V43
25	Ø1/4" BRASS BALL .....	2	30978	895419
26	5/16-24 X 5/16 SCH SET SCR SS.....	2	30978	890893
27	GAUGE 1.5" 6000 PSI 1/8 BACK MT.....	1	30978	890596
28	GAUGE HOUSING REGULATOR G3 .....	1	30978	890957
29	M4-.7 X 10 BTNHD TORX SS.....	2	30978	670378
30	NIPPLE WITH 1/4 NPT M .....	1	30978	890681-180
31	VENT RELIEF VALVE, 250 PSI .....	1	30978	890250
32	NIPPLE - DIN .....	1	30978	895367
33	NUT, 5500 PSI DIN .....	1	30978	895353
34	O-RING AS-111 7/16X.103 BN70 .....	1	30978	891154
35	180 LABEL, Ø1.5" PLATE COVER .....	1	30978	895401DG312Q
36	ROUND LABEL ON, GREEN G3 .....	1	30978	895ON
37	ROUND LABEL OFF, RED G3.....	1	30978	895OFF
38	LABEL, ALB REG DG3 12, PRESET.....	1	30978	895359L-12
39	LABEL, INLET PRESSURE 12 .....	1	30978	895101

**DIN G3 PRESSURE REGULATOR (Continued)**

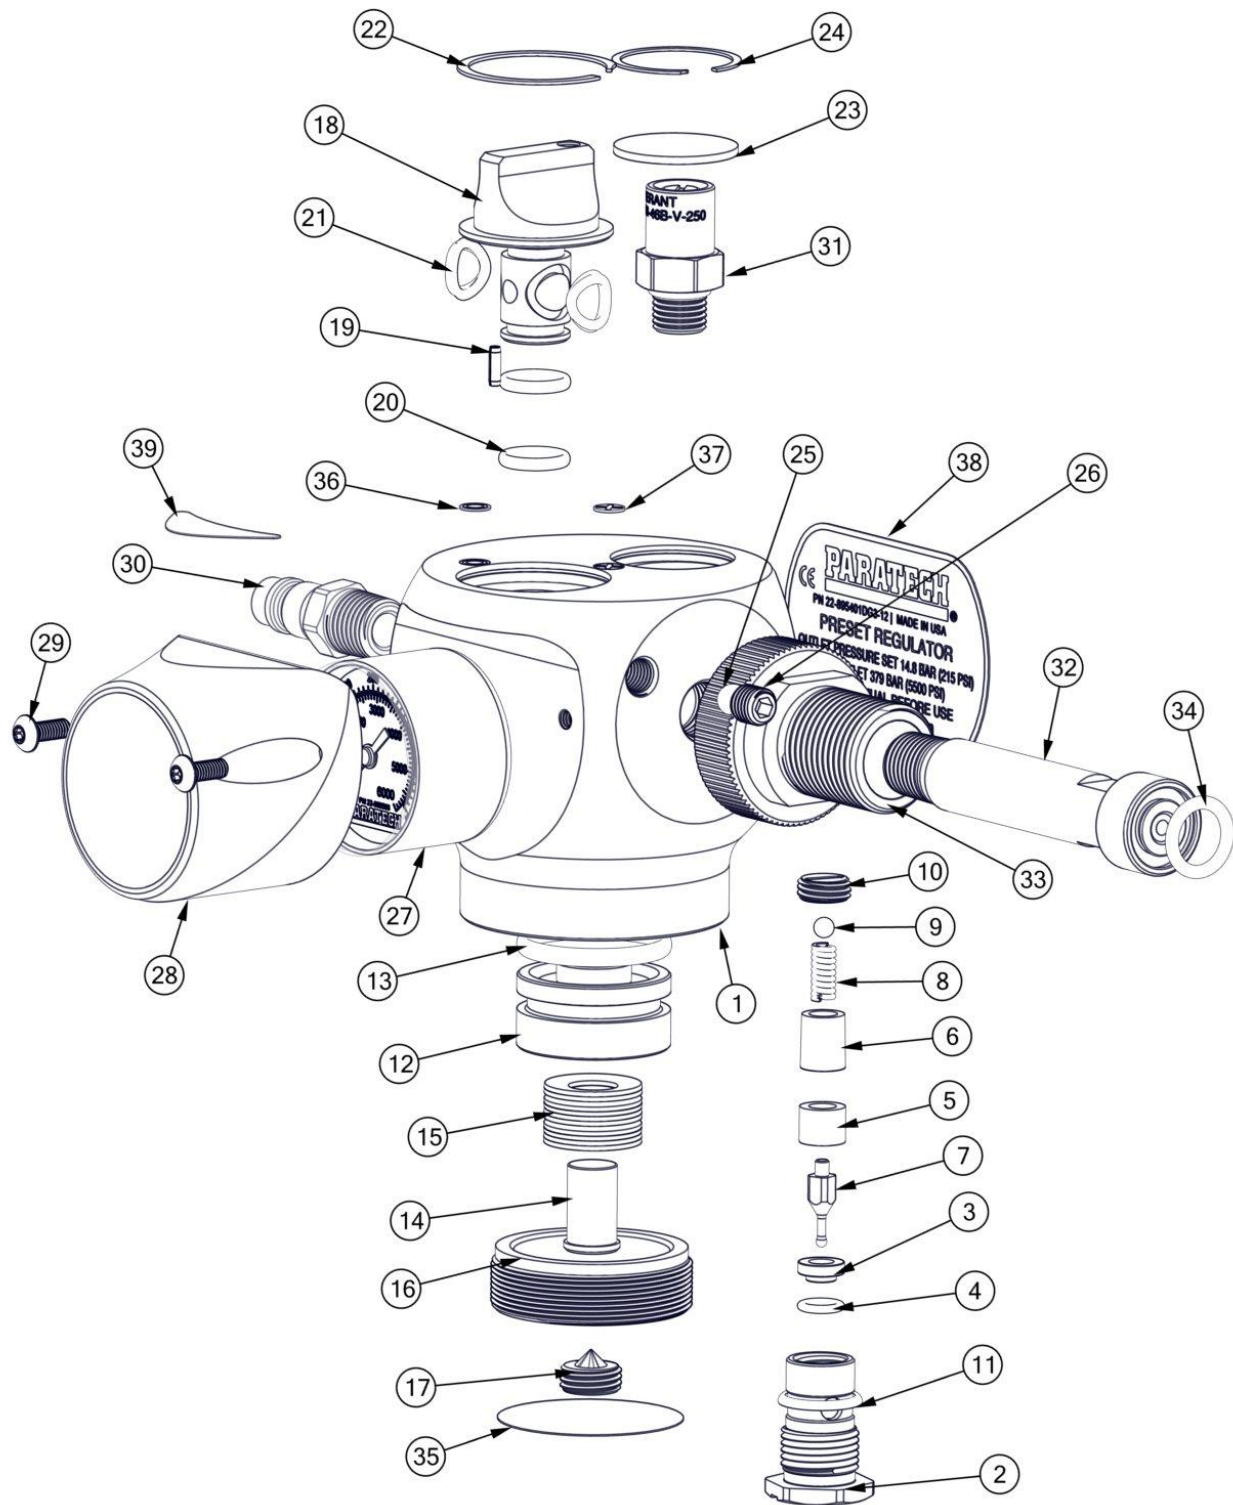


Figure 4-4 DIN G3 Pressure Regulator



## MAXIFORCE G3 WARRANTY

Each **MAXIFORCE G3** or component thereof, manufactured by Paratech Incorporated, has been thoroughly inspected and properly adjusted before shipment to insure the highest quality and the greatest possible reliability.

Paratech Incorporated (hereinafter referred to as "Seller") hereby warrants the **MAXIFORCE G3** or component thereof to the original retail buyer only against defects in material and workmanship under normal use and service for a period of 3-years from the date of purchase. This warranty shall constitute the sole warranty of the Seller with respect to the **MAXIFORCE G3** or component thereof. **THE SELLER HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.** The Seller neither assumes nor authorizes any other person to assume for it any other obligations or liabilities in connection with the sale or use of this product.

Should there be any defects in the material or workmanship of the **MAXIFORCE G3**, buyer should return the defective product to the factory for inspection with shipping prepaid, within 3-years of the date of purchase, and a copy of original receipt. If inspection shows that the **MAXIFORCE G3** or a component thereof is defective and that such defects were not caused by negligence, misuse, accident or unauthorized service, the product sold hereunder will be repaired or replaced at the option of the Seller, without charge, FOB at the factory, Frankfort, Illinois.

**THIS REMEDY SHALL BE THE EXCLUSIVE REMEDY FOR BREACH OF WARRANTY WITH RESPECT TO THE MAXIFORCE G3 OR COMPONENTS THEREOF. THE SELLER SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY WITH RESPECT TO THE MAXIFORCE G3 AND COMPONENTS THEREOF FROM ANY DELAY IN THE PERFORMANCE OF THE REMEDY HEREUNDER.**

# PARATECH®

PARATECH INCORPORATED  
P.O. BOX 1000  
1025 LAMBRECHT ROAD  
FRANKFORT, ILLINOIS 60423-7000

TELEPHONE (815) 469-3911  
FAX (815) 469-7748